

BR-6428nS V2
BR-6428nC

User Manual

09-2013 / v1.1

CONTENTS

I. Product Information	1
I-1. Package Contents	1
I-2. LED Status	2
I-3. Back Panel	3
I-4. Safety Information	4
II. Installation	5
II-1. Wi-Fi Router Mode	8
II-2. Access Point Mode	12
II-3. Range Extender Mode	16
II-4. WPS Setup	22
II-5. Reset to Factory Default Settings	22
III. Browser Based Configuration Interface	23
III-1. Login	23
III-2. Save Settings	25
III-3. Main Menu	26
III-3-1. Status	27
III-3-2. Setup Wizard	28
III-3-3. Internet	30
III-3-3-1. WAN Setup	30
III-3-3-1-1. Dynamic IP	30
III-3-3-1-2. Static IP	31
III-3-3-1-3. PPPoE	33
III-3-3-1-4. PPTP	35
III-3-3-1-5. L2TP	37
III-3-3-1-6. WISP	39
III-3-3-2. DDNS	40
III-3-4. LAN	42
III-3-5. 2.4GHz Wireless	45
III-3-5-1. Basic	45
III-3-5-1-1. Disable	46
III-3-5-1-2. WEP	47
III-3-5-1-3. WPA Pre-Shared Key	48
III-3-5-1-4. WPA Radius	49
III-3-5-2. Guest	50
III-3-5-3. WPS	52
III-3-5-4. Access Control	53
III-3-5-5. Schedule	55

III-3-6.	Firewall.....	57
III-3-6-1.	URL Blocking	57
III-3-6-2.	Access Control.....	59
III-3-6-3.	DMZ.....	63
III-3-6-4.	DoS.....	64
III-3-7.	QoS.....	66
III-3-7-1.	QoS.....	66
III-3-8.	Advanced	70
III-3-8-1.	Static Routing.....	70
III-3-8-2.	Port Forwarding	71
III-3-8-3.	Virtual Server	73
III-3-8-4.	2.4GHz Wireless	74
III-3-8-5.	ALG.....	75
III-3-8-6.	IGMP	76
III-3-8-7.	UPnP.....	76
III-3-9.	Administration	77
III-3-9-1.	Time Zone	77
III-3-9-2.	Password.....	78
III-3-9-3.	Remote Access.....	79
III-3-9-4.	Backup/Restore	80
III-3-9-5.	Upgrade	80
III-3-9-6.	Restart.....	81
III-3-9-7.	Logs	81
III-3-9-8.	Active DHCP Client.....	82
III-3-9-9.	Statistics.....	82

IV. Appendix..... 83


IV-1.	Configuring your IP address.....	83
IV-1-1.	How to check that your computer uses a dynamic IP address	84
IV-1-1-1.	Windows XP	84
IV-1-1-2.	Windows Vista	86
IV-1-1-3.	Windows 7	88
IV-1-1-4.	Windows 8	91
IV-1-1-5.	Mac OS.....	95
IV-1-2.	How to modify the IP address of your computer	97
IV-1-2-1.	Windows XP	97
IV-1-2-2.	Windows Vista	99
IV-1-2-3.	Windows 7	100
IV-1-2-4.	Windows 8	103
IV-1-2-5.	Mac	107
IV-1-3.	How to Find Your Network Security Key	110
IV-1-3-1.	Windows 7 & Vista.....	110

IV-1-3-2.	Mac	112
IV-1-4.	How to Find Your Router's IP Address.....	115
IV-1-4-1.	Windows XP, Vista & 7.....	115
IV-1-4-2.	Windows 8	117
IV-1-4-3.	Mac	120
IV-2.	Connecting to a Wi-Fi network.....	122
IV-3.	Troubleshooting.....	124
IV-4.	Glossary.....	128

I. Product Information


I-1. Package Contents

Before you start using this product, please check if there is anything missing in the package, and contact your dealer to claim the missing item(s):

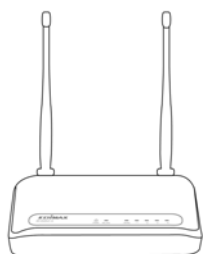


BR-6428nS V2
(5dBi Antenna x 2)


or

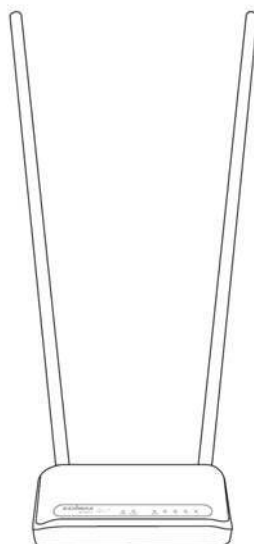

BR-6428nC
(9dBi Antenna x 2)

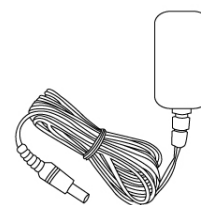

Power Adapter

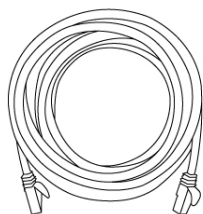

Ethernet Cable





Quick Installation Guide




CD-ROM

I-2. LED Status

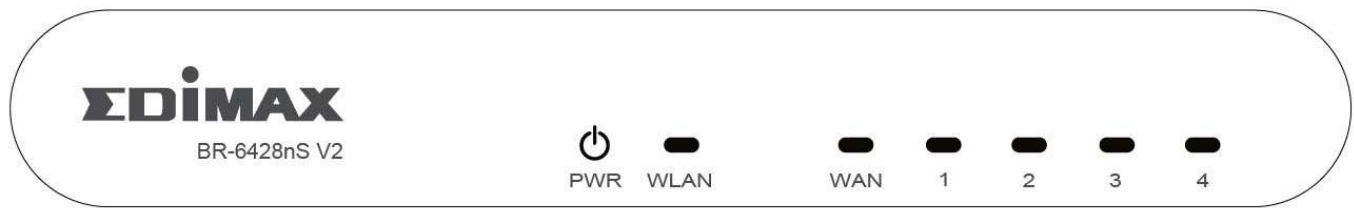

LED	LED Status	Description
PWR 	On	Device is on.
	Off	Device is off.
WLAN	On	Wi-Fi is active (or WPS is active).
	Flashing	Wi-Fi activity (transferring data).
	Off	Wi-Fi is not active.
WAN	On	WAN port connected.
	Flashing	WAN activity.
	Off	WAN port not connected.
LAN (1-4)	On	Ethernet port is connected to a network device.
	Flashing	LAN activity.
	Off	Ethernet port is not connected to a network device.

I-3. Back Panel

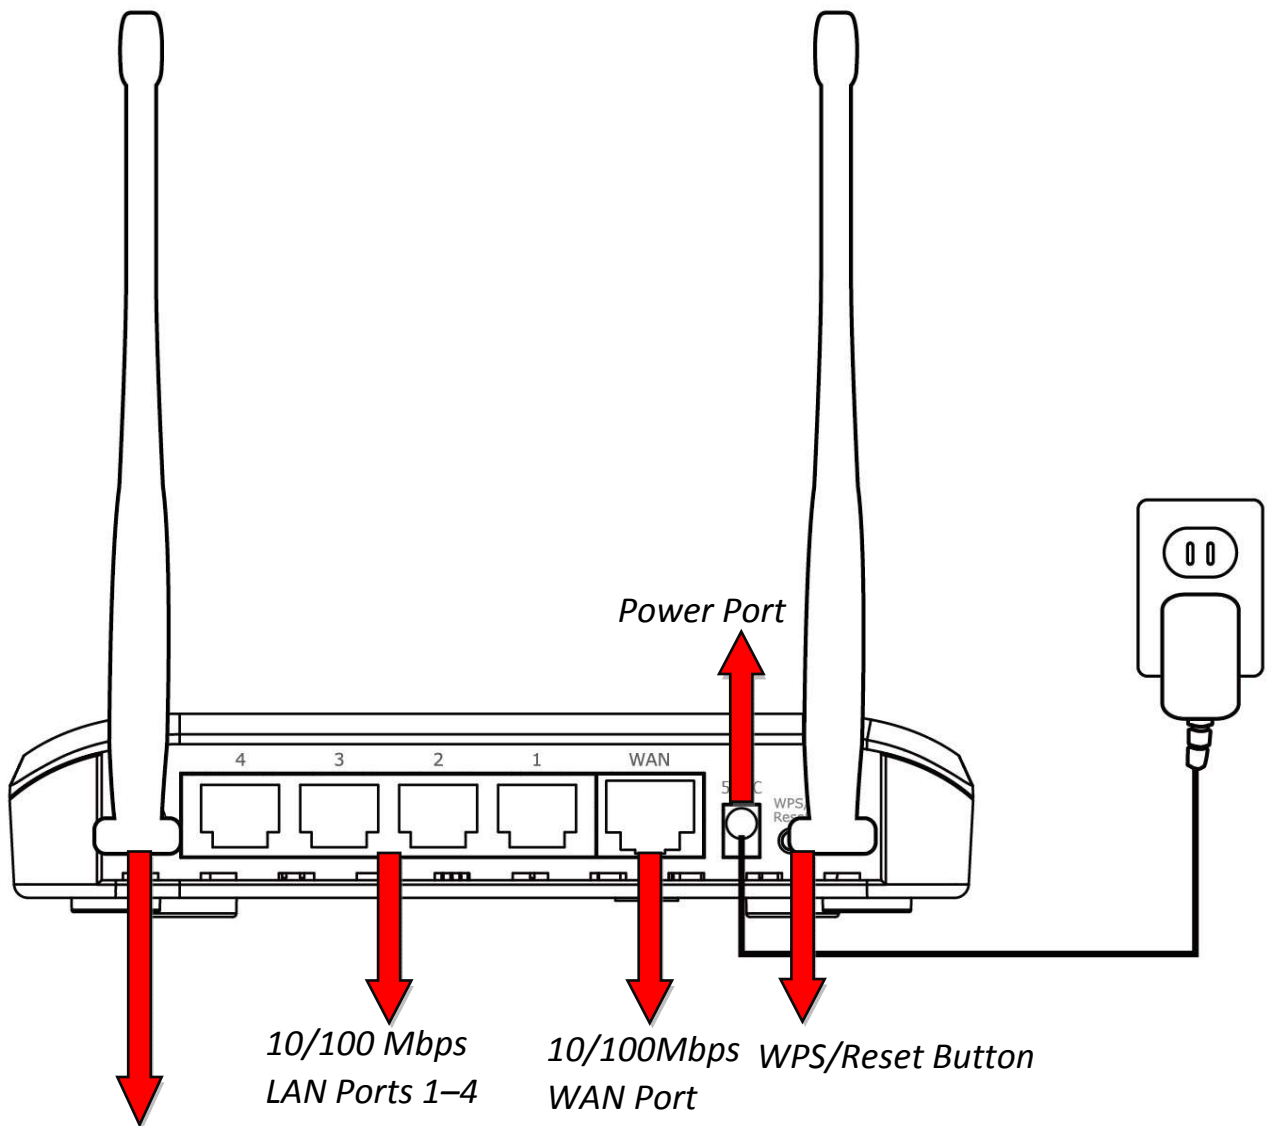

BR 6428nS V2: Fixed 5dBi Antenna x 2

BR 6428nC: Detachable 9dBi Antenna x 2


I-4. Safety Information

In order to ensure the safe operation of the device and its users, please read and act in accordance with the following safety instructions.


1. The device is designed for indoor use only; do not place it outdoors.
2. Do not place the device in or near hot/humid places, such as a kitchen or bathroom.
3. Do not pull any connected cable with force; carefully disconnect it from the BR-6428nS V2/nC.
4. Handle the device with care. Accidental damage will void the warranty of the device.
5. The device contains small parts which are a danger to small children under 3 years old. Please keep the device out of reach of children.
6. Do not place the device on paper, cloth, or other flammable materials. The device may become hot during use.
7. There are no user-serviceable parts inside the device. If you experience problems with the device, please contact your dealer of purchase and ask for help.
8. The device is an electrical device and as such, if it becomes wet for any reason, do not attempt to touch it without switching the power supply off. Contact an experienced electrical technician for further help.

II. Installation

1. Plug the included power adapter into the device's 5V DC power port and the other end into an electrical socket.

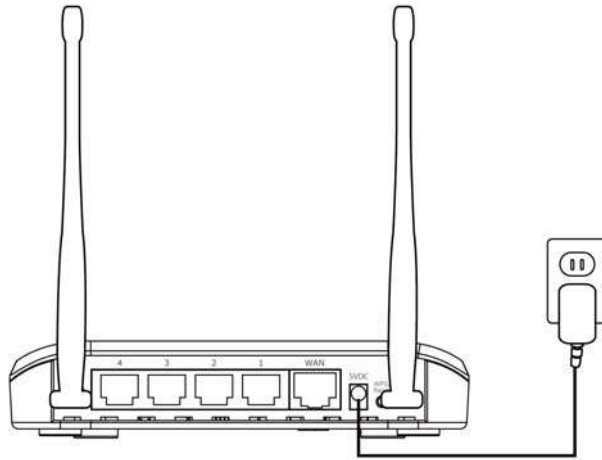

2. Ensure that the power LED is lit. If not, the device is not properly connected.

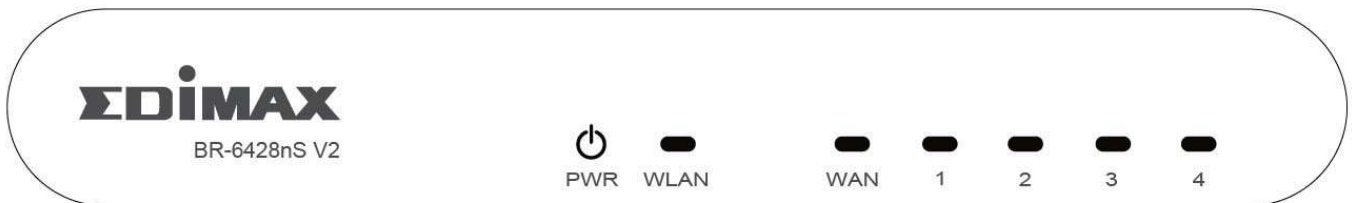

3. Use a Wi-Fi device (e.g. computer, tablet, smartphone) to search for a Wi-Fi network with the SSID “edimax.setup” and connect to it.


 ***iOS 4 or Android 4 and above are required for setup on a smartphone or tablet.***

4. Open a web browser and if you do not automatically arrive at the “Get Started” screen shown below, enter the URL ***<http://edimax.setup>*** and click “**Get Started**” to begin the setup process.



⚠ If you cannot access <http://edimax.setup>, please make sure your computer is set to use a dynamic IP address. Refer to [IV-1. Configuring your IP address](#) for more information.

5. Select the mode for your BR-6428nS V2/nC and click **“Next”** to continue.

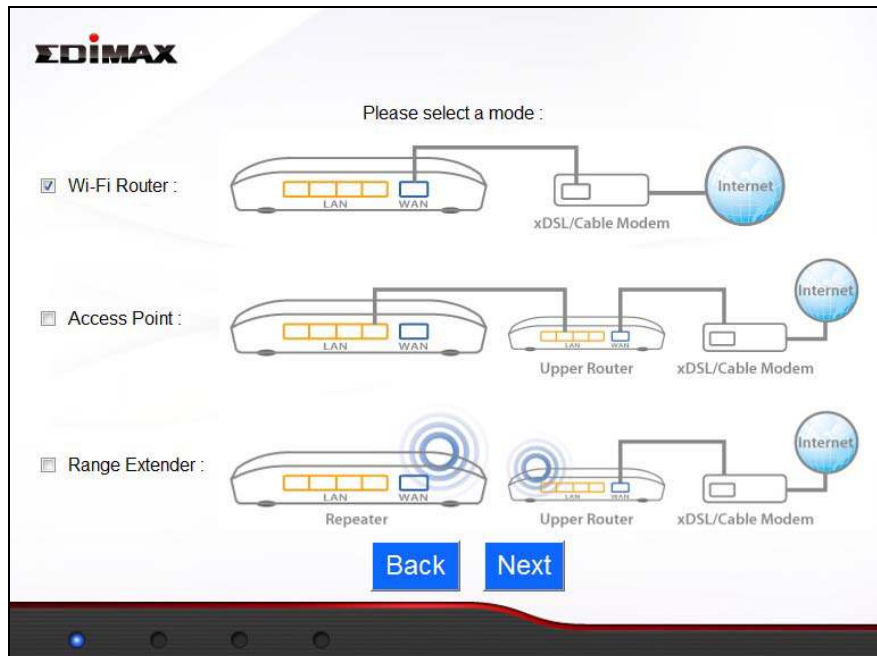


Wi-Fi Router	<i>The device connects to your modem and enables Internet (wireless and Ethernet) access on your network devices.</i>
Access Point	<i>The device connects to an existing router via Ethernet cable and provides Internet (wireless</i>

	<i>and Ethernet) access for your network devices.</i>
Range Extender	<i>The device connects wirelessly to your existing network and repeats the wireless signal.</i>

Follow the appropriate instructions for your operating mode:

II-1. Wi-Fi Router Mode


1. Connect the **blue** WAN port of your BR-6428nS V2/nC to the LAN port of your modem using an Ethernet cable, and then click “Next”.

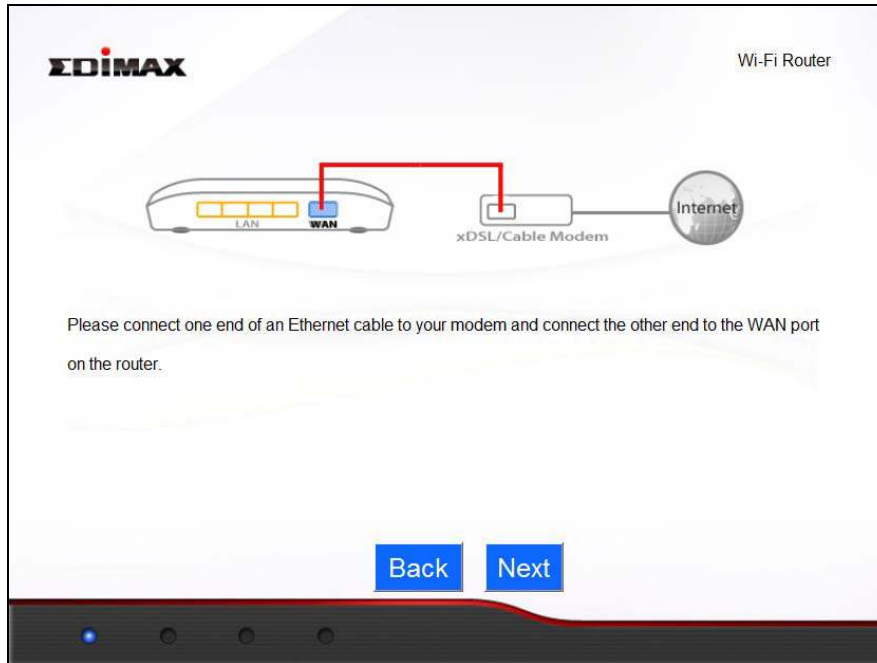


2. Please wait a moment while the BR-6428nS V2/nC tests the connection.




3. Click “Next” to continue and configure the device’s wireless network.

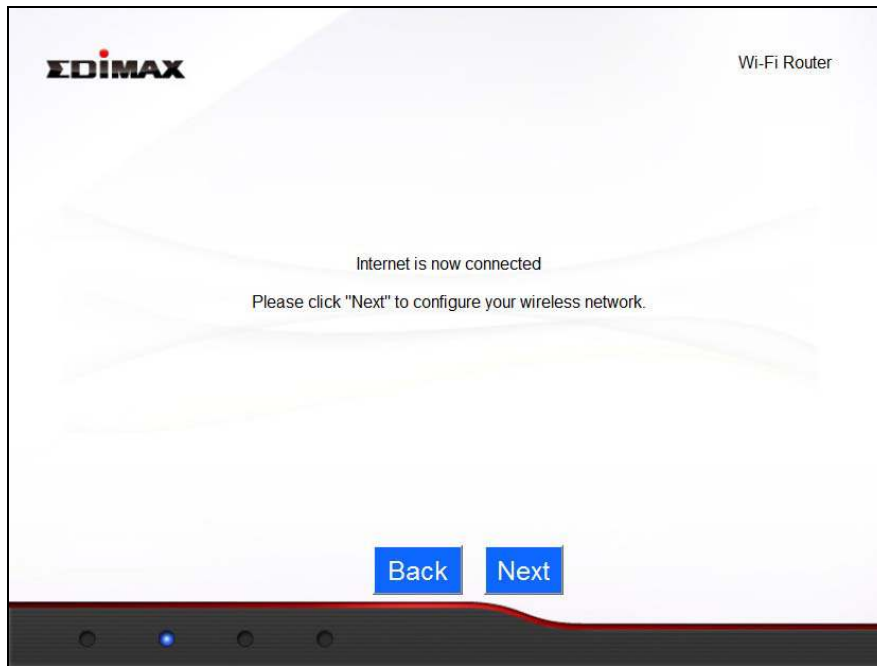


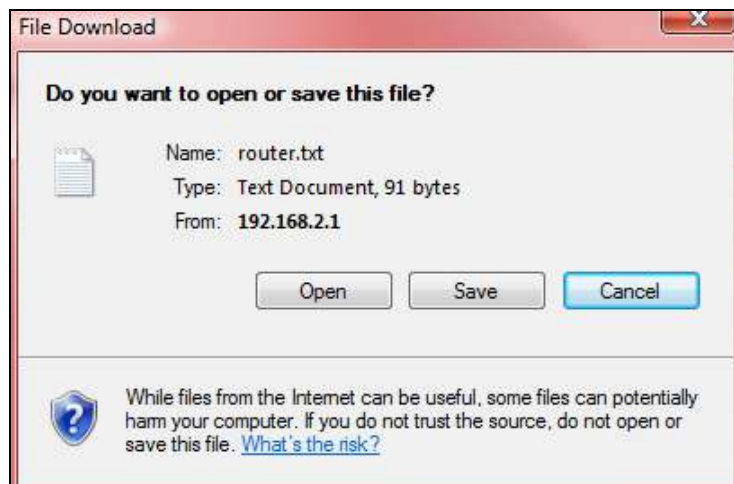
4. Enter a name and password for your wireless network, then click “Next” to continue.

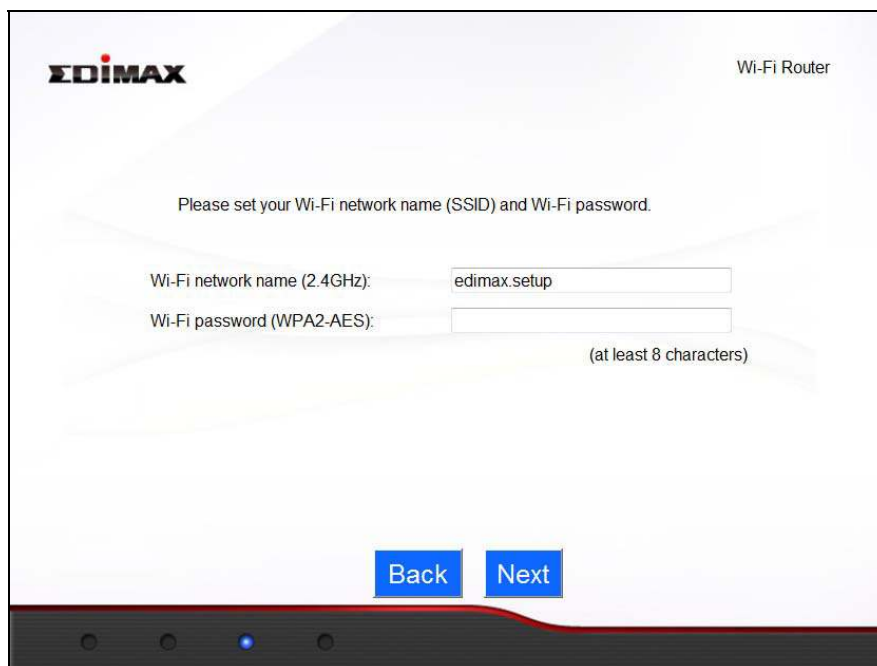


5. A summary of your configuration will be displayed, as shown below. Check that all of the details are correct and then click “Next” to proceed.

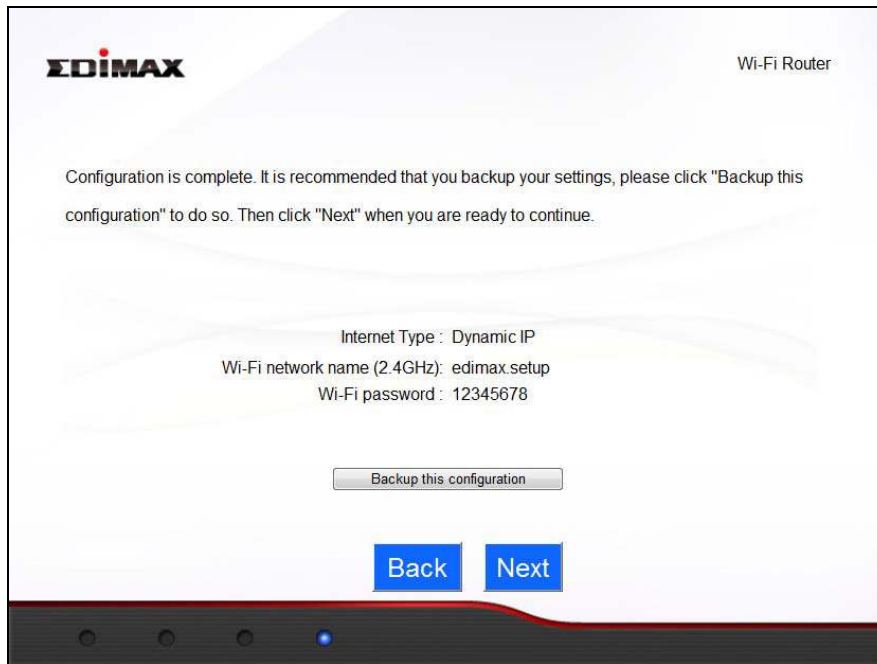


 ***If you wish to backup the device’s settings, click “Backup this configuration” to open a new window and save your current configuration to a router.txt file.***



6. Please wait a moment until the device is ready.

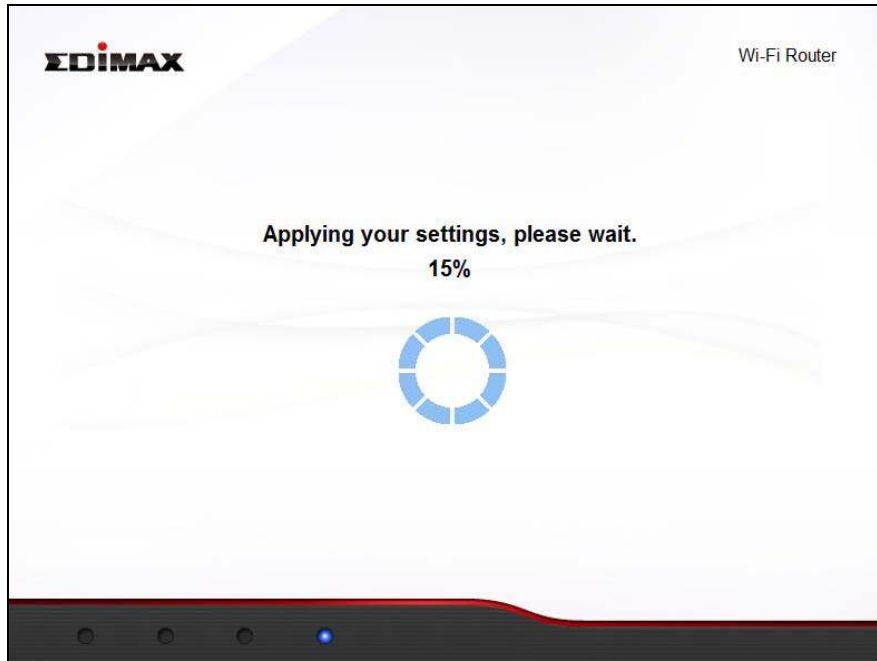


7. A final congratulations screen will indicate that setup is complete. ***Please close the browser window.***

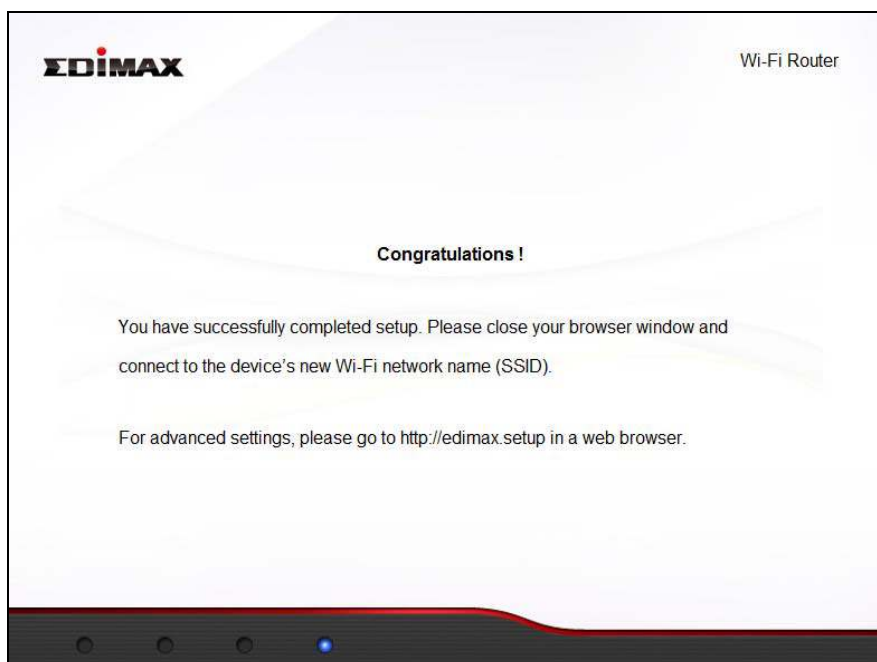


8. The BR-6428nS V2/nC is working and ready for use. You can now connect to the device's new SSID. Please refer to [IV-2. Connecting to a Wi-Fi network](#) if you require more guidance.


II-2. Access Point Mode

1. Connect the **yellow** LAN port of your BR-6428nS V2/nC to the LAN port of your existing router using an Ethernet cable, then click “Next”.

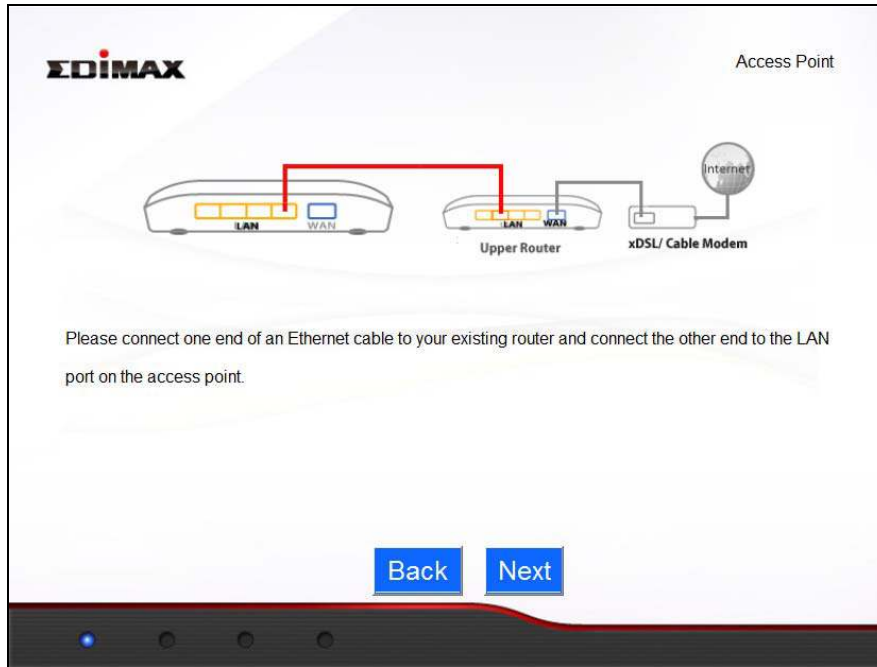


2. Select “Obtain an IP address automatically” or “Use the following IP address” for your BR-6428nS V2/nC. If you are using a static IP, enter the IP address, subnet mask and default gateway. Click “Next” to proceed to the next step.

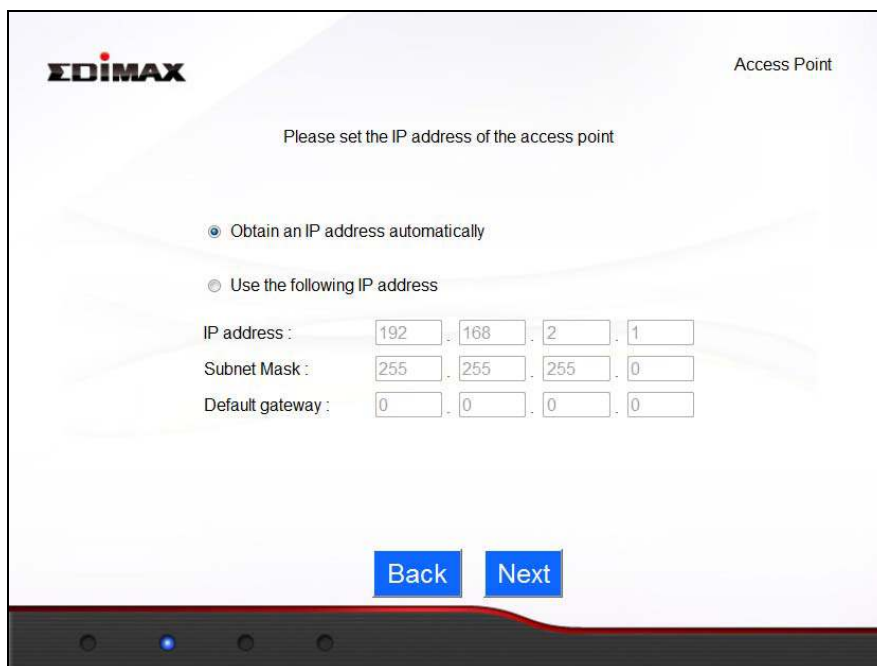


 **“Obtain an IP address automatically” is the recommended setting for most users. For more guidance on static IP addresses, please refer to [IV-1. Configuring your IP address.](#)**

3. Enter a name and password for your wireless network, then click “Next” to continue.

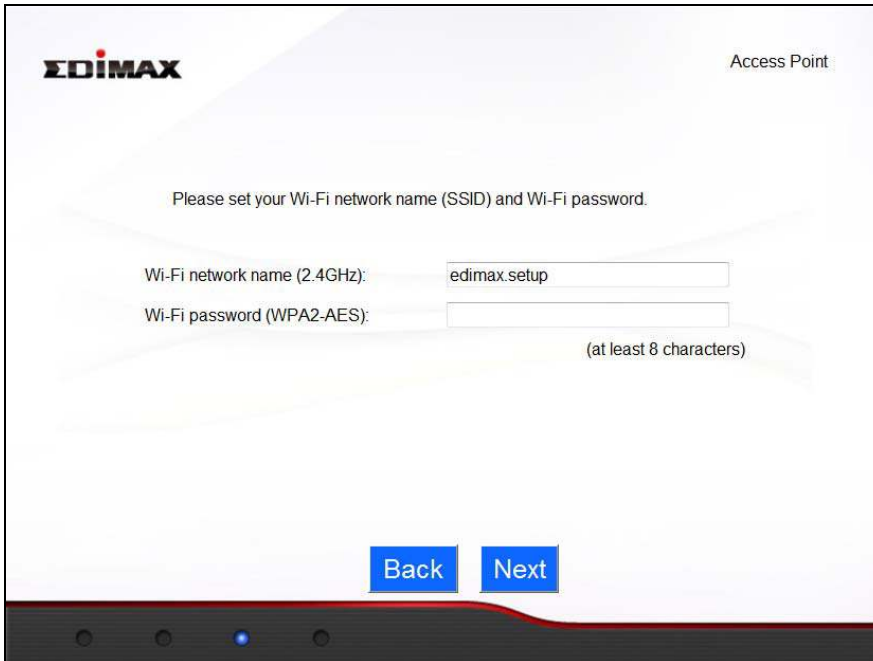


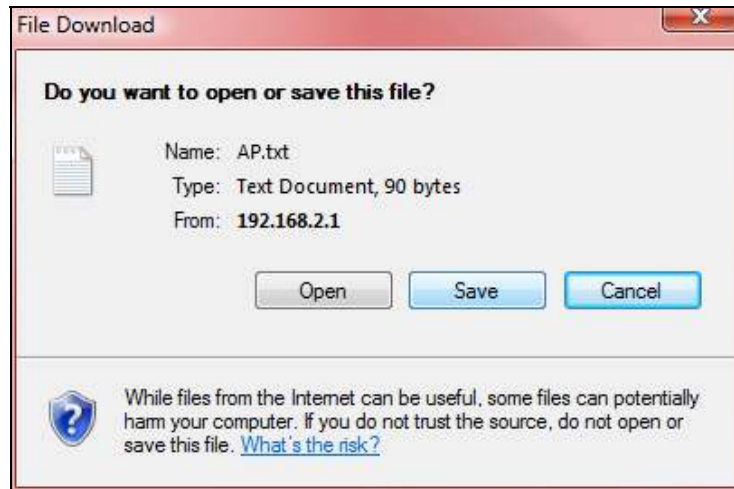
The screenshot shows the EDIMAX configuration interface. At the top left is the EDIMAX logo, and at the top right is the text "Access Point". The main heading reads "Please set your Wi-Fi network name (SSID) and Wi-Fi password." Below this, there are two input fields: "Wi-Fi network name (2.4GHz):" with the value "edimax.setup" and "Wi-Fi password (WPA2-AES):" with a blank field. A note "(at least 8 characters)" is positioned below the password field. At the bottom, there are two blue buttons labeled "Back" and "Next".

4. A summary of your configuration will be displayed, as shown below. Check that all of the details are correct and then click “Next” to proceed.

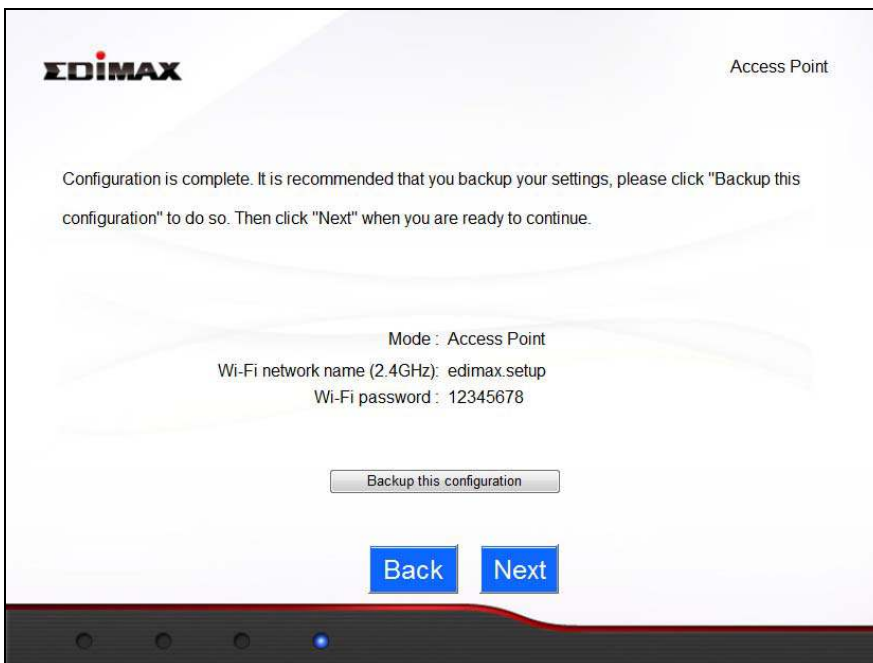


The screenshot shows the EDIMAX configuration interface displaying a summary of the configuration. At the top left is the EDIMAX logo, and at the top right is the text "Access Point". The main heading reads "Configuration is complete. It is recommended that you backup your settings, please click "Backup this configuration" to do so. Then click "Next" when you are ready to continue." Below this, the configuration details are listed: "Mode : Access Point", "Wi-Fi network name (2.4GHz): edimax.setup", and "Wi-Fi password : 12345678". A button labeled "Backup this configuration" is positioned below the details. At the bottom, there are two blue buttons labeled "Back" and "Next".


-  **If you wish to backup the device's settings, click "Backup this configuration" to open a new window and save your current configuration to a AP.txt file.**



- 5.** Please wait a moment until the BR-6428nS V2/nC is ready.

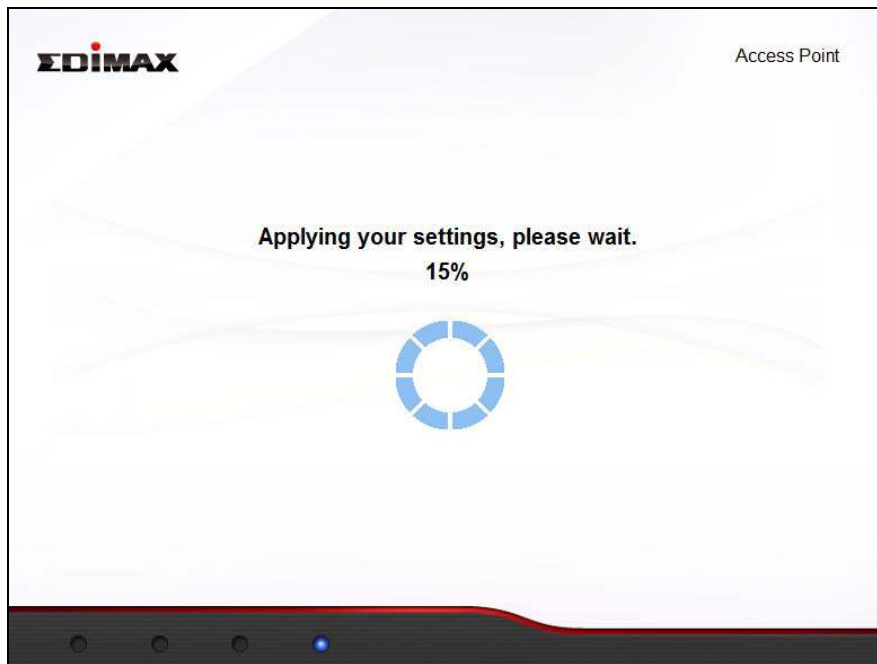


- 6.** A final congratulations screen will indicate that setup is complete. **Please close the browser window.**

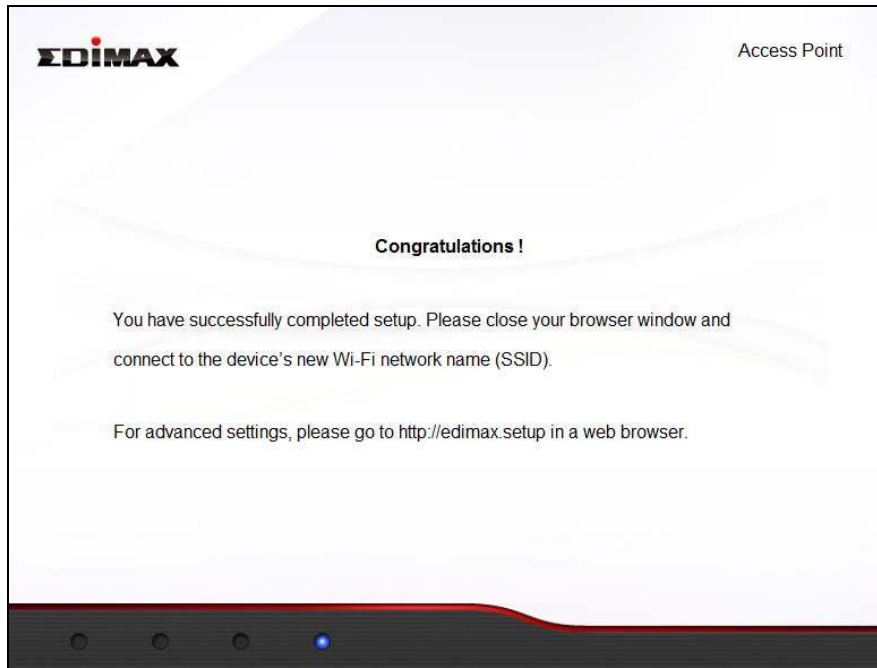

7. The BR-6428nS V2/nC is working and ready for use. You can now connect to the device's new SSID. Please refer to [IV-2. Connecting to a Wi-Fi network](#) if you require more guidance.


II-3. Range Extender Mode


1. Please ensure your BR-6428nS V2/nC is within Wi-Fi range of your existing wireless router. Click “Next” to continue.

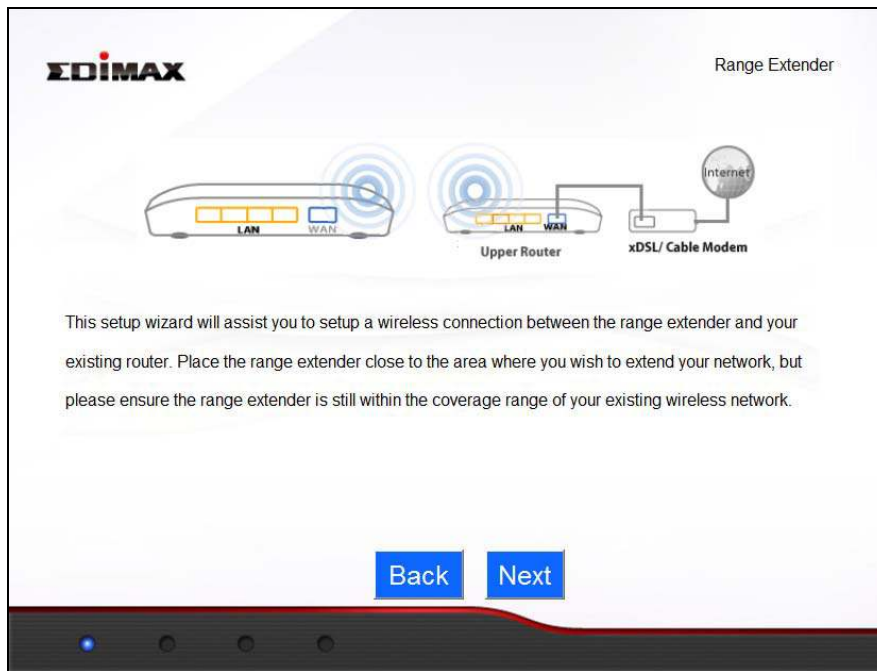



2. The “Wireless Site Survey” page displays all available wireless networks within range. Select the Wi-Fi network name (SSID) which you wish to connect to and enter a “Device SSID” (BR-6428nS V2/nC’s SSID) and “Security Key” (existing SSID’s password) if required. Click “Next” to continue.


 ***If the Wi-Fi network you wish to connect to does not appear, try clicking “Refresh”.***

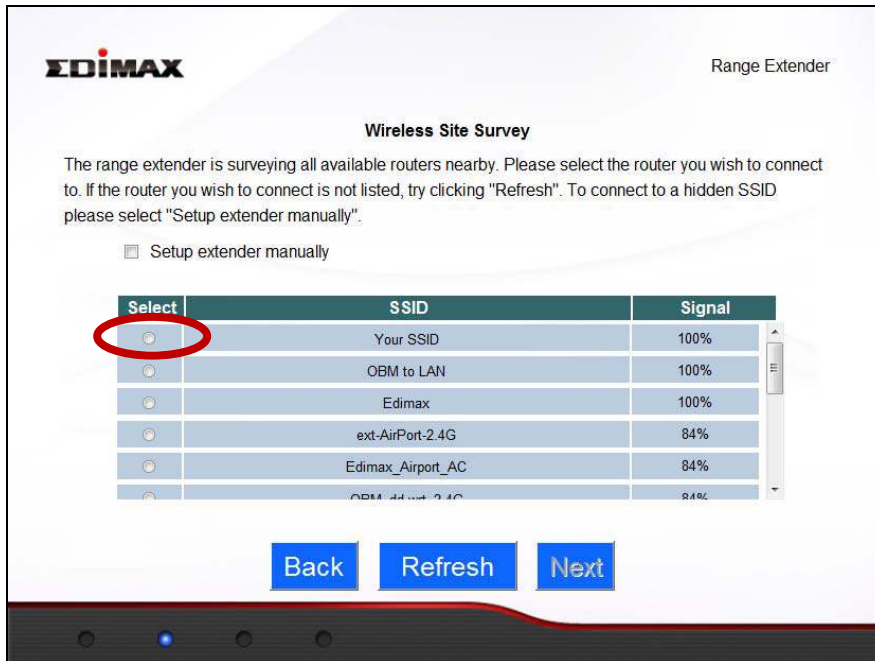

 **In Range Extender mode, the BR-6428nS V2/nC's default SSID is your existing router/access point's SSID + _2EX. For example if your router's SSID is "Your SSID" then the BR-6428nS V2/nC's SSID will be "Your SSID_2EX". You can change the BR-6428nS V2/nC'S SSID in the "Device SSID" field.**

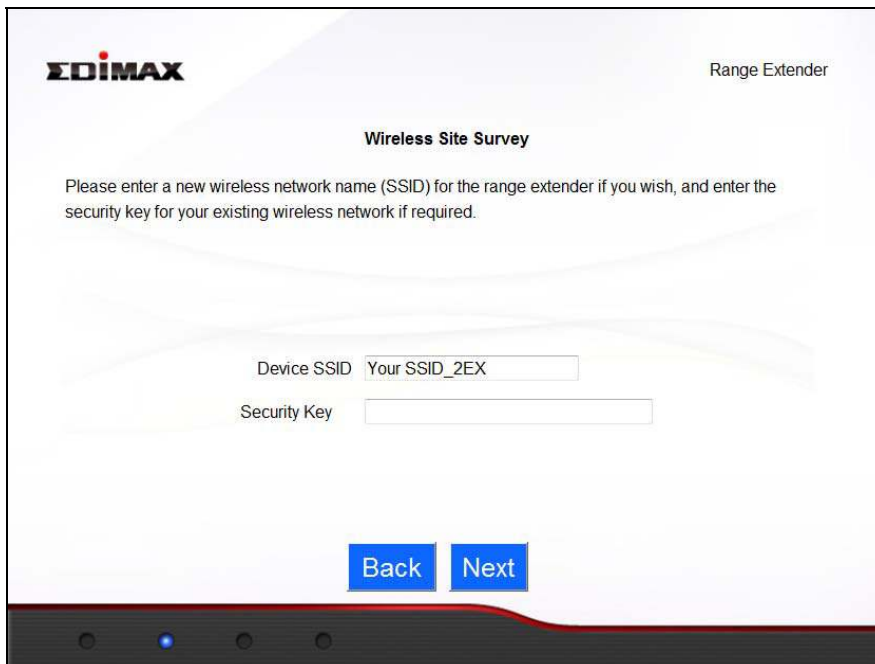



 **To connect to a hidden SSID, check the "Setup extender manually" box and enter the SSID, device SSID and encryption information.**

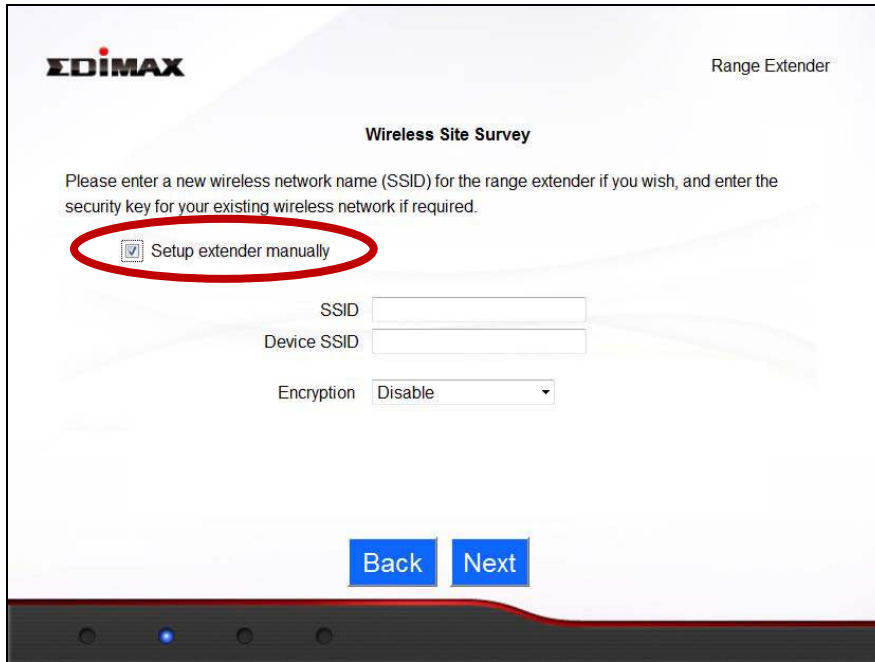


SSID	Enter the SSID (network name) of your existing, hidden network.
Device SSID	Enter an SSID for the BR-6428nS V2/nC or leave it blank to use a default which consists of your existing router's SSID (above) + "_2EX".
Encryption	Enter the encryption information for your existing, hidden network.

3. Please wait while the BR-6428nS V2/nC tests the connection.

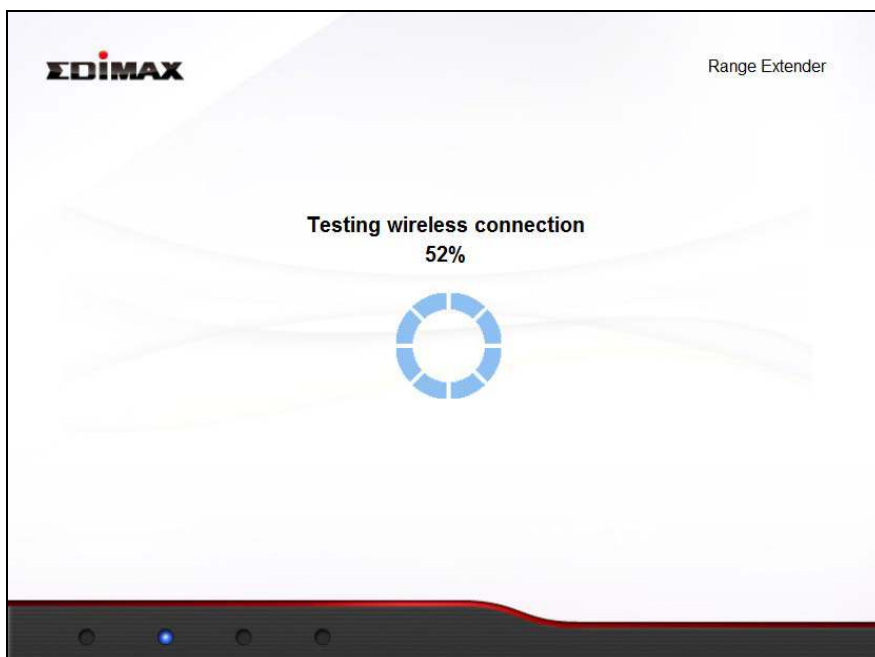


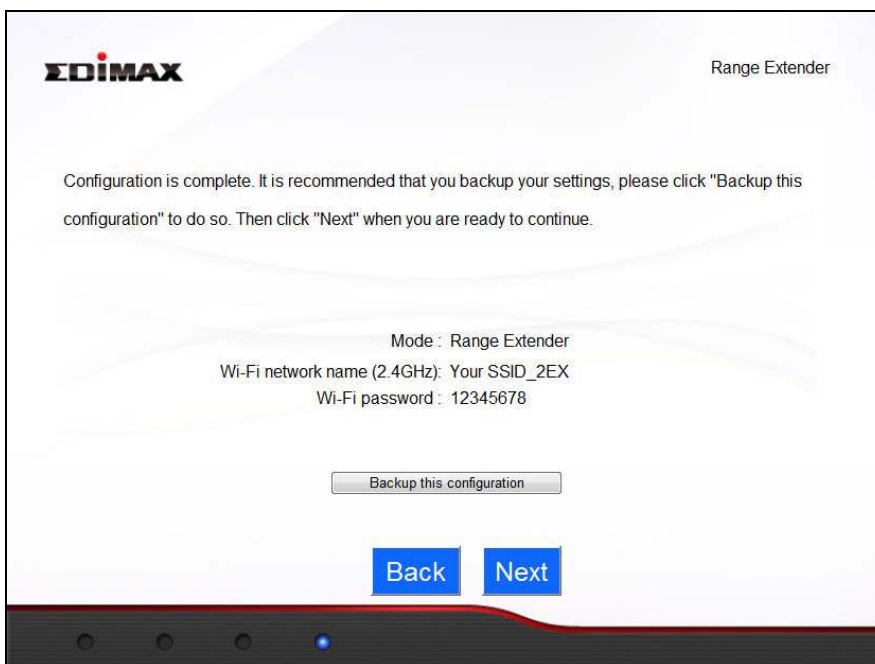
 **If the BR-6428nS V2/nC cannot obtain an IP address (below) from your existing router/access point then click the “Static IP” button to assign an IP address to the BR-6428nS V2/nC. For more guidance on static IP addresses, please refer to [IV-1. Configuring your IP address](#).**

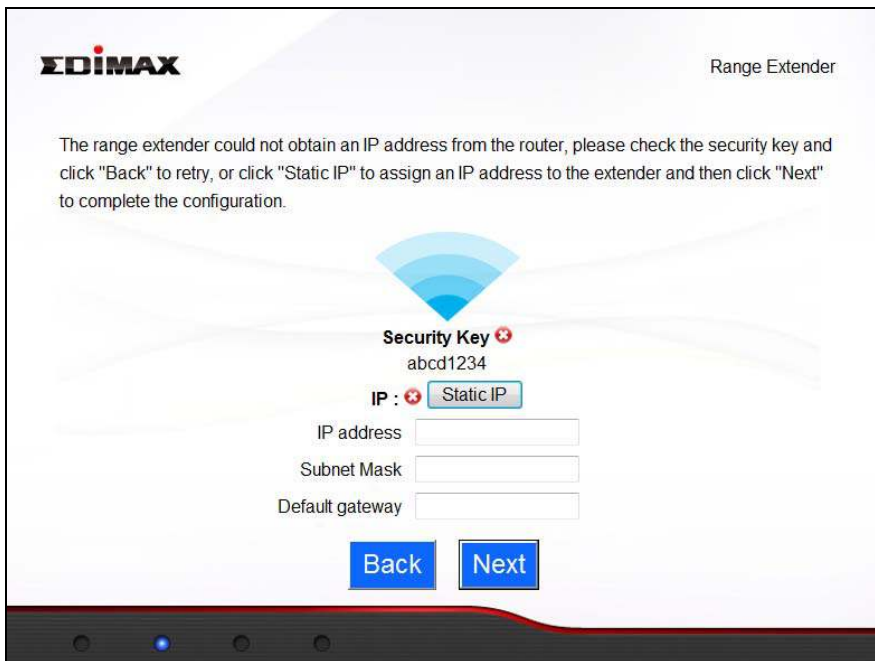


The screenshot shows the EDIMAX Range Extender configuration interface. At the top left is the EDIMAX logo, and at the top right is the text 'Range Extender'. Below the logo, a message states: 'The range extender could not obtain an IP address from the router, please check the security key and click "Back" to retry, or click "Static IP" to assign an IP address to the extender and then click "Next" to complete the configuration.' In the center, there is a Wi-Fi signal icon. Below it, the 'Security Key' is set to 'abcd1234'. The 'IP' section has a dropdown menu currently set to 'Static IP'. Below this are three input fields for 'IP address', 'Subnet Mask', and 'Default gateway'. At the bottom of the form are two blue buttons: 'Back' and 'Next'.


- 4.** A summary of your configuration will be displayed, as shown below. Check that all of the details are correct and then click “Next” to proceed.

 **The device will use the same wireless password/security key as the existing wireless network.**




The screenshot shows the EDIMAX Range Extender configuration interface displaying a configuration summary. At the top left is the EDIMAX logo, and at the top right is the text 'Range Extender'. Below the logo, a message states: 'Configuration is complete. It is recommended that you backup your settings, please click "Backup this configuration" to do so. Then click "Next" when you are ready to continue.' In the center, the following details are listed: 'Mode : Range Extender', 'Wi-Fi network name (2.4GHz): Your SSID_2EX', and 'Wi-Fi password : 12345678'. Below this information is a button labeled 'Backup this configuration'. At the bottom of the form are two blue buttons: 'Back' and 'Next'.


-  **If you wish to backup the BR-6428nS V2/nC's settings, click "Backup this configuration" to open a new window and save your current configuration to a "range_extender.txt" file.**

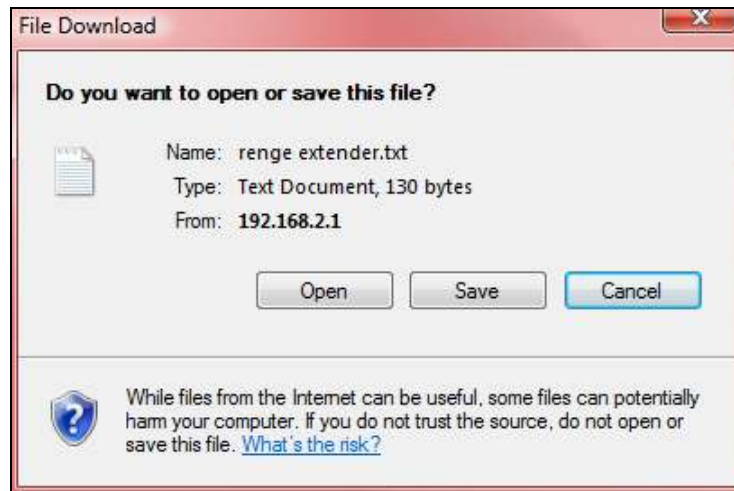

- 5.** Please wait a moment until the BR-6428nS V2/nC is ready.

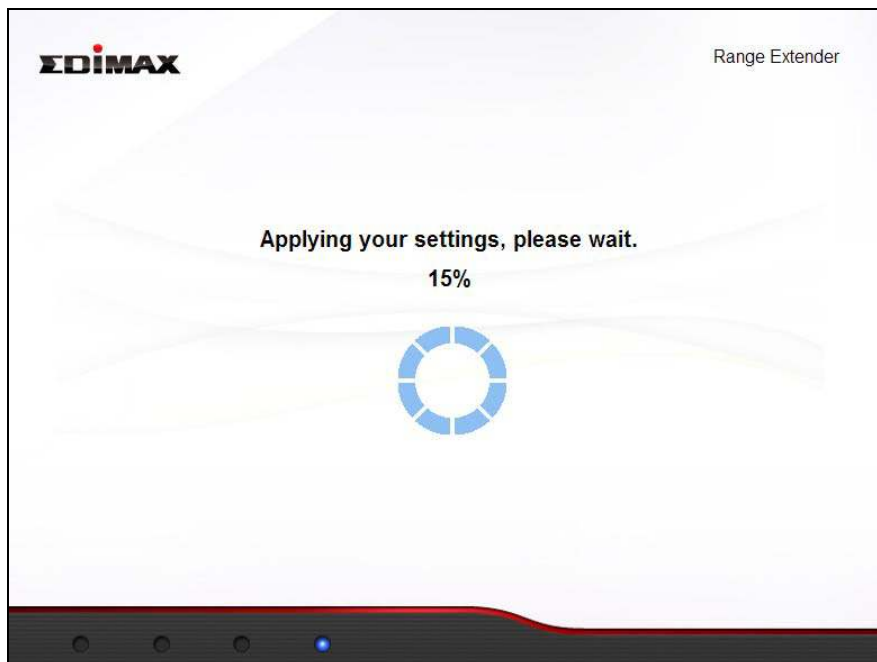

- 6.** A final congratulations screen will indicate that setup is complete. **Please close the browser window.**

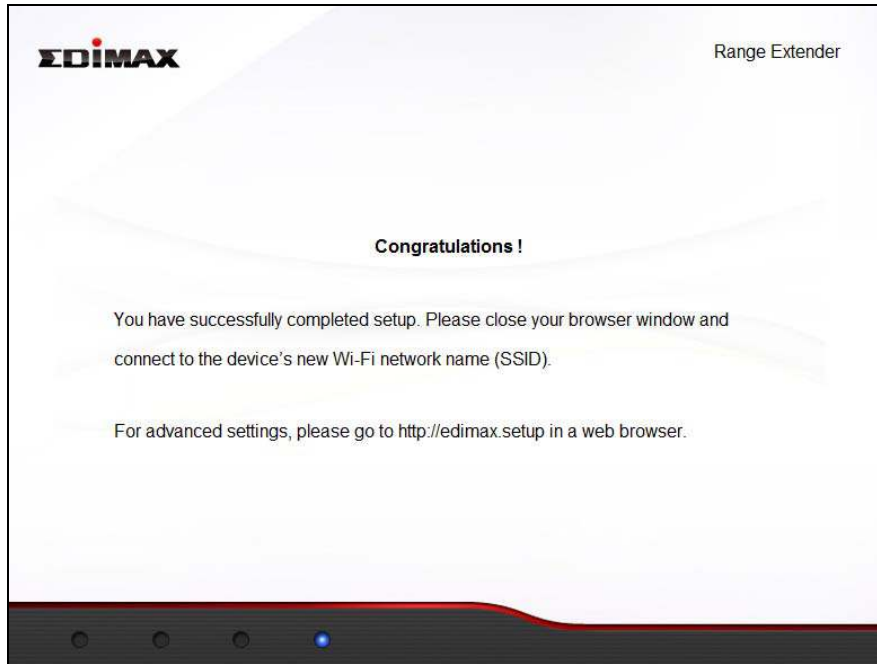

- 7.** The BR-6428nS V2/nC is working and ready for use. You can now connect to the device's new SSID. Please refer to [IV-2. Connecting to a Wi-Fi network](#) if you require more guidance.


II-4. WPS Setup

If your wireless device supports WPS (Wi-Fi Protected Setup) then you can use this method to connect to the BR-6428nS V2/nC's Wi-Fi network.

1. Press the **WPS button** on the BR-6428nS V2/nC for 2 – 5 seconds to activate WPS. The WLAN LED will flash to indicate that WPS is active.

2. **Within two minutes**, press the WPS button on the **wireless device/client** to activate its WPS.

3. The devices will establish a connection. Repeat for additional wireless devices.

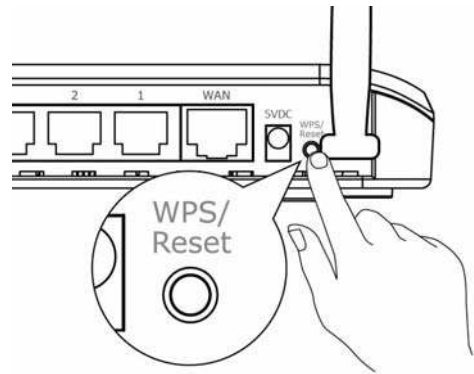

 ***Please check the instructions for your wireless device for how long you need to hold down its WPS button to activate WPS.***

II-5. Reset to Factory Default Settings

If you experience problems with your BR-6428nS V2/nC, you can reset the device back to its factory settings. This resets **all** settings back to default.

1. Press and hold the WPS/Reset button found on the back panel for at least 10 seconds, until the power LED begins to flash.

2. Release the button when the power LED is **flashing**.

3. Wait for the BR-6428nS V2/nC to restart. The BR-6428nS V2/nC is ready for setup when the power LED displays **on**.

III. Browser Based Configuration Interface

After you have setup the BR-6428nS V2/nC as detailed in **II. Installation** or the included **Quick Installation Guide**, you can use the browser based configuration interface to configure advanced settings.



Please ensure that your computer is set to use a dynamic IP address. Refer to [IV-1. Configuring your IP address](#) for more information.

III-1. Login

- 1.** To access the browser based configuration interface enter ***http://edimax.setup*** into the URL bar of a browser on a network device connected to the same Wi-Fi network as the BR-6428nS V2/nC.



If you can not access [http://edimax.setup](#), connect the device to a computer using an Ethernet cable and try again.

- 2.** You will be prompted for a username and password. The default username is “admin” and the default password is “1234”.



3. You will arrive at the “Status” screen. Use the menu down the left side to navigate.

EDIMAX Wi-Fi Router NETWORKING PEOPLE TOGETHER English

Help

► Status

► Setup Wizard

► Internet

► LAN

► 2.4GHz Wireless

► Firewall

► QoS

► Advanced

► Administration

System Status

System		LAN	
Model	N300 Wi-Fi Router	IP Address	192.168.2.1
Current Time	2013/7/30 10:19:05	Subnet Mask	255.255.255.0
Hardware Version	Rev. A	DHCP Server	Enable
Firmware Version	1.04	MAC Address	80:1F:02:00:00:09

Internet		2.4GHz Wireless	
IP Address Mode	Dynamic IP Connect	ESSID	matt
IP Address	192.168.10.149	Channel Number	2
Subnet Mask	255.255.255.0	Security	WPA Pre-shared Key
Default Gateway Address	192.168.10.254	MAC Address	801f02000009
MAC Address	80:1F:02:00:00:0A		
Primary DNS	192.168.1.12		
Secondary DNS	192.168.1.2		
Third DNS			

III-2. Save Settings

1. After you configure any settings, click the “Save Settings” button at the bottom of the screen to save your changes.



 ***The device needs to restart in order to bring any changes into effect.***

2. Then, click “Click here to restart” in order to restart the device and bring the changes into effect.

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

3. To make several changes at once, use the “Save Settings” button after each change and then click “click here to restart” after your final change. Only one restart is necessary as long as each change is saved with the “Save Settings” button.

 ***After you click “click here to restart”, all saved changes will come into effect.***

III-3. Main Menu

The main menu displays different options depending on your device's operating mode.

Wi-Fi Router

- ▶ Status
- ▶ Setup Wizard
- ▶ Internet
- ▶ LAN
- ▶ 2.4GHz Wireless
- ▶ Firewall
- ▶ QoS
- ▶ Advanced
- ▶ Administration

Access Point

- ▶ Status
- ▶ Setup Wizard
- ▶ LAN
- ▶ 2.4GHz Wireless
- ▶ Advanced
- ▶ Administration

Range Extender

- ▶ Status
- ▶ Setup Wizard
- ▶ LAN
- ▶ WPS
- ▶ Administration

III-3-1. Status



The “Status” page displays basic system information about the device, arranged into four categories: System, LAN, Internet & 2.4GHz Wireless.




Screenshots displayed are examples. The information shown on your screen will vary depending on your configuration.


System Status

System		LAN	
Model	N300 Wi-Fi Router	IP Address	192.168.2.1
Current Time	2013/7/31 8:54:44	Subnet Mask	255.255.255.0
Hardware Version	Rev. A	DHCP Server	Enable
Firmware Version	1.04	MAC Address	80:1F:02:00:00:09

Internet		2.4GHz Wireless	
IP Address Mode	Dynamic IP Connect	ESSID	edimax.setup
IP Address	192.168.10.149	Channel Number	1
Subnet Mask	255.255.255.0	Security	WPA Pre-shared Key
Default Gateway Address	192.168.10.254	MAC Address	801f02000009
MAC Address	80:1F:02:00:00:0A		
Primary DNS	192.168.1.12		
Secondary DNS	192.168.1.2		
Third DNS			

III-3-2. Setup Wizard

 You can run the setup wizard again to reconfigure the basic settings of the device, or you can run a wizard to help you switch the device to a different operating mode. Select “Setup Wizard” or “Switch to Router/AP/Range Extender” and then click “Run Wizard” to begin.

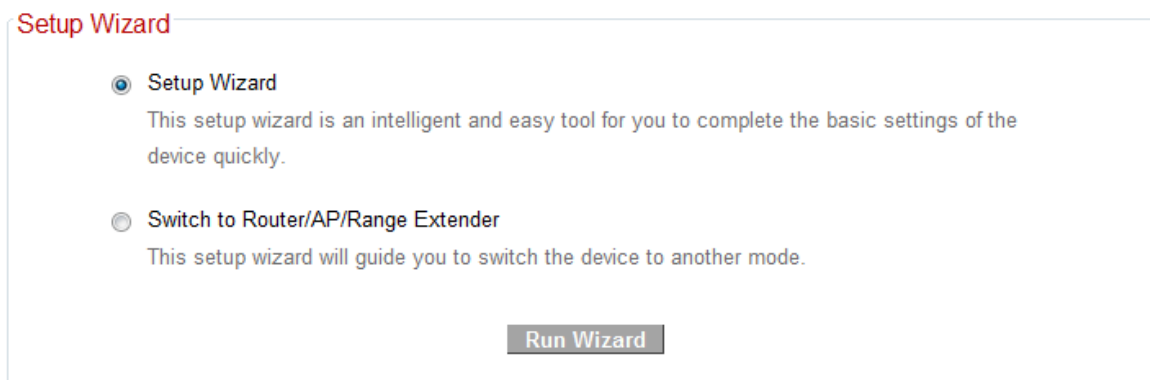

Setup Wizard	This wizard will help you to set up the basic functions and settings of the device. For guidance about using the setup wizard, please refer to II. Installation .
Switch to Router/AP/ Range Extender	This wizard will help you to switch the device to a different operating mode: Wi-Fi router mode, access point mode or range extender mode (see below).

Switch to Router/AP/Range Extender:


1. Follow the on-screen instructions to back up your current settings and then reset the device back to its factory default settings.
2. After the device has reset you will see the screen below. Reconnect to the device’s default SSID “edimax.setup” and go to the URL “http://Edimax.Setup” in a web browser.

Reset to Defaults

You have successfully reset the device to factory defaults. Please close the browser and open it again. This device will start running the setup wizard for you to switch the mode.

- 3.** Follow the on-screen wizard to setup your device in a different mode. Refer to [II. Installation Step 3](#) onwards for help if needed.

III-3-3. Internet

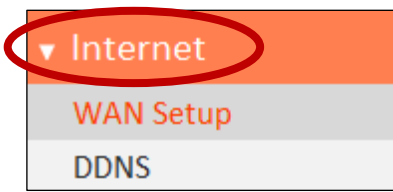

The “Internet” menu provides access to WAN and DDNS settings. Click on an item from the submenu to view and/or configure the settings.

III-3-3-1. WAN Setup

Select a Wide Area Network (WAN) connection mode and configure the settings. If you are unsure about your connection type, contact your ISP.

A screenshot of the WAN Connection Mode configuration page. The 'WAN Connection Mode' section has a dropdown menu set to 'Dynamic IP'. Below it, the 'Dynamic IP' section has fields for 'Host Name' and 'MAC Address', and a 'Clone MAC' button.

III-3-3-1-1. Dynamic IP

Select “Dynamic IP”. If your Internet service provider assigns IP address automatically using DHCP (Dynamic Host Configuration Protocol).

A screenshot of the Dynamic IP configuration page. It includes fields for 'Host Name', 'MAC Address' (with a 'Clone MAC' button), 'DNS Address' (with radio buttons for 'Obtain an IP address automatically' and 'Use the following IP address'), 'DNS1 Address', 'DNS2 Address', 'DNS3 Address', 'MTU' (with a value of 1500 and a note '(512<= MTU Value <=1500)'), and 'TTL' (with radio buttons for 'Disable' and 'Enable'). A 'Save Settings' button is at the bottom.

Host Name	Enter the host name of your computer.
MAC Address	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, press “Clone Mac” to automatically enter your computer’s MAC address.
DNS Address	Select “Obtain an IP address automatically” or “Use the following IP address”. Check with your ISP if you are unsure.
DNS Address 1,2 & 3	Enter the DNS address(es) assigned by your ISP here.
MTU	Enter the maximum transmission unit (MTU) value of your network connection. The default value is 1500.
TTL	Enable/Disable time to live (TTL) function which limits the lifespan of network data to improve performance.

III-3-3-1-2. Static IP

Select “Static IP” if your ISP provides Internet access via a fixed IP address. Your ISP will provide you with such information as IP address, subnet mask, gateway address, and DNS address.

Static IP

Fixed IP IP Address

Subnet Mask

Default Gateway Address

MAC Address

DNS1 Address

DNS2 Address

DNS3 Address

MTU (512<= MTU Value <=1500)

TTL Disable Enable

Fixed IP Address	Input the IP address assigned by your ISP here.
Subnet Mask	Input the subnet mask assigned by your ISP here.
Default Gateway Address	Input the default gateway assigned by your ISP here. Some ISPs may call this “Default Route”.
MAC Address	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, press “Clone Mac” to automatically enter your computer’s MAC address.
DNS Address 1, 2 & 3	Enter the DNS address(es) assigned by your ISP here.
MTU	Enter the maximum transmission unit (MTU) value of your network connection. The default value is 1500.
TTL	Enable/Disable time to live (TTL) function which limits the lifespan of network data to improve performance.

III-3-3-1-3. PPPoE

Select “PPPoE” if your ISP is providing you Internet access via PPPoE (Point-to-Point Protocol over Ethernet).

PPPoE

User Name

Password

MAC Address

DNS Address Obtain an IP address automatically
 Use the following IP address

DNS1 Address

DNS2 Address

DNS3 Address

TTL Disable Enable

Serverce Name

MTU (512<= MTU Value <=1492)

Connection Type

Idle Time Out (1-1000 minutes)

Enable Dual Wan Access :

IGMP Source ETH PPP

User Name	Enter the user name assigned by your ISP here.
Password	Enter the password assigned by your ISP here.
MAC Address	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, press “Clone Mac” to automatically enter your computer’s MAC address.
DNS Address	Select “Obtain an IP address automatically” or “Use the following IP address”. Check with your ISP if you are unsure.
DNS Address 1, 2 & 3	Enter the DNS address(es) assigned by your ISP here.

TTL	Enable/Disable time to live (TTL) function which limits the lifespan of network data to improve performance.
Service Name	Give this Internet service a name (optional).
MTU	Enter the maximum transmission unit (MTU) value of your network connection. The default value is 1392.
Connection Type	Specify a connection type: <ol style="list-style-type: none"> 1. "Continuous": Connected all the time. 2. "Connect on Demand": Connect when you initiate an Internet connection. 3. "Manual": Connect/disconnect manually using the "Connect" and "Disconnect" buttons.
Idle Time Out	Specify the amount of time the router waits before shutting down an idle connection. Only available when "Connect on Demand" (above) is selected.
Enable Dual-WAN Access	Enable/disable dual WAN access. When you enable dual WAN access, select an IGMP source and enter a "Host Name" and "MAC Address".

III-3-3-1-4. PPTP

Select “PPTP” if your ISP is providing you Internet access via PPTP (Point-to-Point Tunneling Protocol). Then select “Obtain an IP address automatically” or “Use the following IP address” depending on your ISP.

PPTP

Obtain an IP address automatically :

Host Name

MAC Address **Clone MAC**

Use the following IP address :

Static IP Address

Subnet Mask

Default Gateway Address

MAC Address **Clone MAC**

DNS Address Obtain an IP address automatically
 Use the following IP address

DNS1 Address

DNS2 Address

DNS3 Address

Enable Dual Wan Access :

IGMP Source ETH PPP

PPTP Settings :

User ID

Password

PPTP Gateway

Connection ID (Optional)

MTU (512<= MTU Value <=1492)

BEZEQ-ISRAEL Enable (for use with BEZEQ network in Israel only)

Connection Type **Connect** **Disconnect**

Idle Time Out (1-1000 minutes)

Save Settings

Host Name	Enter the host name of your computer here If required.
MAC Address	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, press “Clone Mac” to automatically enter your computer’s MAC address.
Static IP Address	Input the IP address assigned by your ISP here.
Subnet Mask	Input the subnet mask assigned by your ISP here.
Default Gateway Address	Input the default gateway assigned by your ISP here. Some ISPs may call this “Default Route”.
MAC Address	If your ISP filters access by MAC addresses, enter your computer’s MAC address here. Click “Clone MAC” to automatically enter your computer’s MAC address.
DNS Address	Select “Obtain an IP address automatically” or “Use the following IP address”. Check with your ISP if you are unsure.
DNS Address 1,2 & 3	Enter the DNS address(es) assigned by your ISP here.
Enable Dual-WAN Access	Enable/disable dual WAN access. When you enable dual WAN access, select an IGMP source and enter a “Host Name” and “MAC Address”.
User ID	Input the user name assigned by your ISP here.
Password	Input the password assigned by your ISP here.
PPTP Gateway	Input the PPTP gateway assigned by your ISP here.
Connection ID	Specify a reference name/ID for the connection.
MTU	Enter the maximum transmission unit (MTU) value of your network connection. The default value is 1392.
BEZEQ-ISRAEL	Check the “Enable” box if you are using BEZEQ network services (Israel users only).
Connection Type	Specify a connection type: <ol style="list-style-type: none"> 1. “Continuous”: Connected all the time. 2. “Connect on Demand”: Connect when you initiate an Internet connection. 3. “Manual”: Connect/disconnect manually using the “Connect” and “Disconnect” buttons.
Idle Time Out	Specify the amount of time the router waits before

shutting down an idle connection. Only available when “Connect on Demand” (above) is selected.

III-3-3-1-5. L2TP

Select “L2TP” if your ISP is providing you Internet access via L2TP (Layer 2 Tunneling Protocol).

L2TP

Obtain an IP address automatically :

Host Name

MAC Address **Clone MAC**

Use the following IP address :

Static IP Address

Subnet Mask

Default Gateway Address

MAC Address **Clone MAC**

DNS Address Obtain an IP address automatically
 Use the following IP address

DNS1 Address

DNS2 Address

DNS3 Address

Enable Dual Wan Access :

IGMP Source ETH PPP

L2TP Settings :

User ID

Password

L2TP Gateway

MTU (512<= MTU Value <=1492)

Connection Type **Connect** **Disconnect**

Idle Time Out (1-1000 minutes)

Save Settings

Host Name	Enter the host name of your computer here If required.
MAC Address	For some applications, you may need to designate a specific MAC address for the router. Please enter the MAC address here. If you are connecting the router to a computer, press “Clone Mac” to

	automatically enter your computer's MAC address.
Static IP Address	Input the IP address assigned by your ISP here.
Subnet Mask	Input the subnet mask assigned by your ISP here.
Default Gateway Address	Input the default gateway assigned by your ISP here. Some ISPs may call this "Default Route".
MAC Address	If your ISP filters access by MAC addresses, enter your computer's MAC address here. Click "Clone MAC" to automatically enter your computer's MAC address.
DNS Address	Select "Obtain an IP address automatically" or "Use the following IP address". Check with your ISP if you are unsure.
DNS Address 1,2 & 3	Enter the DNS address(es) assigned by your ISP here.
Enable Dual-WAN Access	Enable/disable dual WAN access. When you enable dual WAN access, select an IGMP source and enter a "Host Name" and "MAC Address".
User ID	Input the user name assigned by your ISP here.
Password	Input the password assigned by your ISP here.
L2TP Gateway	Input the L2TP gateway assigned by your ISP here.
Connection ID	Specify a reference name/ID for the connection.
MTU	Enter the maximum transmission unit (MTU) value of your network connection. The default value is 1392.
Connection Type	Specify a connection type: <ol style="list-style-type: none"> 1. "Continuous": Connected all the time. 2. "Connect on Demand": Connect when you initiate an Internet connection. 3. "Manual": Connect/disconnect manually using the "Connect" and "Disconnect" buttons.
Idle Time Out	Specify the amount of time the router waits before shutting down an idle connection. Only available when "Connect on Demand" (above) is selected.

III-3-3-1-6. WISP

Select “WISP” if you use a wireless internet service from Internet Service Provider (WISP).

WISP

Enable / Disable Disable Enable

Basic Settings :

ESSID

Site Survey

Channel Number

Security Setting :

Encryption ▼

WISP	Enable or disable the WISP function.
ESSID	Enter the SSID of the WISP network, or click “Select Site Survey” below to view all available networks in a new window and select the WISP network from there.
Select Site Survey	Click “Select Site Survey” to display all available wireless SSIDs in a new window and select your WISP network.
Channel Number	Enter the channel number of the WISP network.
Security Settings	Enter the security information required by your ISP.

III-3-3-2. DDNS

Dynamic DNS (DDNS) is a service which provides a hostname-to-IP service for dynamic IP users. The changing nature of dynamic IPs means that it can be difficult to access a service provided by a dynamic IP user; a DDNS service though can map such dynamic IP addresses to a fixed hostname, for easier access. The router supports several DDNS service providers, for more details and to register for a DDNS account please visit the DDNS providers website(s), examples of which are listed below.

DDNS

Enable / Disable Enable Disable

Provider

Domain Name

Account / E-mail

Password / Key

Enable/Disable	Enable or disable DDNS
Provider	Select DDNS service provider.
Domain Name	Enter the domain name provided by the DDNS provider.
Account/Email	Please enter the DDNS registration account/email.
Password/Key	Enter the DDNS service password/key.

The following DDNS services are supported:


- 3322** <http://www.3322.org>
- DHS** <http://www.dhs.org>
- DynDNS** <http://www.dyndns.org>
- ODS** <http://ods.org>
- TZO** <http://www.tzo.com>
- GnuDIP** <http://gnudip2.sourceforge.net>
- DyNS** <http://www.dyns.cx/>
- ZoneEdit** <http://www.zoneedit.com>
- DHIS** <http://www.dhis.org/>

CyberGate *<http://cybergate.planex.co.jp/ddns/>*
NS2GO *<http://www.ns2go.com/>*
NO-IP *<http://www.noip.com/>*

III-3-4. LAN



You can configure your Local Area Network (LAN) on this page. You can enable the router to dynamically allocate IP addresses to your LAN clients, and you can modify the IP address of the device. The device’s default IP address is 192.168.2.1.

 **You can access the browser based configuration interface using the device’s IP address instead of using the URL <http://edimax.setup>.**

LAN IP

IP Address:

Subnet Mask:

802.1d Spanning Tree:

DHCP Server:

Lease Time:

IP Address	Specify the IP address here. This IP address will be assigned to the BR-6428nS V2/nC and will replace the default IP address.
Subnet Mask	Specify a subnet mask. The default value is 255.255.255.0
802.1d Spanning Tree	Select “Enable” or “Disable” to enable/disable 802.1d Spanning Tree. This creates a tree of connected layer-2 bridges (typically Ethernet switches) within a mesh network, and disables those links that are not part of the tree, leaving a single active path between any two network nodes.
DHCP Server	Enable or disable the DHCP server.
Lease Time	Select a lease time for the DHCP leases here. The DHCP client will obtain a new IP address after the period expires. If there are less than 30 computers connected to the router, you can select “Forever”.

Your device’s DHCP server automatically assigns IP addresses to computers on its network, between a defined range of numbers.

DHCP Server

Start IP

End IP

Domain Name

Start IP	Enter the start IP address for the DHCP server's IP address leases.
End IP	Enter the end IP address for the DHCP server's IP address leases.
Domain Name	Enter a domain name for your network.

Your device's DHCP server can be configured to assign static (fixed) IP addresses to specified computers.

Static DHCP Lease Table

Only 16 sets of addresses are allowed.

NO.	MAC Address	IP Address	Select
		<input type="button" value="Delete Selected"/>	<input type="button" value="Delete All"/>

Enable Static DHCP Leases

Enable Static DHCP Leases	Enable/disable static DHCP leases.
MAC Address	Enter the specified computer's MAC address here.
IP Address	Assign a fixed IP address for the specified computer here.
Add	Add the information to the "Static DHCP Leases Table".
Clear	Clear the MAC address and IP address fields.
Delete Selected / Delete All	Delete selected or all entries from the table.



The LAN IP page will be displayed as below when your device is set to access point or range extender mode.

LAN IP

- Obtain an IP address automatically
- Use the following IP address

IP Address

Subnet Mask

Default Gateway Address


III-3-5. 2.4GHz Wireless



The “2.4GHz Wireless” menu allows you to configure SSID and security settings for your Wi-Fi network along with a guest Wi-Fi network. WPS, access control and scheduling functions can also be managed from here.

III-3-5-1. Basic

The “Basic” screen displays settings for your primary 2.4GHz Wi-Fi network.

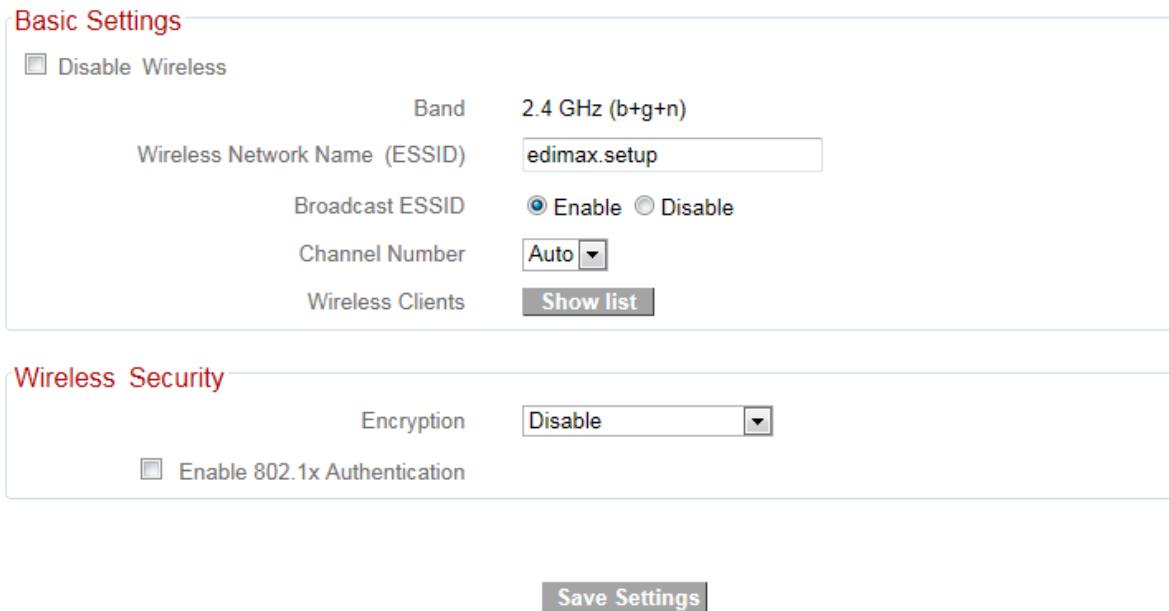

Disable Wireless	Check the box to disable the wireless function of your device.
Band	Displays the wireless standard used for the BR-6428nS V2/nC’s. “2.4GHz (B+G+N)” means that 802.11b, 802.11g, and 802.11n wireless clients can connect to the BR-6428nS V2/nC.
Wireless Network Name (ESSID)	This is the name of your Wi-Fi network for identification, also sometimes referred to as “SSID”. The ESSID can consist of any combination of up to 32 alphanumerical characters.


Broadcast ESSID	Enable or disable ESSID broadcast. When enabled, the ESSID will be visible to clients as an available Wi-Fi network. When disabled, the ESSID will not be visible as an available Wi-Fi network to clients – clients must manually enter the ESSID in order to connect. A hidden (disabled) ESSID is typically more secure than a visible (enabled) SSID.
Channel Number	Select a wireless radio channel or use the default “Auto” setting from the drop-down menu.
Wireless Clients	Click “Show list” to display a new window showing information about wireless clients. Please disable any pop-up blockers if you have difficulty using this function.

Wireless Security:

Select an encryption type from the drop-down menu:



“WPA Pre-shared Key” is the recommended and most secure encryption type.

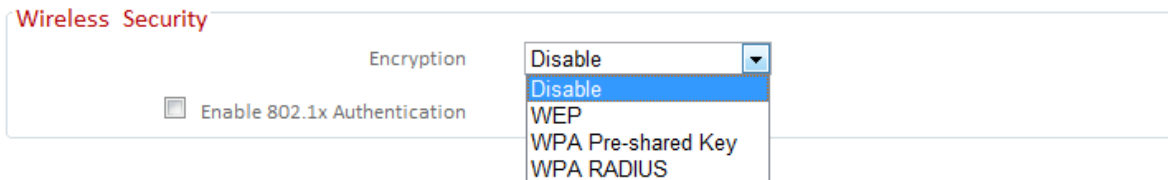

III-3-5-1-1. Disable

Encryption is disabled and no password/key is required to connect to the BR-6428nS V2/nC.



Disabling wireless encryption is not recommended. When disabled, anybody within range can connect to your device’s SSID.

III-3-5-1-2. WEP

WEP (Wired Equivalent Privacy) is a basic encryption type. For a higher level of security consider using WPA encryption.

Wireless Security

Encryption

Key Length

Key Format

Encryption Key Hide

Enable 802.1x Authentication

Key Length	Select 64-bit or 128bit. 128-bit is more secure than 64-bit.
Key Format	Choose from “ASCII” (any alphanumerical character 0-9, a-z and A-Z) or “Hex” (any characters from 0-9, a-f and A-F).
Encryption Key	Enter your encryption key/password according to the format you selected above. A complex, hard-to-guess key is recommended. Check the “Hide” box to hide your password from being displayed on-screen.
Enable 802.1x Authentication	Check the box to enable the 802.1x authentication. A RADIUS server is required to perform 802.1x authentication.

III-3-5-1-3. WPA Pre-Shared Key

WPA pre-shared key is the recommended and most secure encryption type.

Wireless Security

Encryption: WPA Pre-shared Key

WPA Unicast Cipher Suite: WPA (TKIP) WPA2 (AES) WPA2 Mixed

Pre-shared Key Format: Passphrase

Pre-shared Key: Hide

WPA Unicast Cipher Suite	Select from WPA (TKIP), WPA2 (AES) or WPA2 Mixed. WPA2 (AES) is safer than WPA (TKIP), but not supported by all wireless clients. Please make sure your wireless client supports your selection. WPA2 (AES) is recommended followed by WPA2 Mixed if your client does not support WPA2 (AES).
Pre-shared Key Format	Choose from “Passphrase” (8 – 63 alphanumeric characters) or “Hex” (up to 64 characters from 0-9, a-f and A-F).
Pre-shared Key	Please enter a key according to the format you selected above. A complex, hard-to-guess key is recommended. Check the “Hide” box to hide your password from being displayed on-screen.

III-3-5-1-4. WPA Radius

WPA RADIUS is a combination of WPA encryption and RADIUS user authentication. If you have a RADIUS authentication server, you can authenticate the identity of every wireless client against a user database.

Wireless Security

Encryption:

WPA Unicast Cipher Suite: WPA (TKIP) WPA2 (AES) WPA2 Mixed

RADIUS Server IP address:

RADIUS Server Port:

RADIUS Server Password:

WPA Unicast Cipher Suite	Select from WPA (TKIP), WPA2 (AES) or WPA2 Mixed. WPA2 (AES) is safer than WPA (TKIP), but not supported by all wireless clients. Please make sure your wireless client supports your selection. WPA2 (AES) is recommended followed by WPA2 Mixed if your client does not support WPA2 (AES).
RADIUS Server IP address	Input the IP address of the RADIUS authentication server here.
RADIUS Server Port	Input the port number of the RADIUS authentication server here. The default value is 1812.
RADIUS Server Password	Input the password of the RADIUS authentication server here.

III-3-5-2. Guest

You can setup an additional “Guest” Wi-Fi network so guest users can enjoy Wi-Fi connectivity without accessing your primary network. The “Guest” screen displays settings for your guest 2.4GHz Wi-Fi network.



The guest network is separate from your primary 2.4GHz network. The settings for your primary 2.4GHz network can be found under “Basic” in the “2.4GHz Wireless” menu.

Guest Basic Settings

Enable Guest SSID

Wireless Guest Name

Enable Wireless Clients Isolation

Band

Channel Number (Same as main SSID)

Guest Wireless Security

Encryption

Enable Guest SSID	Check/uncheck the box to enable/disable the guest Wi-Fi network.
Wireless Guest Name	Enter a reference/ID name for your guest wireless network.
Enable Wireless Clients Isolation	Check the box to enable wireless clients isolation. This prevents wireless clients connected to the BR-6428nS V2/nC from communicating with each other and improves security. Typically, this function is useful for corporate environments or public hot spots and can prevent brute force attacks on clients’ usernames and passwords.
Band	Displays the wireless standard used for the BR-6428nS V2/nC’s frequency band: 2.4GHz (B+G+N): Allows 802.11b, 802.11g, and 802.11n wireless clients to connect to the BR-6428nS V2/nC.
Channel Number	Channel number for the guest network is the same as the main SSID and cannot be adjusted independently.

Encryption


Please refer to [III-3-5-1. Basic: Wireless Security](#) for details about security settings.



WPA RADIUS encryption type is not available for the guest network.

III-3-5-3. WPS

Wi-Fi Protected Setup is a simple way to establish connections between WPS compatible devices. WPS can be activated on compatible devices by pushing a WPS button on the device or from within the device’s firmware/configuration interface. When WPS is activated in the correct manner and at the correct time for two compatible devices, they will automatically connect. PIN code WPS includes the use of a PIN code between the two devices for verification.

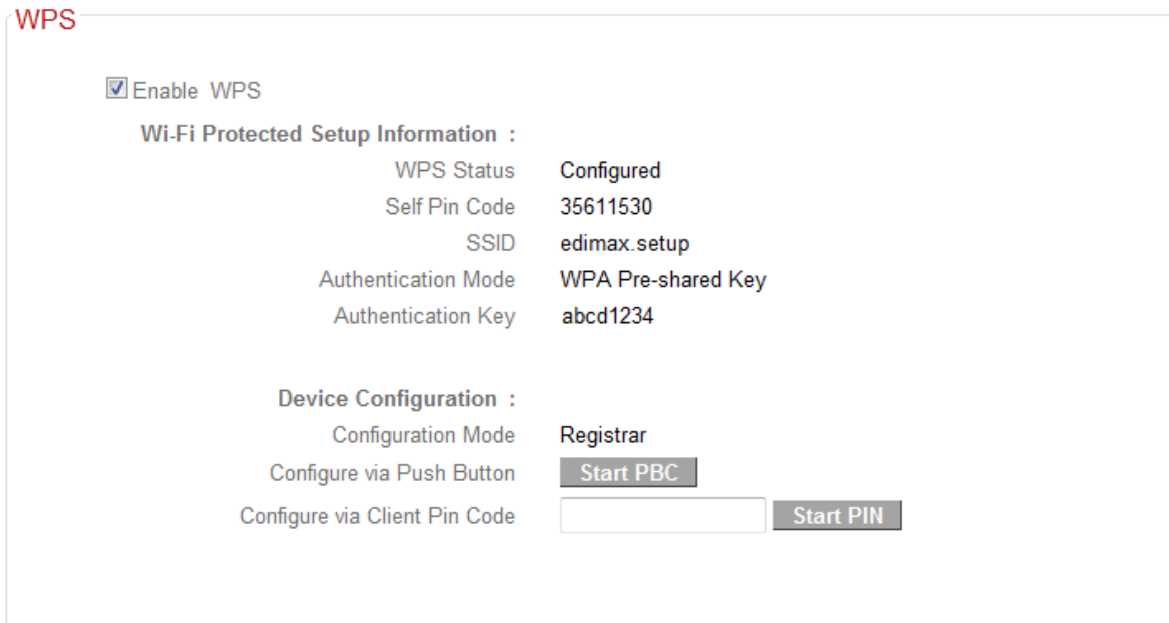

Enable WPS	Check/uncheck this box to enable/disable WPS.
WPS Status	Displays “Configured” or “unConfigured” depending on whether WPS and SSID/security settings for the device have been configured or not, either manually or using the WPS button.
Self PIN Code	Displays the WPS PIN code of the device.
SSID	Displays the SSID (ESSID) of the device.
Authentication Mode	Displays the wireless security authentication mode of the device.
Authentication Key	Displays the wireless security authentication key.
Configuration Mode	The configuration mode of the device’s WPS setting is displayed here. “Registrar” means the device acts as an access point for a wireless client to connect to and the wireless client(s) will follow the device’s wireless settings.

Configure via Push Button	Click “Start PBC” (Push-Button Configuration) to activate WPS on the access point. WPS will be active for 2 minutes.
Configure via Client PIN Code	Enter the wireless client’s PIN code here and click “Start PIN” to activate PIN code WPS. Refer to your wireless client’s documentation if you are unsure of its PIN code.

III-3-5-4. Access Control

Access Control is a security feature that can help to prevent unauthorized users from connecting to your wireless router.

This function allows you to define a list of network devices permitted to connect to the BR-6428nS V2/nC. Devices are each identified by their unique MAC address. If a device which is not on the list of permitted MAC addresses attempts to connect to the BR-6428nS V2/nC, it will be denied.

To enable this function, check the box labeled “Enable Wireless Access Control”.

Access Control

Enable Wireless Access Control

MAC Address: Comment:

MAC Address	Device Name	IP Address	Comment	Select
<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/>				

MAC address	<p>Select a PC name from the drop-down list and click “>>” to add enter it into the blank field to the right.</p> <p>Click “Refresh’ in the drop-down menu to refresh the list of available MAC addresses. If the address you wish to add is not listed, enter it manually.</p> <p>Enter a MAC address of computer or network device manually without dashes or colons e.g. for MAC address ‘aa-bb-cc-dd-ee-ff’ enter ‘aabbccddeeff’.</p>
Comment	Enter a comment for reference/identification consisting of up to 16 alphanumerical characters.
Add	Click “Add” to add the MAC address to the MAC address filtering table.
Clear	Clear all fields.


MAC address entries will be listed in the table as shown below. Select an entry using the “Select” checkbox.

MAC Address	Device Name	IP Address	Comment	Select
aa:bb:cc:dd:ee:ff	OFFLINE	OFFLINE		<input type="checkbox"/>

Delete Selected/ Delete All	Delete selected or all entries from the table.
--	--

III-3-5-5. Schedule

The schedule feature allows you to automate the wireless radio to switch on/off at specified times. Multiple schedules can be configured. Check/uncheck the box “Enable Schedule Settings” to enable/disable the wireless on/off scheduling function.

 ***The BR-6428nS V2/nC must remain connected to the Internet and use an NTP server for the schedule feature to function correctly.***

Wireless Schedule


Enable Schedule Settings

1. Weekday Sunday Monday Tuesday Wednesday
 Thursday Friday Saturday

2. Time Hour Minute

3. Command

Weekday	Time	Command	Select

 ***Wireless scheduling can save energy and increase the security of your network.***

- 1.** Use the checkboxes to select which day(s) to include in the schedule.
- 2.** Specify a time (hour and minute) for the schedule using the drop-down menu.
- 3.** Select which command applies to this schedule from the drop-down menu, either “Wireless On” or “Wireless Off”.

Add	Add the schedule to the table of active schedules.
Clear	Clear all fields.

Active schedules will be displayed in the table as shown below. Select an entry using the “Select” checkbox.

Weekday	Time	Command	Select
Sunday	10:00	wireless off	<input type="checkbox"/>
Sunday	20:00	wireless on	<input type="checkbox"/>


Delete Selected **Delete All**

Save Settings

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Delete Selected/ Delete All	Delete selected or all entries from the table.
--	--

III-3-6. Firewall

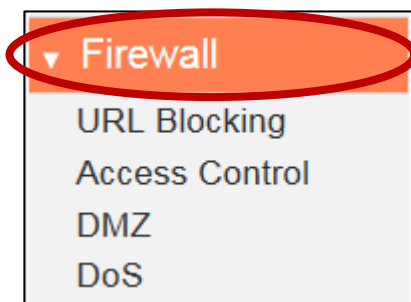

The “Firewall” menu provides access to URL blocking, access control, DMZ and DoS functions to improve the security of your wireless network.

Firewall

The router provides stateful packet inspection (SPI) firewall protection. Only packets matching a known active connection will be allowed by the firewall; others will be rejected.

SPI firewall Enable Disable

SPI firewall	Enable or disable the stateful packet inspection (SPI) firewall.
---------------------	--

III-3-6-1. URL Blocking

This function can block Internet access by either specific URLs or keywords. Check/uncheck the “Enable URL Blocking” box to enable/disable URL blocking.

URL Blocking

Enable URL Blocking

URL / Keyword :

NO.	URL / Keyword	Select
-----	---------------	--------

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

URL/Keyword	Enter the URL or keyword to be blocked.
Add	Add the URL or keyword to the blocked table.
Clear	Clear all fields.

Blocked URLs/keywords entries will be listed in the table as shown below. Select an entry using the “Select” checkbox.

NO.	URL / Keyword	Select
1	www.blockedurlhere.com	<input type="checkbox"/>

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Delete Selected / Delete All	Delete selected or all entries from the table.
-------------------------------------	--

III-3-6-2. Access Control



Access Control (MAC filtering) can also be configured from [III-3-5-4. Access Control](#).

Access Control is a security feature that can help to prevent unauthorized users from connecting to your wireless router.

This function allows you to define a list of network devices permitted or denied to connect to the BR-6428nS V2/nC. Devices are each identified by their unique MAC address or IP address. Specific services can also be allowed/denied for IP addresses.

Check/uncheck the “Enable MAC Filtering” and/or “Enable IP Filtering” box to enable/disable MAC filtering and/or IP filtering.

Access Control

Enable MAC Filtering : Deny Allow

Client PC	MAC Address	Computer Name	Comment
<input type="text"/>	<input type="text"/>	<< ---- Select ---- >>	<input type="text"/>
		<input type="button" value="Add"/>	<input type="button" value="Clear"/>

MAC Filtering Table :

NO	Computer Name	Client PC	MAC Address	Comment	Select	
					<input type="button" value="Delete Selected"/>	<input type="button" value="Delete All"/>

Enable IP Filtering Table : Deny Allow

IP Filtering Table :

NO	Client PC	Description	Client PC	IP Address	Client Service	Protocol	Port Range	Select		
								<input type="button" value="Add PC"/>	<input type="button" value="Delete Selected"/>	<input type="button" value="Delete All"/>

MAC Filtering:

Enable MAC Filtering	Check the box to enable MAC filtering and select whether to “Deny” or “Allow” access for specified MAC address.
Client PC MAC Address	Enter a MAC address of computer or network device manually without dashes or colons e.g. for MAC address ‘aa-bb-cc-dd-ee-ff’ enter ‘aabbccddeeff’.
Computer Name	Select a computer name from the drop-down list and click “<<” to add its MAC address into the “Client PC Mac Address” field. Click “Refresh’ in the drop-down menu to refresh the list of available MAC addresses. If the address you wish to add is not listed, enter it manually.
Comment	Enter a comment for reference/identification consisting of up to 16 alphanumerical characters.
Add	Click “Add” to add the MAC address to the MAC address filtering table.
Clear	Clear all fields.

MAC address entries will be listed in the table as shown below. Select an entry using the “Select” checkbox.

MAC Filtering Table :

NO	Computer Name	Client PC MAC Address	Comment	Select
1	OFFLINE	aa:bb:cc:dd:ee:ff		<input type="checkbox"/>

Delete Selected / Delete All	Delete selected or all entries from the table.
-------------------------------------	--

IP Filtering:

Enable IP Filtering	Check the box to enable IP filtering and select whether to “Deny” or “Allow” access for specified IP address.
Add PC	Opens a new window to add a new IP to the list, to deny or allow access/services according to above.

Access Control Add PC

This page allows users to define service limitations of client PCs, including IP address and service type.

Access Control Add PC :

Client PC Description
Client PC IP address -

Client PC Service :

Service Name	Detail Description	Select
WWW	HTTP, TCP Port 80, 3128, 8000, 8080, 8081	<input type="checkbox"/>
E-mail Sending	SMTP, TCP Port 25	<input type="checkbox"/>
News Forums	NNTP, TCP Port 119	<input type="checkbox"/>
E-mail Receiving	POP3, TCP Port 110	<input type="checkbox"/>
Secure HTTP	HTTPS, TCP Port 443	<input type="checkbox"/>
File Transfer	FTP, TCP Port 21, 20	<input type="checkbox"/>
MSN Messenger	TCP Port 1863	<input type="checkbox"/>
Telnet Service	TCP Port 23	<input type="checkbox"/>
AIM	AOL Instant Messenger, TCP Port 5190	<input type="checkbox"/>
NetMeeting	H.323, TCP Port 389,522,1503,1720,1731	<input type="checkbox"/>
DNS	UDP Port 53	<input type="checkbox"/>
SNMP	UDP Port 161, 162	<input type="checkbox"/>
VPN-PPTP	TCP Port 1723	<input type="checkbox"/>
VPN-L2TP	UDP Port 1701	<input type="checkbox"/>
TCP	All TCP Port	<input type="checkbox"/>
UDP	All UDP Port	<input type="checkbox"/>

User Define Service :

Protocol
Port Range

Client PC Description	Enter a description for reference/identification of up to 16 alphanumeric characters.
Client PC IP address	Enter a starting IP address in the left field and the end IP address in the right field to define a range of IP addresses; or enter an IP address in the left field only to define a single IP address.
Service Name	Various services are listed here with a short description. Check/uncheck the box for each service you wish to select.
Protocol	Select protocol "TCP" or "UDP" or "Both" for a service not included in the "Client PC Service" list.
Port Range	Enter the port range for the service not included in the "Client PC Service" list. Enter a single port number e.g. 110, a range of port numbers e.g. 110-120, or multiple port numbers separated by a comma e.g. 110,115,120.
Add	Click "Add" to add selected services or a user defined service to the IP filtering table.
Clear	Clear all fields.

IP filtering entries will be listed in the IP filtering table as shown below.

IP Filtering Table :

NO	Client PC Description	Client PC IP Address	Client Service	Protocol	Port Range	Select
<input type="button" value="Add PC"/> <input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/>						
<input type="button" value="Save Settings"/>						


Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Delete Selected/ Delete All	Delete selected or all entries from the table.
--	--

III-3-6-3. DMZ

A Demilitarized Zone (DMZ) is an isolated area in your local network where private IP addresses are mapped to specified internet IP addresses, allowing unrestricted access to the private IP addresses but not to the wider local network.

You can define a virtual DMZ host here. This is useful for example, if a network client PC cannot run an application properly from behind an NAT firewall, since it opens the client up to unrestricted two-way access.

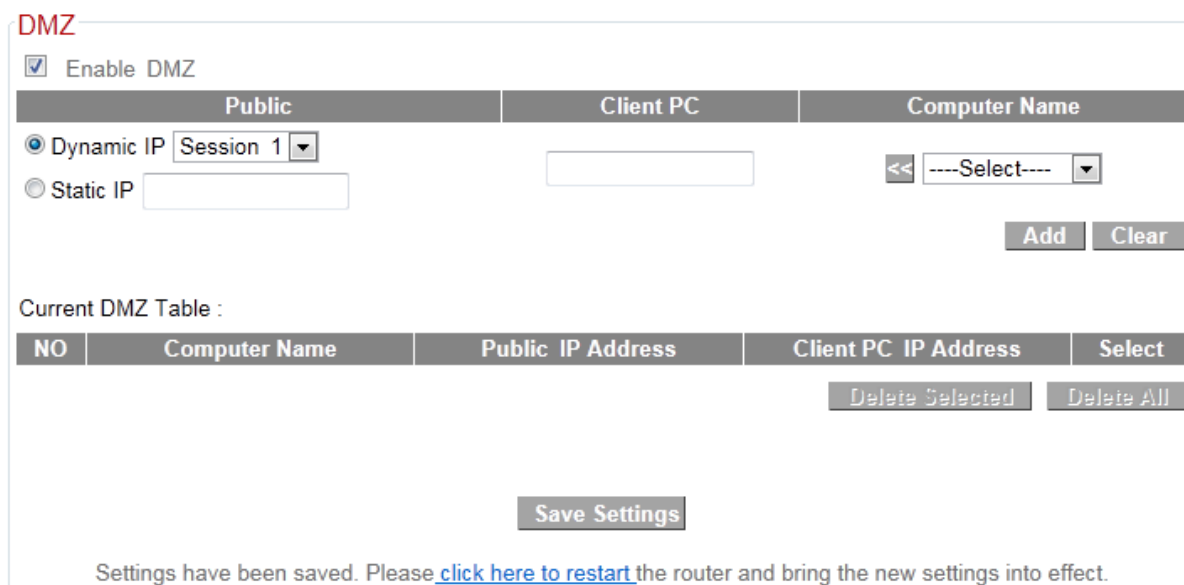

DMZ

Enable DMZ

Public	Client PC	Computer Name
<input checked="" type="radio"/> Dynamic IP Session 1 ▼ <input type="radio"/> Static IP <input type="text"/>	<input type="text"/>	<< ----Select---- ▼
		<input type="button" value="Add"/> <input type="button" value="Clear"/>

Current DMZ Table :

NO	Computer Name	Public IP Address	Client PC IP Address	Select
				<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/>

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Enable DMZ	Check/uncheck the box to enable/disable the device's DMZ function.
Public	Select "Dynamic IP" or "Static IP" here. For "Dynamic IP" select an Internet connection session from dropdown menu. For "Static IP" enter the IP address that you want to map to a specific private IP address.
Client PC	Enter the private IP address that the internet IP address will be mapped to.
Computer Name	Select a computer name from the list and click "<<" to enter its IP address into the "Client PC" field (above).
Add	Click "Add" to add the client to the "Current DMZ Table".
Clear	Clear all values.

DMZ entries will be displayed in the table below:

Current DMZ Table :

NO	Computer Name	Public IP Address	Client PC IP Address	Select
				<input type="button" value="Delete Selected"/> <input type="button" value="Delete All"/>

Delete Selected/ Delete All	Delete selected or all entries from the table.
--	--

III-3-6-4. DoS

Denial-of-Service (DoS) is a common form of malicious attack against a network. The router's firewall can protect against such attacks.

If you are not familiar with these functions, it is recommended you keep the default settings.

DoS

Ping of Death 5 Ping of Death Packet(S) Per Second Burst 5

Discard Ping From WAN

Port Scan

- NMAP FIN / URG / PSH
- Xmas tree
- Another Xmas tree
- Null scan
- SYN / RST
- SYN / FIN
- SYN (only unreachable ports)

Sync Flood 30 Packet(S) Per Second Burst 30


Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Ping of Death	Specify the frequency of ping of death packets which will trigger the router's DoS protection function.
Discard Ping from WAN	Check this box and the router will not answer ping requests from the Internet.
Port Scan	Intruders use "port scanners" to detect open Internet IP address ports. Check each type of port scan to prevent.
Sync Flood	Specify the frequency of sync flood packets which will trigger the DoS protection function.

III-3-7. QoS



Quality of Service (QoS) is a feature to manage Internet bandwidth efficiently. Some applications require more bandwidth than others to function properly, and QoS allows you to ensure that sufficient bandwidth is available. Minimum or maximum bandwidth can be guaranteed for a specified application.

 ***QoS can improve the BR-6428nS V2/nC's performance. QoS is recommended to optimize performance for online gaming.***

III-3-7-1. QoS

Check/uncheck the box “Enable QoS” to enable/disable the QoS function. Click “Add” to open a new window and setup a QoS rule. The “Current QoS Table” displays all QoS rules.

QoS

Enable QoS

Total Download Bandwidth kbits

Total Upload Bandwidth kbits

Current QoS Table :

Priority	Rule Name	Upload Bandwidth	Download Bandwidth	Select
<div style="display: flex; justify-content: center; gap: 10px;"> Add Edit Delete Selected Delete All Move Up Move Down </div>				

Save Settings

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Total Download Bandwidth	Enter your total download bandwidth limit from your Internet service provider (ISP) in kbits.
Total Upload Bandwidth	Enter your total upload bandwidth limit from your Internet service provider (ISP) in kbits.
Add	Opens a new window to add a new QoS rule to the current QoS table.

QoS

This page allows users to add/modify the QoS rule's settings.

Rule Name

Bandwidth kbits

Local IP Address -

Local Port Range

Remote IP Address -

Remote Port Range

Traffic Type

Protocol

Rule Name	Enter a name for the QoS rule for reference/identification.
Bandwidth	<p>Set the bandwidth limits for the QoS rule:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> Bandwidth : <input type="text" value="Download"/> <input type="text"/> Kbps <input type="text" value="guarantee"/> </div> <p style="text-align: center;">(1) (2) (3)</p> <ol style="list-style-type: none"> 1. Select "Download" or "Upload" for the QoS rule. 2. Enter the bandwidth limit. 3. Select whether the bandwidth is a "Guarantee" (minimum) or "Max" (maximum).
Local IP Address	<p>Enter the IP address range to which the QoS rule will be applied.</p> <p>Enter a starting IP address in the left field and the end IP address in the right field to define a range of IP addresses; or enter an IP address in the left field only to define a single</p>

	IP address.
Local Port Range	Enter the port range to activate the QoS rule. Enter a single port number e.g. 110 or a range of port numbers e.g. 110-120
Remote IP Address	Enter the remote IP address range which will activate the QoS rule. Enter a starting IP address in the left field and the end IP address in the right field to define a range of IP addresses; or enter an IP address in the left field only to define a single IP address.
Remote Port Range	Enter the remote port range to activate the QoS rule. Enter a single port number e.g. 110 or a range of port numbers e.g. 110-120
Traffic Type	Select traffic type as an alternative to specifying a port range above.
Protocol	Select a "TCP" or "UDP" protocol type.
Save	Click 'add' button to add a new QoS rule (detailed instructions will be given below).
Reset	If you want to erase all values you just entered. Click 'Reset'

QoS rule entries will be listed in the "Current QoS Table" as shown below. Select a rule using the "Select" checkbox.



When using the "Edit" button only one rule can be selected each time.




QoS rules will be processed in the order that they are listed i.e. the rule at the top of the list will be applied first, and then the second rule etc. The order can be adjusted using the "Move Up/Down" buttons.

Current QoS Table :

Priority	Rule Name	Upload Bandwidth	Download Bandwidth	Select
----------	-----------	------------------	--------------------	--------

Edit	Edit a selected rule.
Delete Selected/ Delete All	Delete selected or all entries from the table.
Move Up/Down	Move selected rule up or down the list.

III-3-8. Advanced

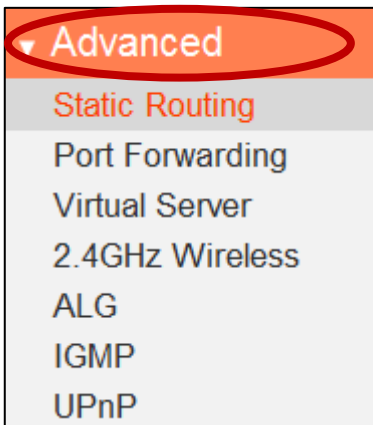

Advanced features of the BR-6428nS V2/nC can be configured from the “Advanced” menu.

III-3-8-1. Static Routing

Static routing is a method of configuring path selection of routers, characterized by the absence of communication between routers regarding the current topology of the network. The opposite of static routing is dynamic routing, sometimes also referred to as adaptive routing.

You can configure static routing and manually add routes to the routing table on this page.

Static Routing

Enable Static Routing

Destination LAN IP	Subnet Mask	Default Gateway	Hop Count	Interface
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	LAN <input type="button" value="v"/>

Current Static Routing Table :

NO	Destination LAN IP	Subnet Mask	Default Gateway	Hop Count	Interface	Select
----	--------------------	-------------	-----------------	-----------	-----------	--------

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Enable Static Routing	Check/uncheck the box to enable/disable static routing.
Destination LAN IP	Enter the destination network's IP address.
Subnet Mask	Enter the subnet mask of the destination network.
Default Gateway	Enter the default gateway of the destination network.
Hop Count	Enter the hop count (the distance between destination network and this broadband router) here.
Interface	Enter the interface which leads to destination network.
Add	Add the route to the current static routing table.
Clear	Clear all fields.

III-3-8-2. Port Forwarding

This function allows you to redirect a single port or consecutive ports of an internet IP address to the same port of a local IP address. The port number(s) of the internet IP address and local IP address must be the same.

If the port number of the internet IP address and local IP address is different, please use the "Virtual Server" function instead.

Port Forwarding

Enable Port Forwarding

Private IP	Computer Name	Type	Port Range	Comment
<input style="width: 100%;" type="text"/>	<< ----Select---- >>	Both >	<input style="width: 50%;" type="text"/> - <input style="width: 50%;" type="text"/>	<input style="width: 100%;" type="text"/>

Current Port Forwarding Table :

NO	Computer Name	Private IP	Type	Port Range	Comment	Select

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Private IP	Enter the IP address of the computer on the local network.
Computer Name	Windows computers on the local network will be listed here – select a computer from the list and click << to automatically add the IP address to the “Private IP” field.
Type	Select the type of connection, “TCP”, “UDP” or “Both”.
Port Range	Input the starting port number in the left field, and input the ending port number in the right field. If you only want to redirect a single port number, only enter a port number in the left field.
Comment	Enter a comment for reference or identification.

III-3-8-3. Virtual Server

This function allows you to set up an internet service on a local computer, without exposing the local computer to the internet. You can also build various sets of port redirection, to provide various internet services on different local computers via a single internet IP address.

Virtual Server

Enable Virtual Server

Private IP	Computer Name	Private Port	Type	Public Port	Comment
<input type="text"/>	<< ----Select----	<input type="text"/>	Both	<input type="text"/>	<input type="text"/>

Current Virtual Server Table :

NO	Computer Name	Private IP	Private Port	Type	Public Port	Comment	Select

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Private IP	Specify the IP address of the computer on your local network.
Computer Name	Select the name of a Windows computer from the drop-down menu and click << to auto-input its IP address in the "Private IP" field.
Private Port	Specify the private port you wish to use on the computer in your local network.
Type	Select the type of Internet Protocol.
Public Port	Specify a public port to access the computer on your local network.
Comment	Enter a comment for reference or identification.

III-3-8-4. 2.4GHz Wireless

These settings are for experienced users only. Please do not change any of the values on this page unless you are already familiar with these functions.

2.4GHz Wireless

Wireless Module Enable

Fragment Threshold (256-2346)

RTS Threshold (0-2347)

Beacon Interval (20-1024 ms)

DTIM Period (1-10)

Data Rate ▾

N Data Rate ▾

Channel Width Auto 20/40 MHZ 20 MHZ

Preamble Type Short Preamble Long Preamble

CTS Protect Auto Always None

Tx Power ▾

WMM Enable Disable

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Fragment Threshold	Set the Fragment threshold of the wireless radio. The default value is 2346.
RTS Threshold	Set the RTS threshold of the wireless radio. The default value is 2347.
Beacon Interval	Set the beacon interval of the wireless radio. The default value is 100.
DTIM Period	Set the DTIM period of wireless radio. The default value is 3.
Data Rate	Set the wireless data transfer rate. The default is set to auto.
N Data Rate	Set the data rate of 802.11n. The default is set to auto .
Channel Width	Select wireless channel width (bandwidth used by wireless signals from the device) – the recommended value is Auto 20/40MHz.

Preamble Type	Set the wireless radio preamble type. The default value is “Short Preamble”.
CTS Protect	Enabling this setting will reduce the chance of radio signal collisions between 802.11b and 802.11g wireless access points. It’s recommended to set this option to “Auto”.
Tx Power	Set the power output of the wireless radio. You may not require 100% output power. Setting a lower power output can enhance security since potentially malicious/unknown users in distant areas will not be able to access your signal.
WMM	WMM (Wi-Fi Multimedia) technology can improve the performance of certain network applications, such as audio/video streaming, network telephony (VoIP) and others. When WMM is enabled, the device will prioritize different kinds of data and give higher priority to applications which require instant responses for better performance.

III-3-8-5. ALG

Application Layer Gateway (ALG) is a network security gateway which supports specific network applications such as gaming and instant messaging. ALG enables these applications to communicate with their server.

ALG


Enable	Name	Comment
<input checked="" type="checkbox"/>	FTP	Support for FTP
<input checked="" type="checkbox"/>	H323	Support for H323/netmeeting
<input checked="" type="checkbox"/>	IPsec	Support for IPsec pass-through
<input checked="" type="checkbox"/>	PPTP	Support for PPTP
<input checked="" type="checkbox"/>	L2TP	Support for L2TP passthrough
<input checked="" type="checkbox"/>	SIP	SupSIP

Save Settings

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

III-3-8-6. IGMP

IGMP is a communications protocol used to establish multicast group memberships. It allows for a more efficient use of resources and better performance for applications such as IPTV video streaming.

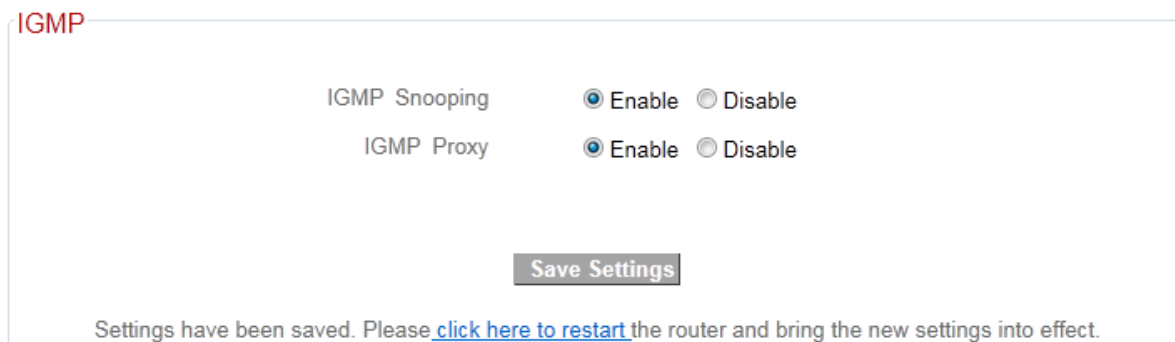


The screenshot shows the IGMP configuration page. At the top left, the word "IGMP" is written in red. Below it, there are two settings: "IGMP Snooping" and "IGMP Proxy". Each setting has two radio buttons: "Enable" (which is selected) and "Disable". Below these settings is a "Save Settings" button. At the bottom of the page, a message states: "Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect."

IGMP Snooping	IGMP snooping monitors traffic between hosts and multicast routers to facilitate bandwidth conservation. Select enable or disable.
IGMP Proxy	IGMP proxy enables intelligent multicast forwarding based on IGMP snooping information. Select enable or disable.

 ***It is recommended to set “IGMP Snooping” and “IGMP Proxy” to “Enable”.***


III-3-8-7. UPnP

Universal plug-and-play (UPnP) is a set of networking protocols which enables network devices to communicate and automatically establish working configurations with each other. Select “Enable” or “Disable”.

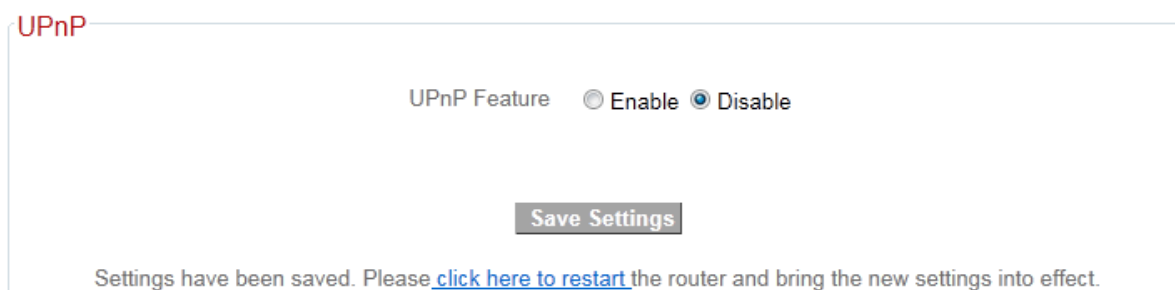

The screenshot shows the UPnP configuration page. At the top left, the word "UPnP" is written in red. Below it, there is one setting: "UPnP Feature". It has two radio buttons: "Enable" and "Disable" (which is selected). Below this setting is a "Save Settings" button. At the bottom of the page, a message states: "Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect."

III-3-9. Administration

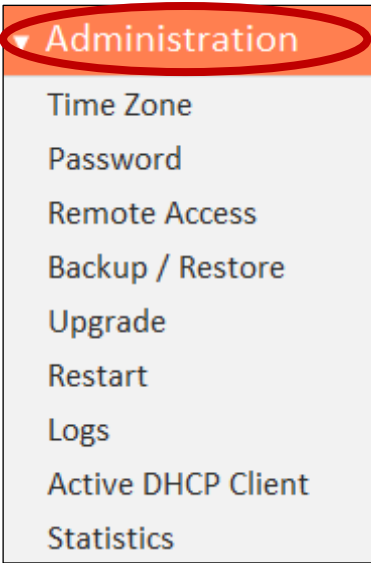

Various administrative functions can be accessed from the “Administration” menu.

III-3-9-1. Time Zone

Time Zone

Set Time Zone: (GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London ▼

Time Server Address: pool.ntp.org ▼

Daylight Savings: Enable Function
 January ▼ 1 ▼ To January ▼ 1 ▼

Save Settings

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Set Time Zone	Select the time zone of your country or region.
Time Server Address	The travel router supports NTP (Network Time Protocol) for automatic time and date setup. Input the host name of the IP server manually.
Daylight Saving	If your country/region uses daylight saving time, please check the “Enable Function” box, and select the start and end date.

III-3-9-2. Password

You can change the password used to login to the browser-based configuration interface here. It is advised to do so for security purposes.



Please make a note of the new password. In the event that you forget the password and are unable to login to the browser based configuration interface, see [II-5. Reset to factory default settings](#) for how to reset the device.

Password

Current Password

New Password

Confirmed Password

Current Password	Enter your current password.
New Password	Enter your new password.
Confirmed Password	Confirm your new password.

III-3-9-3. Remote Access

Check “Enabled” to enable the remote access feature and then enter the appropriate values.

Remote Access

Host IP Address

Port

Enabled

Save Settings

Settings have been saved. Please [click here to restart](#) the router and bring the new settings into effect.

Host IP Address	Specify the IP address which is allowed remote access.
Port	Specify a port number (0–65535) used for remote access.

III-3-9-4. Backup/Restore

Backup / Restore

Backup Settings

Restore Settings

Restore to Factory Default

Backup Settings	Click “Save” to save the current settings on your computer as config.bin file.
Restore Settings	Click “Browse” to find a previously saved config.bin file and then click “Upload” to replace your current settings.
Restore to Factory Default	Click “Reset” to restore settings to the factory default. A pop-up window will appear and ask you to confirm and enter your log in details. Enter your username and password and click “Ok”. See below for more information.

III-3-9-5. Upgrade

The upgrade page allows you to upgrade the system firmware to a more recent version. You can download the latest firmware from the Edimax website. After the upgrade, the system will restart.



Do not switch off or disconnect the device during a firmware upgrade, as this could damage the device. It is recommended that you use a wired Ethernet connection for a firmware upgrade.

Upgrade

III-3-9-6. Restart

In the event that the router malfunctions or is not responding, then it is recommended that you restart the device.

Restart

In the event that the system stops responding correctly or stops functioning, you can perform a system restart. Your settings will not be changed. To restart, click on the APPLY button below. You will be asked to confirm your decision. The restart will be complete when the Internet LED light stops blinking.

Apply

III-3-9-7. Logs

You can view the system log and security log. Use the drop down menu in the top-right corner to select which log to view.

System Log

System Log

```
Jul 9 19:18:40 (none) syslog.info syslogd started: BusyBox v1.11.1
Jul 12 01:28:20 (none) user.notice syslog: Note: adding VIF, idx=0 FI flags=
Jul 12 01:28:20 (none) user.notice syslog: Note: adding VIF, idx=1 FI flags=
```

Save Clear Refresh

Security Log

Security Log

```
[2013-07-09 19:18:52]: start Dynamic IP
[2013-07-09 19:18:55]: [SNTP]: connect to TimeServer 59.124.196.83 ...
[2013-07-12 01:28:11]: [SNTP]: connect success!
[2013-07-12 01:28:11]: [SNTP]: set time to 2013-07-12 01:28:11
[2013-07-12 01:28:12]: [Firewall]: WAN1 IP is 192.168.222.102
[2013-07-12 01:28:12]: [Firewall]: WAN2 IP is 0.0.0.0
[2013-07-12 01:28:12]: [Firewall]: WAN3 IP is 0.0.0.0
[2013-07-12 01:28:12]: [Firewall]: setting firewall...
[2013-07-12 01:28:13]: [SNTP]: connect to TimeServer 59.124.196.83 ...
```

Save Clear Refresh

Save	Click “Save” to save the log on your computer as .txt file.
Clear	Click “Clear” to clear/erase the existing log.
Refresh	Click “Refresh” to refresh the log and update any activity.

III-3-9-8. Active DHCP Client

Information about active DHCP clients is shown in the table, which displays the DHCP server assigned IP address, MAC address and time expired for each computer or device on the local network.

Active DHCP Client

IP Address	MAC Address	Time Expired (Sec)
192.168.2.100	b8:ca:3a:c7:16:bd	forever

III-3-9-9. Statistics

Displays sent and received packet network statistics.

Statistics

2.4GHz Wireless	Sent Packets	4940
	Received Packets	134592
Ethernet LAN	Sent Packets	7529
	Received Packets	6903
Ethernet WAN	Sent Packets	4882
	Received Packets	5452

IV. Appendix

IV-1. Configuring your IP address

For first time access to the URL ***http://Edimax.Setup*** please ensure your computer is set to use a dynamic IP address. This means your computer can obtain an IP address automatically from a DHCP server. You can check if your computer is set to use a dynamic IP address by following [IV-1-1. How to check that your computer uses a dynamic IP address.](#)

Static IP users can also temporarily modify your computer's IP address to be in the same IP address subnet e.g. **192.168.2.x (x = 3 – 254)** as the BR-6428nS V2/nC in order to access ***http://Edimax.Setup***.



The BR-6428nS V2/nC's default IP address is 192.168.2.1.

The procedure for modifying your IP address varies across different operating systems; please follow the guide appropriate for your operating system in [IV-1-2. How to modify the IP address of your computer.](#)



Static IP users please make a note of your static IP before you change it.

You can assign a new IP address to the device which is within the subnet of your network during setup or using the browser based configuration interface (refer to [III-3-4. LAN](#)). Then you can access the URL ***http://Edimax.Setup*** in future without modifying your IP address.




Please remember to change your IP address back to its original value after the device is properly configured.

IV-1-1. How to check that your computer uses a dynamic IP address


Please follow the instructions appropriate for your operating system.

IV-1-1-1. Windows XP

1. Click the “Start” button (it should be located in the lower-left corner of your computer), then click “Control Panel”. Double-click the “Network and Internet Connections” icon, click “Network Connections”, and then double-click “Local Area Connection”. The “Local Area Connection Status” window will then appear, click “Properties”.

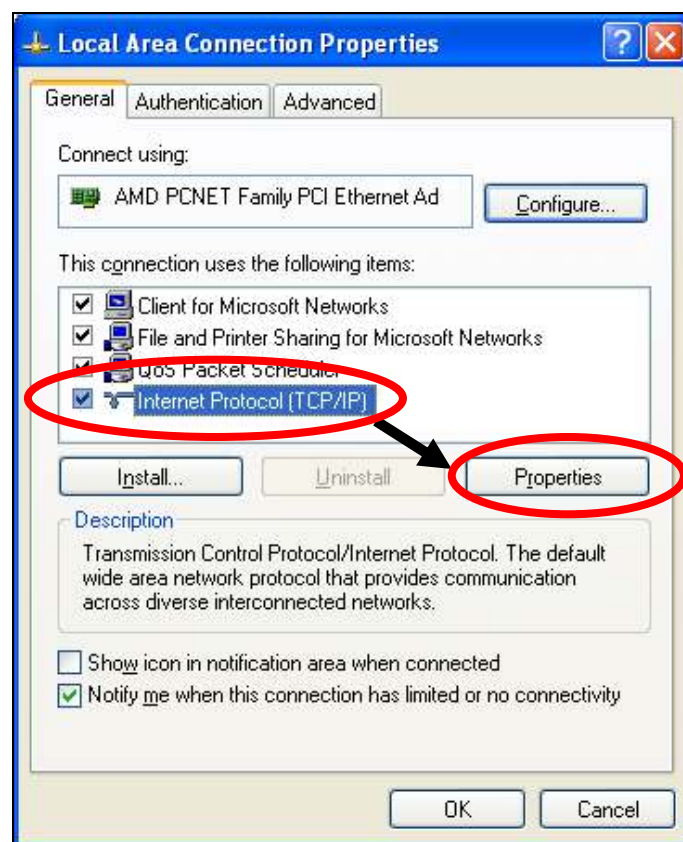


2. “Obtain an IP address automatically” and “Obtain DNS server address automatically” should be selected.

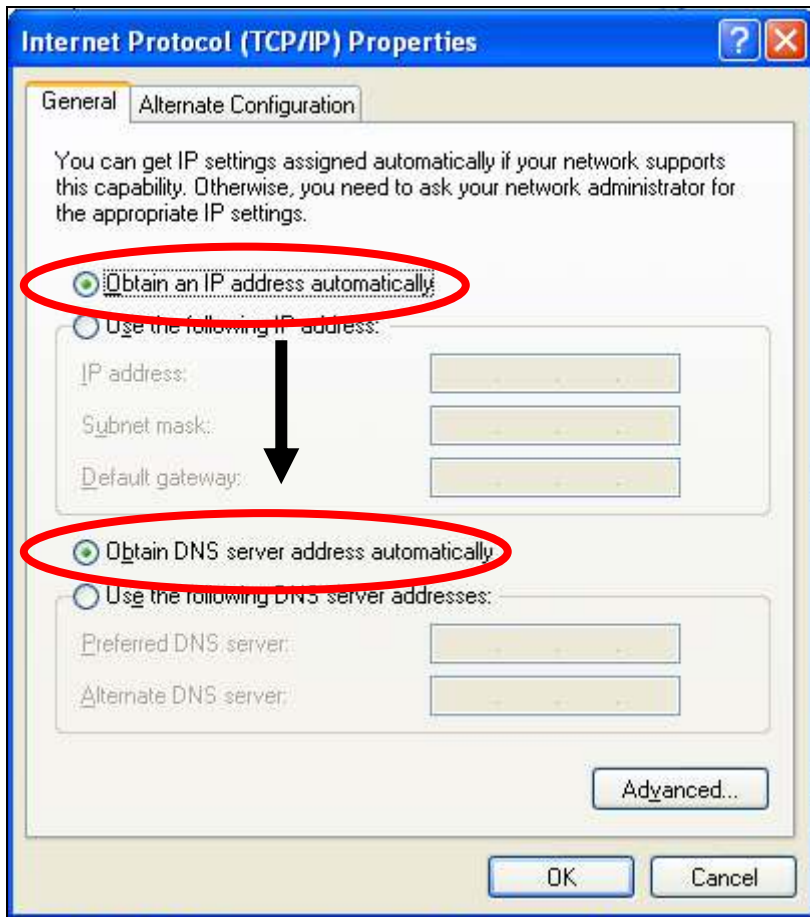


IV-1-1-2. Windows Vista

1. Click the “Start” button (it should be located in the lower-left corner of your computer), then click “Control Panel”. Click “View Network Status and Tasks”, then click “Manage Network Connections”. Right-click “Local Area Network”, then select “Properties”. The “Local Area Connection Properties” window will then appear, select “Internet Protocol Version 4 (TCP / IPv4)”, and then click “Properties”.

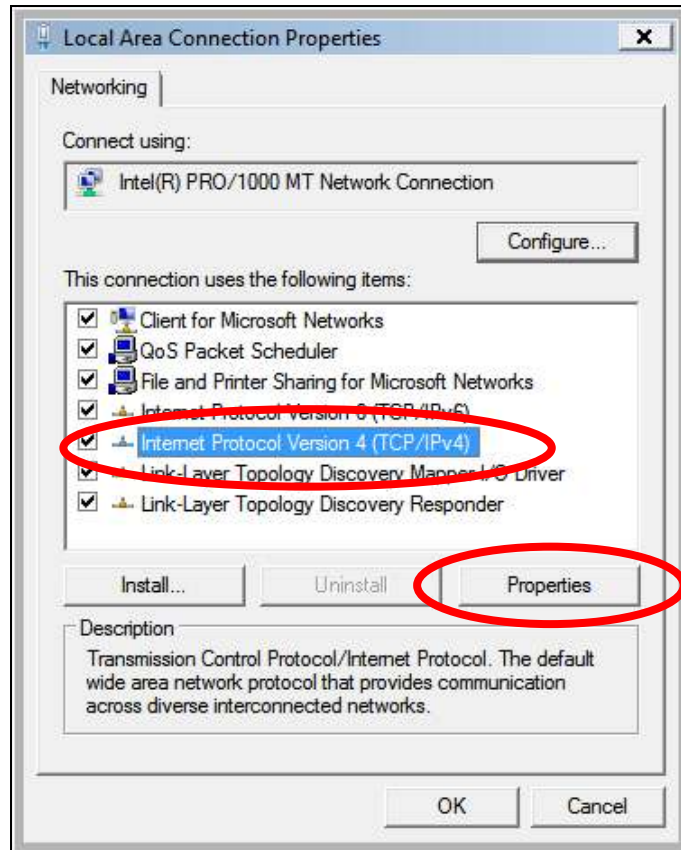


2. Select “Obtain an IP address automatically” and “Obtain DNS server address automatically” should be selected.

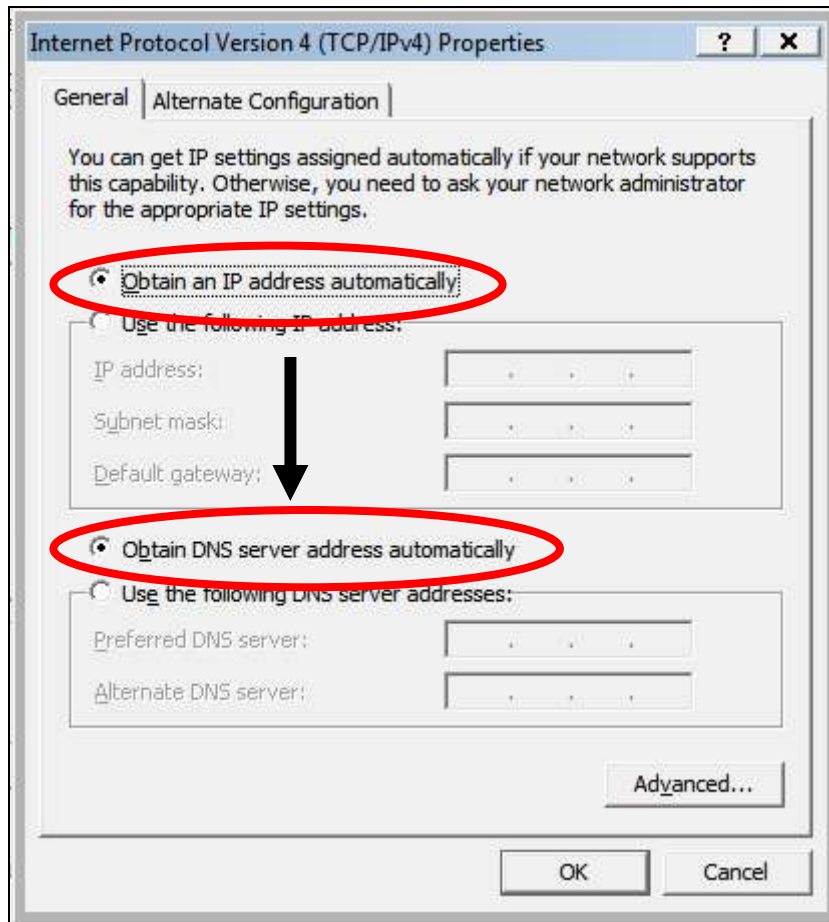


IV-1-1-3. Windows 7

1. Click the “Start” button (it should be located in the lower-left corner of your computer), then click “Control Panel”.

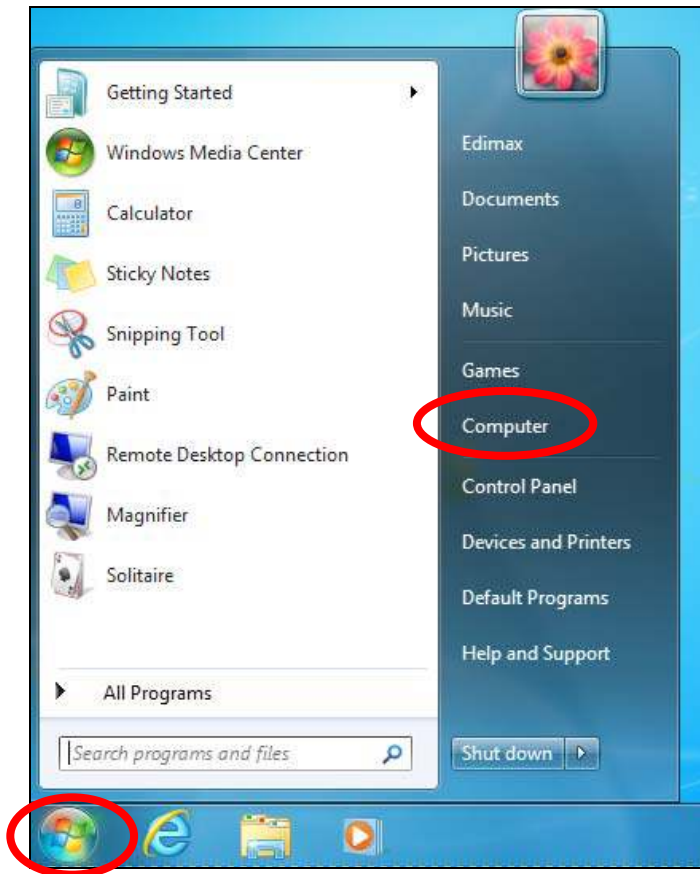

2. Under “Network and Internet” click “View network status and tasks”.

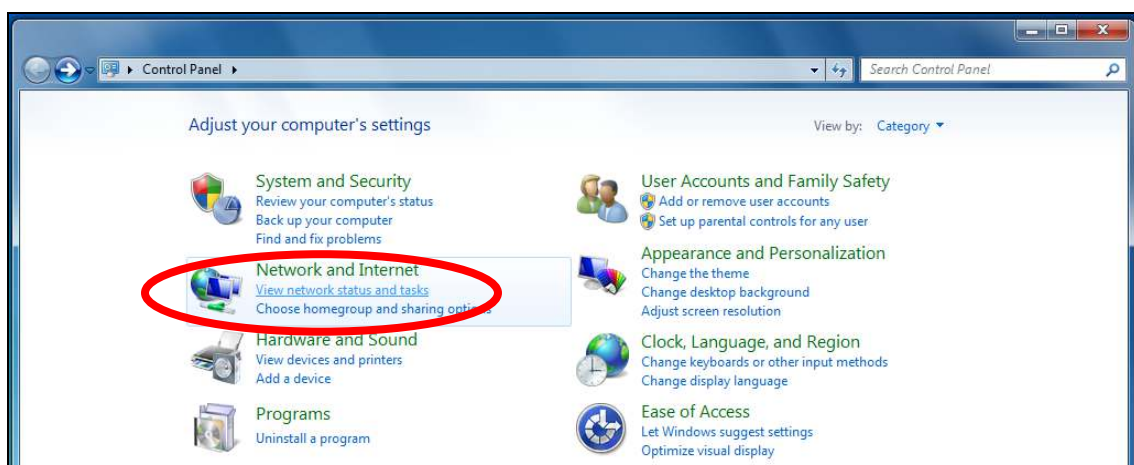

3. Click “Local Area Connection”.

View your basic network information and set up connections

TS-WIN7 (This computer) — Home network — Internet

View your active networks — Connect or disconnect

Home network
Home network

Access type: No Internet access
HomeGroup: Ready to create
Connections: **Local Area Connection**

4. Click “Properties”.

Local Area Connection Status

General

Connection

IPv4 Connectivity:	No Internet access
IPv6 Connectivity:	No network access
Media State:	Enabled
Duration:	02:08:52
Speed:	100.0 Mbps

Details...


Activity

	Sent	Received
Bytes:	951,332	4,398,184


Properties Disable Diagnose

Close

5. Select “Internet Protocol Version 4 (TCP/IPv4) and then click “Properties”.

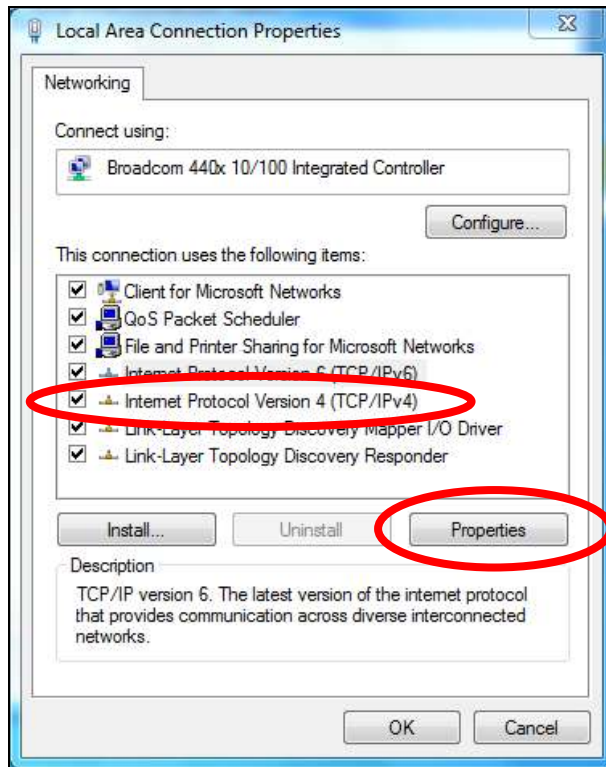


6. Select “Obtain an IP address automatically” and “Obtain DNS server address automatically” should be selected.

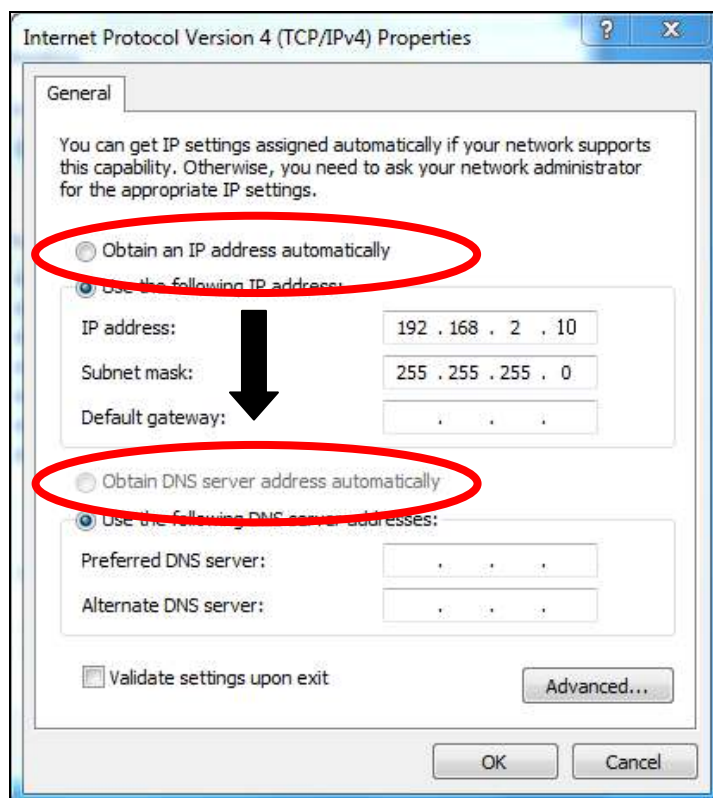


IV-1-1-4. Windows 8


1. From the Windows 8 Start screen, you need to switch to desktop mode. Move your cursor to the bottom left of the screen and click.

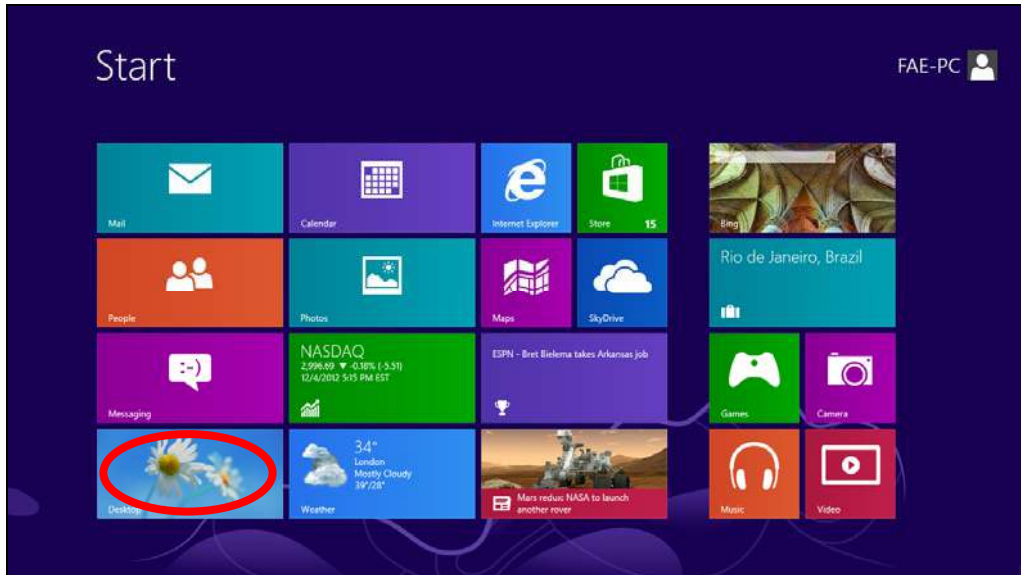


2. In desktop mode, click the File Explorer icon in the bottom left of the screen, as shown below.

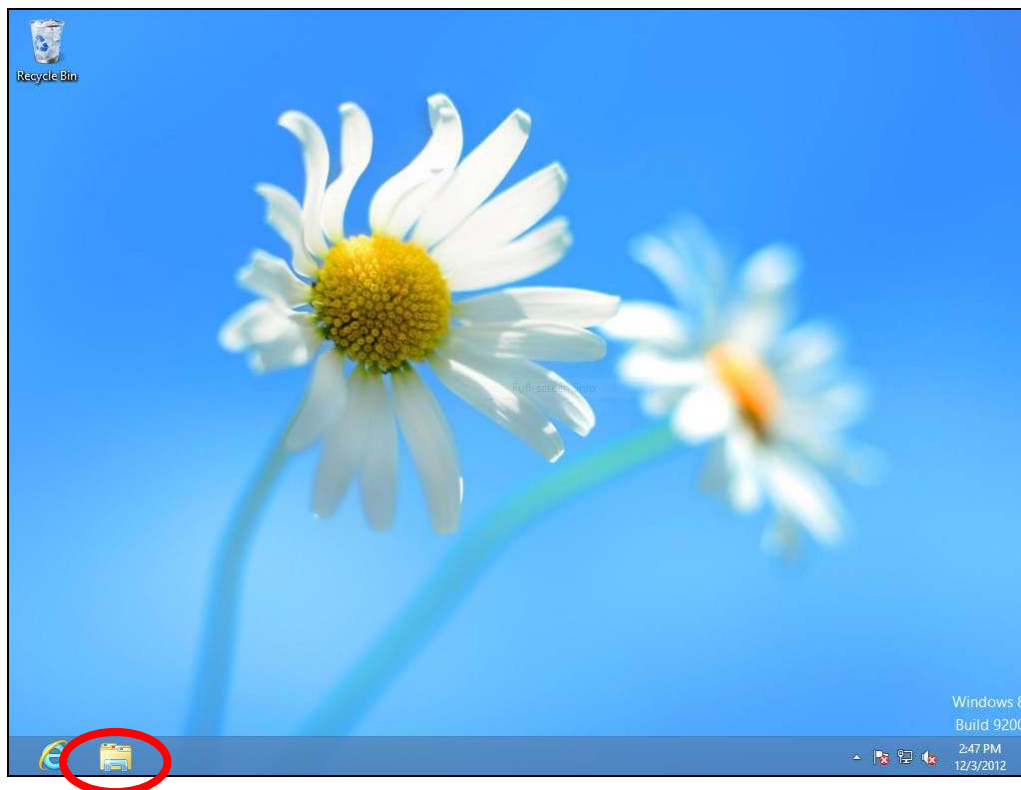


3. Right click "Network" and then select "Properties".

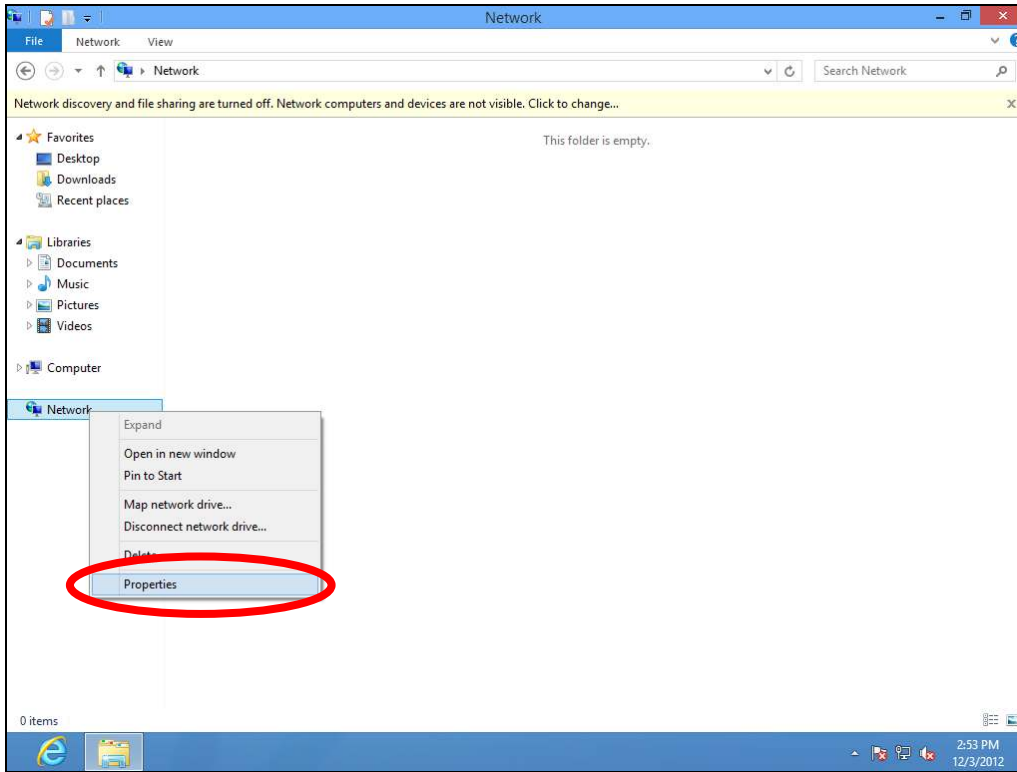


4. In the window that opens, select “Change adapter settings” from the left side.

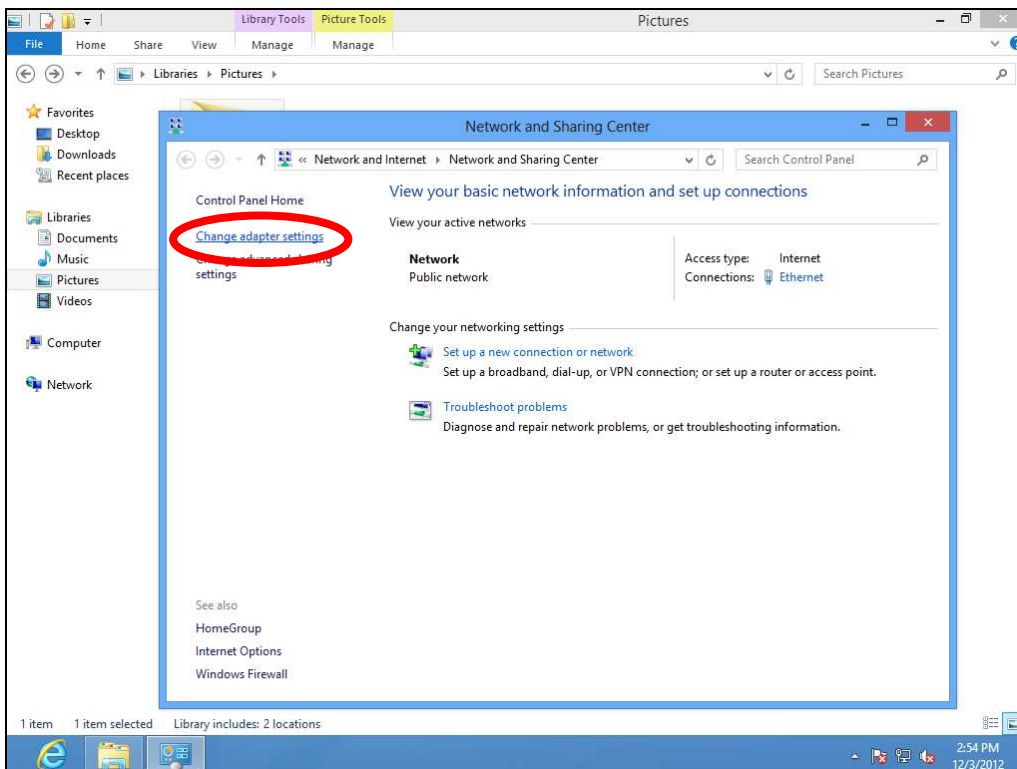


5. Choose your connection and right click, then select “Properties”.

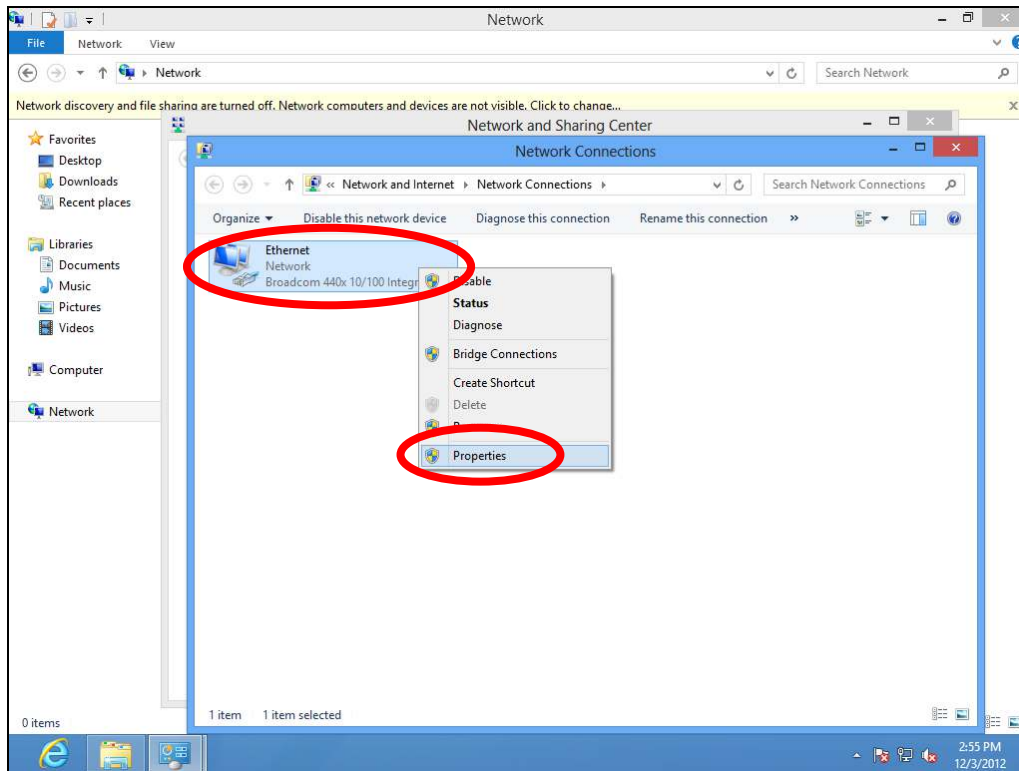

6. Select “Internet Protocol Version 4 (TCP/IPv4) and then click “Properties””.

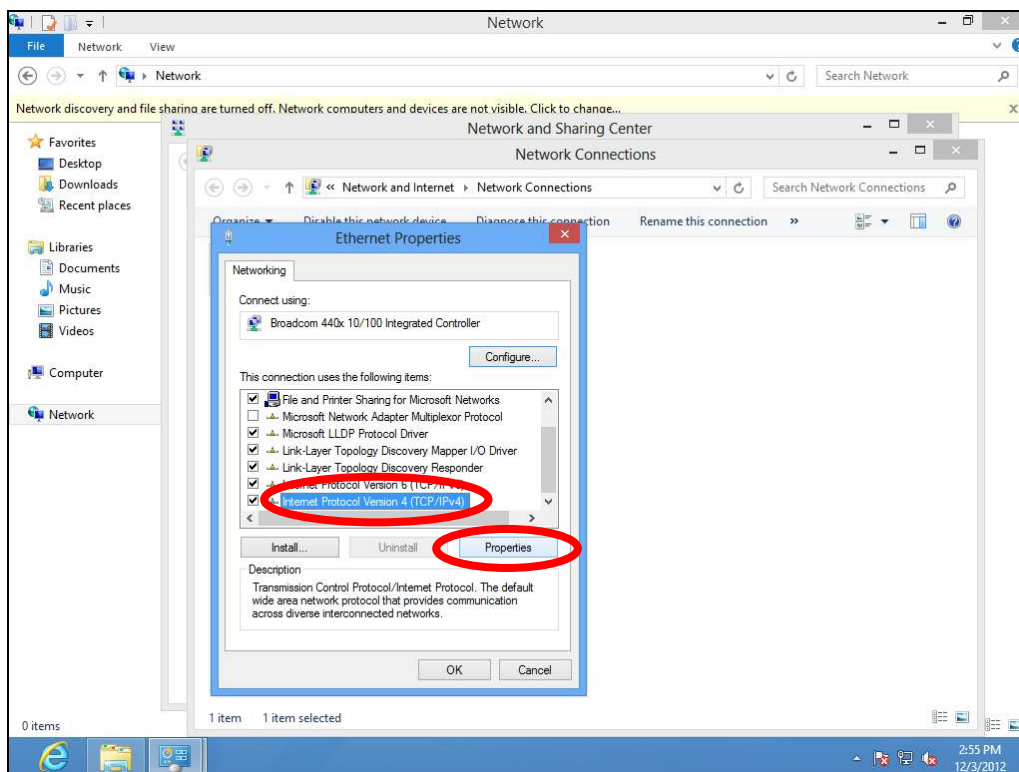


7. Select “Obtain an IP address automatically” and “Obtain DNS server address automatically” should be selected.

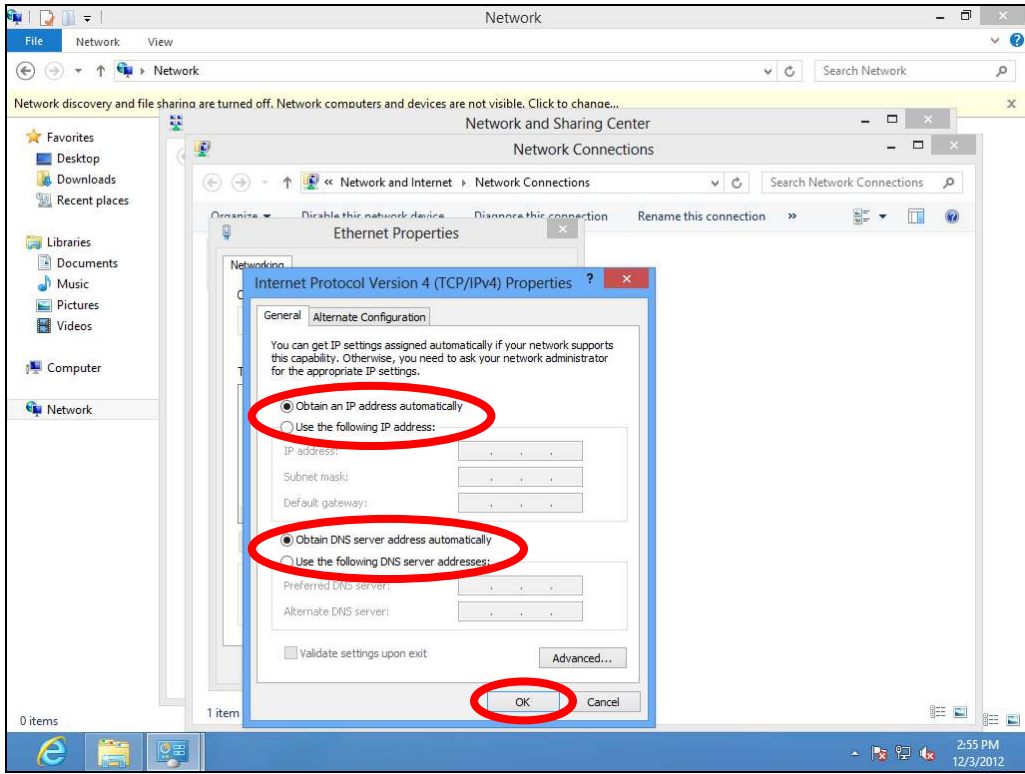

IV-1-1-5. Mac OS


1. Have your Macintosh computer operate as usual, and click on “System Preferences”.

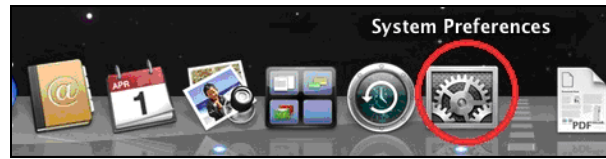


2. In System Preferences, click on “Network”.



3. Click on “Wi-Fi” in the left panel and then click “Advanced” in the lower right corner.

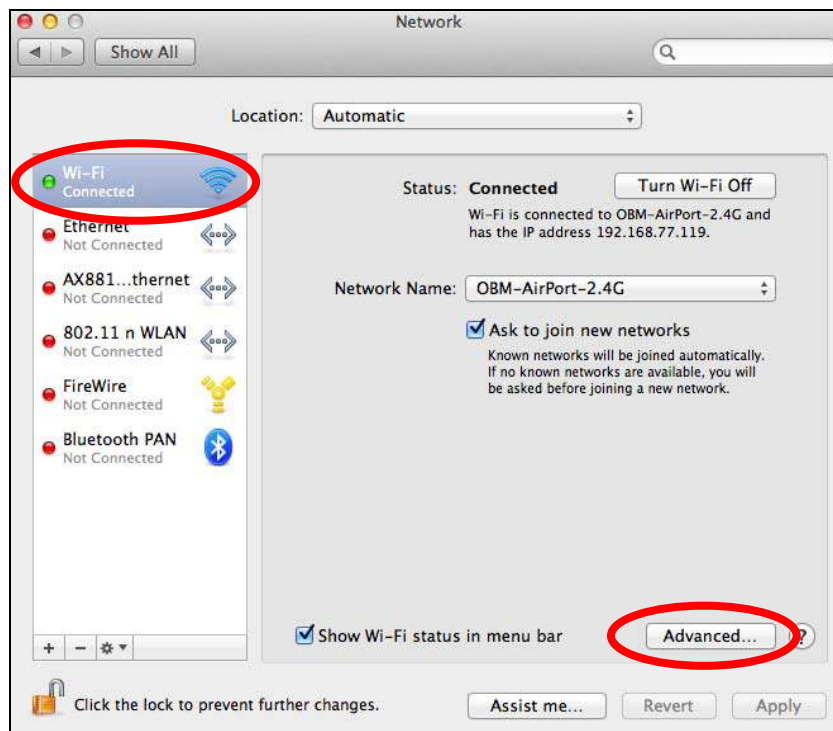

4. Select “TCP/IP” from the top menu and “Using DHCP” in the drop down menu labeled “Configure IPv4” should be selected.

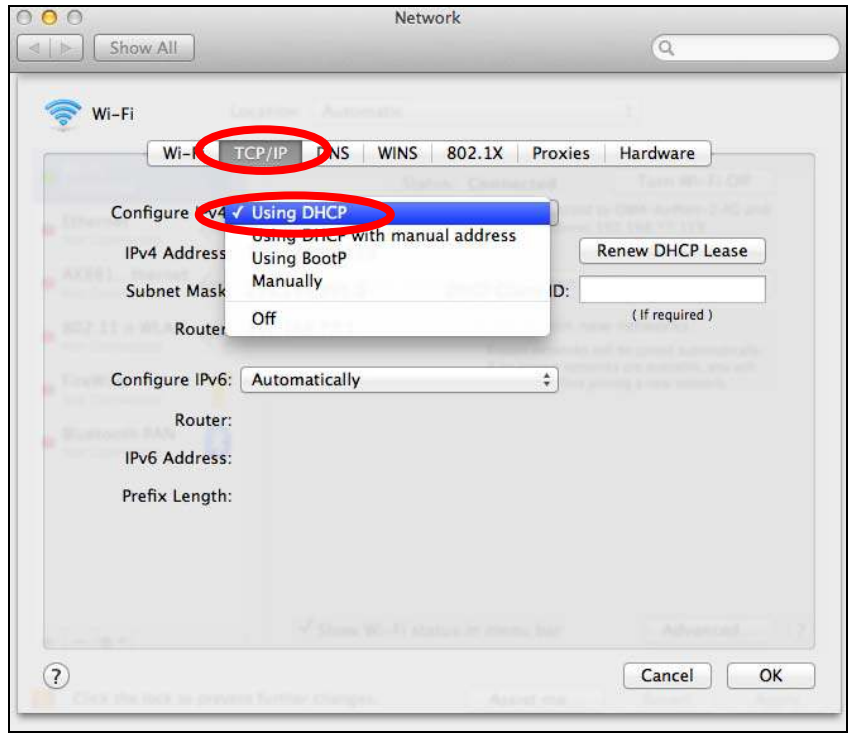


IV-1-2. How to modify the IP address of your computer

Please follow the instructions appropriate for your operating system. In the following examples we use the IP address **192.168.2.10** though you can use any IP address in the range **192.168.2.x (x = 3 – 254)** in order to access iQ Setup/browser based configuration interface.

 **Please make a note of your static IP before you change it.**

IV-1-2-1. Windows XP

1. Click the “Start” button (it should be located in the lower-left corner of your computer), then click “Control Panel”. Double-click the “Network and Internet Connections” icon, click “Network Connections”, and then double-click “Local Area Connection”. The “Local Area Connection Status” window will then appear, click “Properties”.

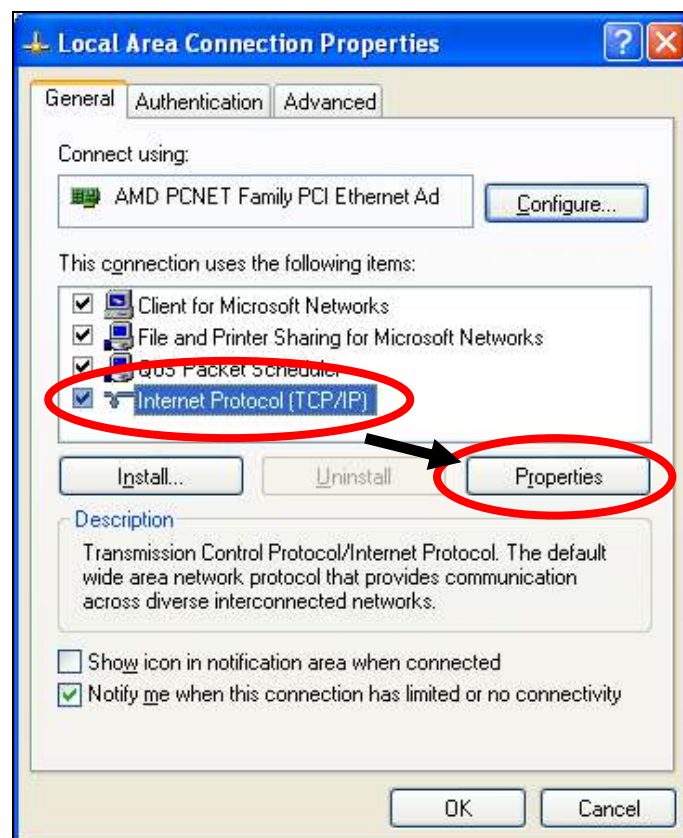

2. Select “Use the following IP address” and “Use the following DNS server addresses”, then input the following values:



Your existing static IP address will be displayed in the “IP address” field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.

IP address: 192.168.2.10


Subnet Mask: 255.255.255.0

Preferred DNS Server: 192.168.2.1


Click 'OK' when finished.

IV-1-2-2. Windows Vista

1. Click the “Start” button (it should be located in the lower-left corner of your computer), then click “Control Panel”. Click “View Network Status and Tasks”, then click “Manage Network Connections”. Right-click “Local Area Network”, then select “Properties”. The “Local Area Connection Properties” window will then appear, select “Internet Protocol Version 4 (TCP / IPv4)”, and then click “Properties”.

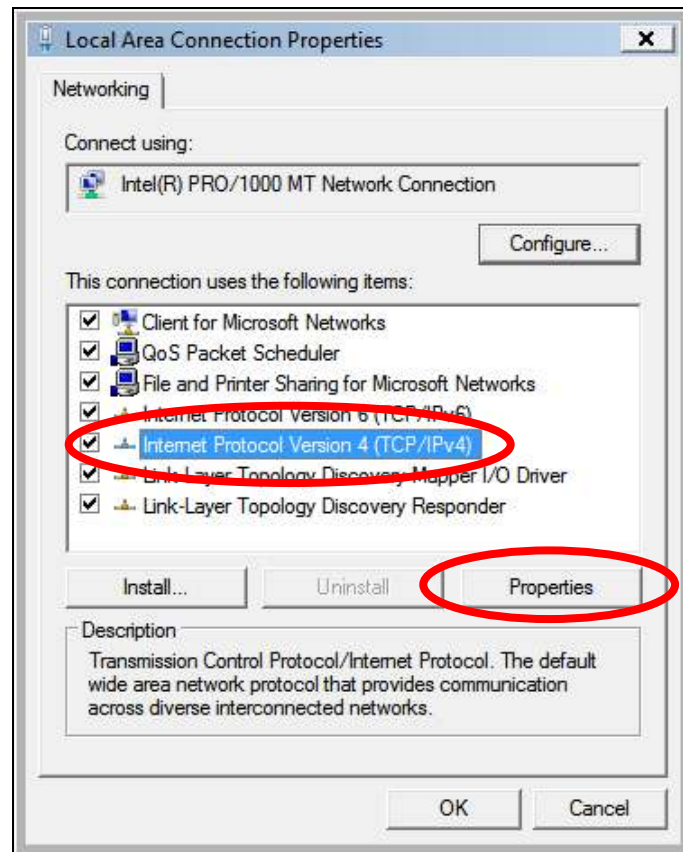

2. Select “Use the following IP address” and “Use the following DNS server addresses”, then input the following values:

 ***Your existing static IP address will be displayed in the “IP address” field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.***

IP address: 192.168.2.10


Subnet Mask: 255.255.255.0

Preferred DNS Server: 192.168.2.1


Click ‘OK’ when finished.

IV-1-2-3. Windows 7


1. Click the “Start” button (it should be located in the lower-left corner of your computer), then click “Control Panel”.

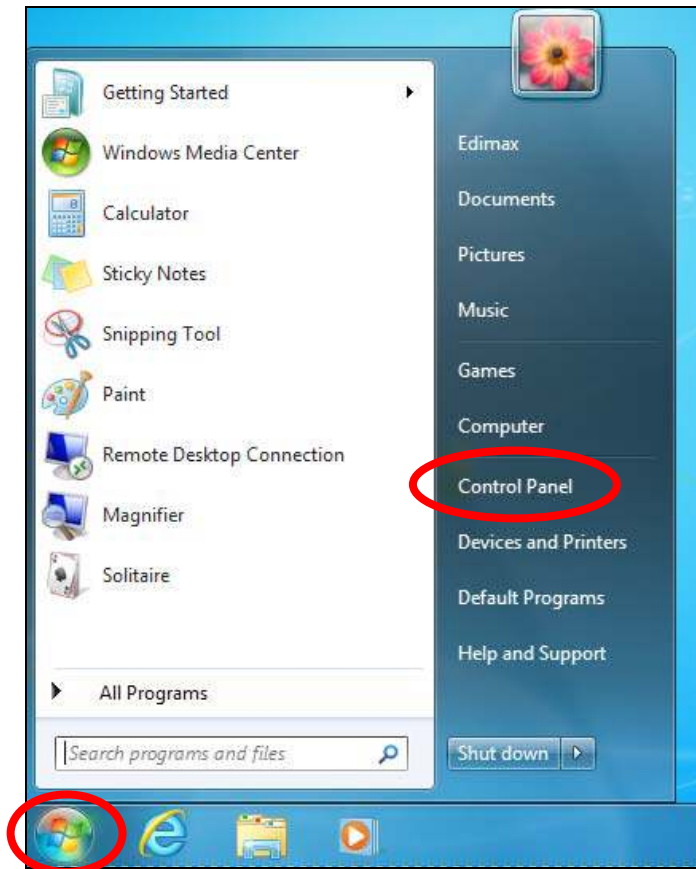


2. Under “Network and Internet” click “View network status and tasks”.

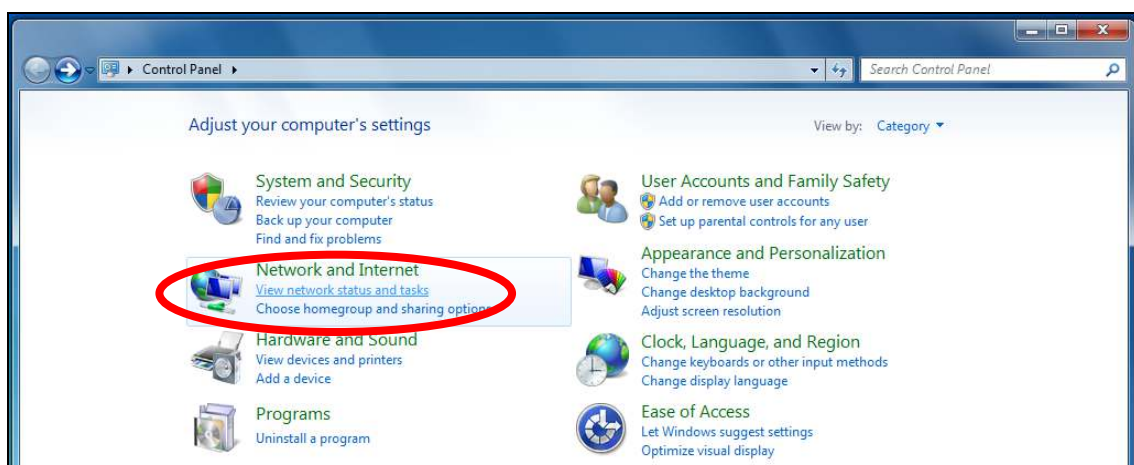


3. Click “Local Area Connection”.

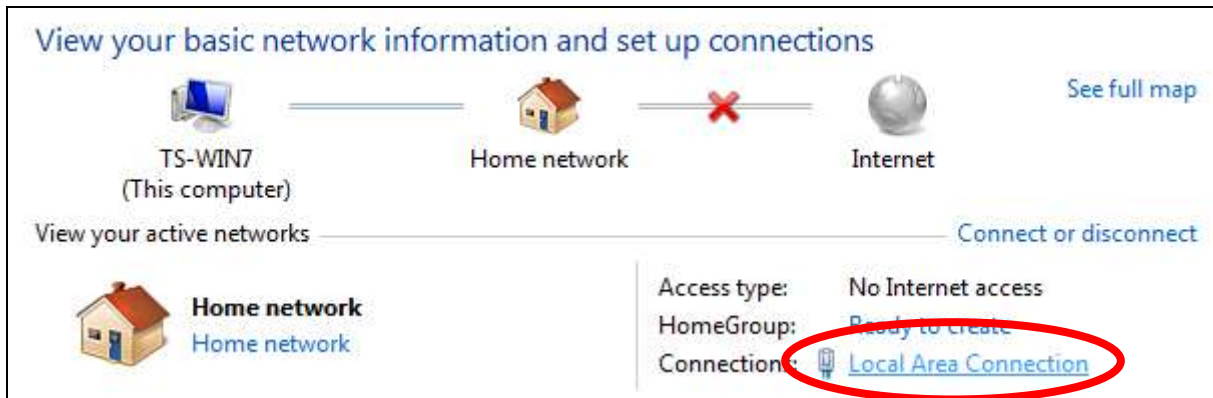

4. Click "Properties".

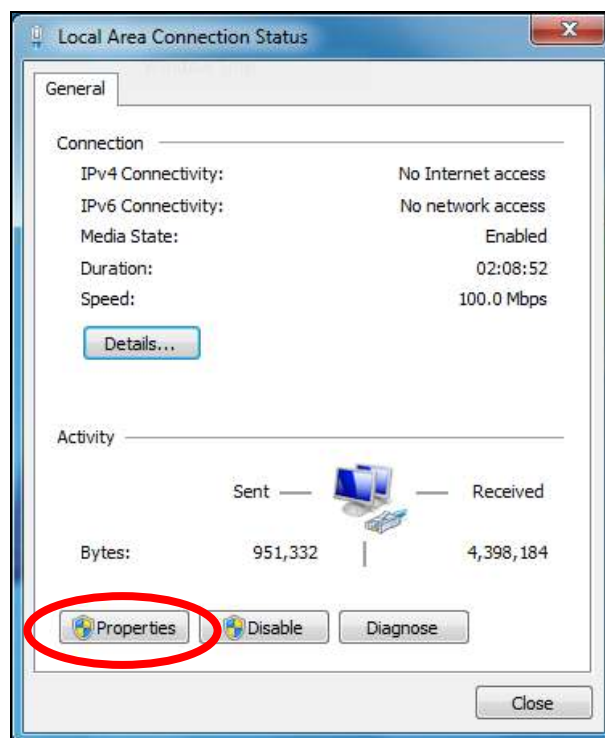

5. Select “Internet Protocol Version 4 (TCP/IPv4) and then click “Properties”.

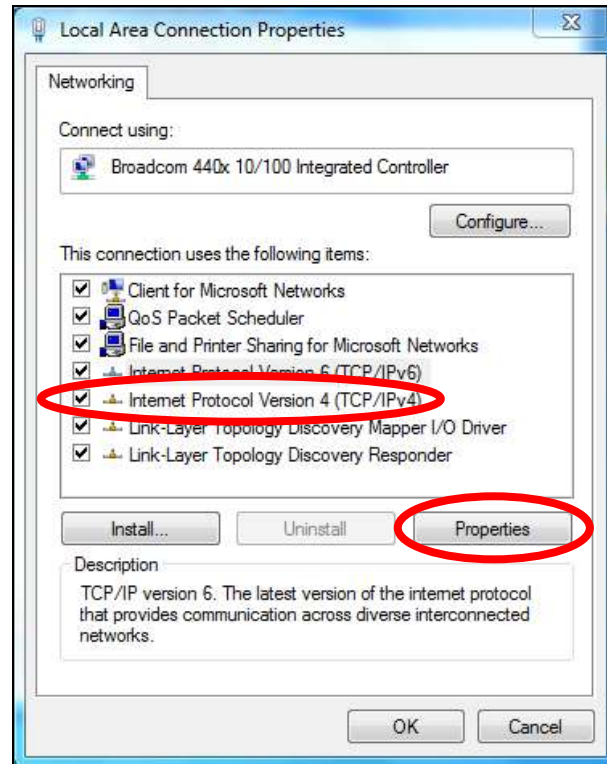

6. Select “Use the following IP address” and “Use the following DNS server addresses”, then input the following values:



Your existing static IP address will be displayed in the “IP address” field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.

IP address: 192.168.2.10


Subnet Mask: 255.255.255.0

Preferred DNS Server: 192.168.2.1


Click ‘OK’ when finished.

IV-1-2-4. Windows 8


1. From the Windows 8 Start screen, you need to switch to desktop mode. Move your cursor to the bottom left of the screen and click.

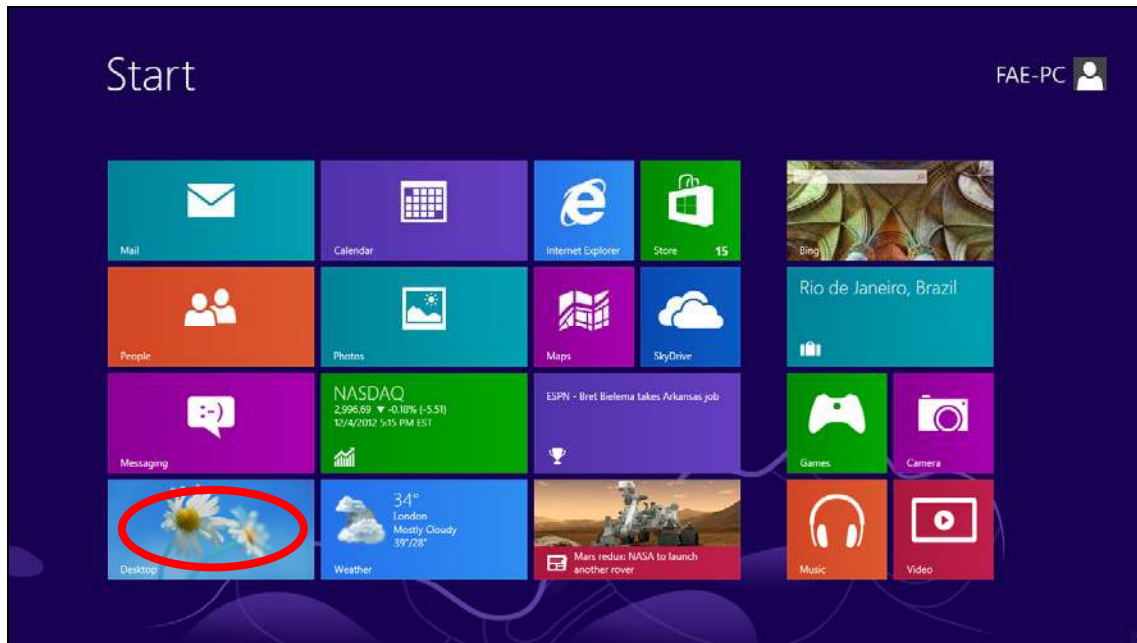


2. In desktop mode, click the File Explorer icon in the bottom left of the screen, as shown below.

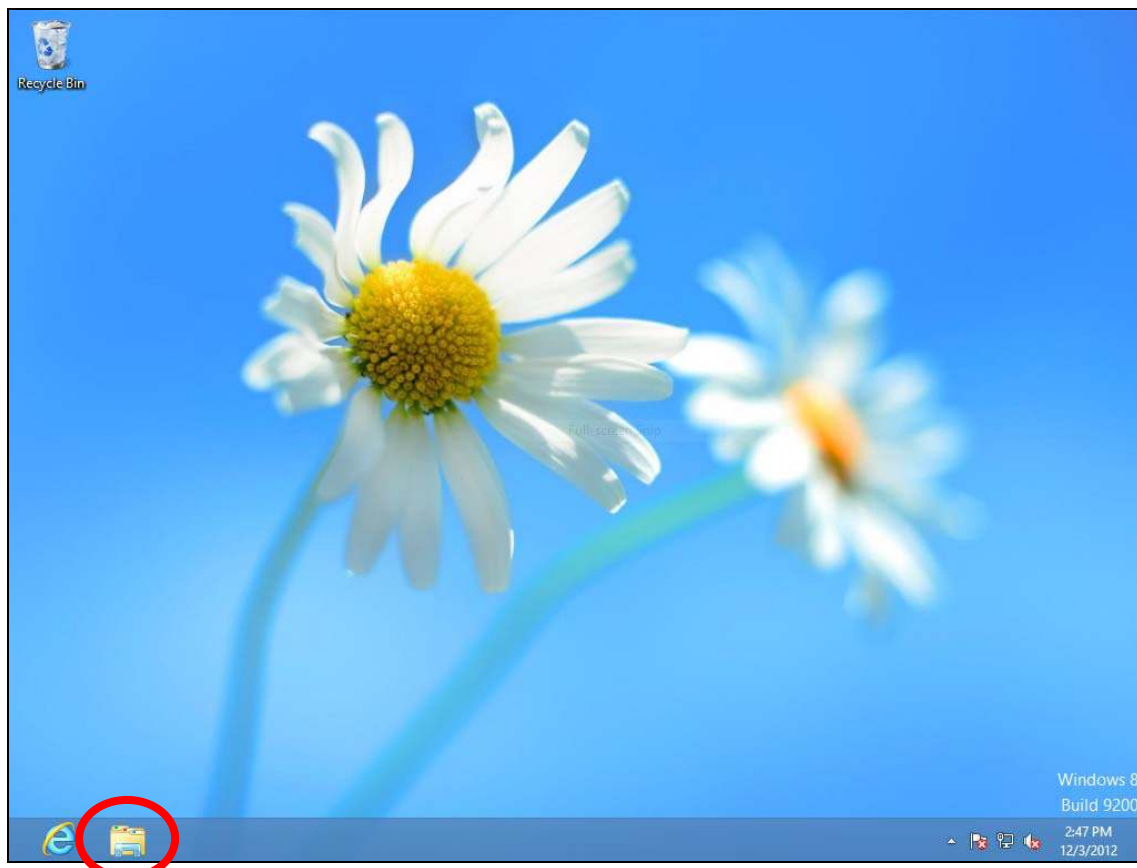


3. Right click “Network” and then select “Properties”.

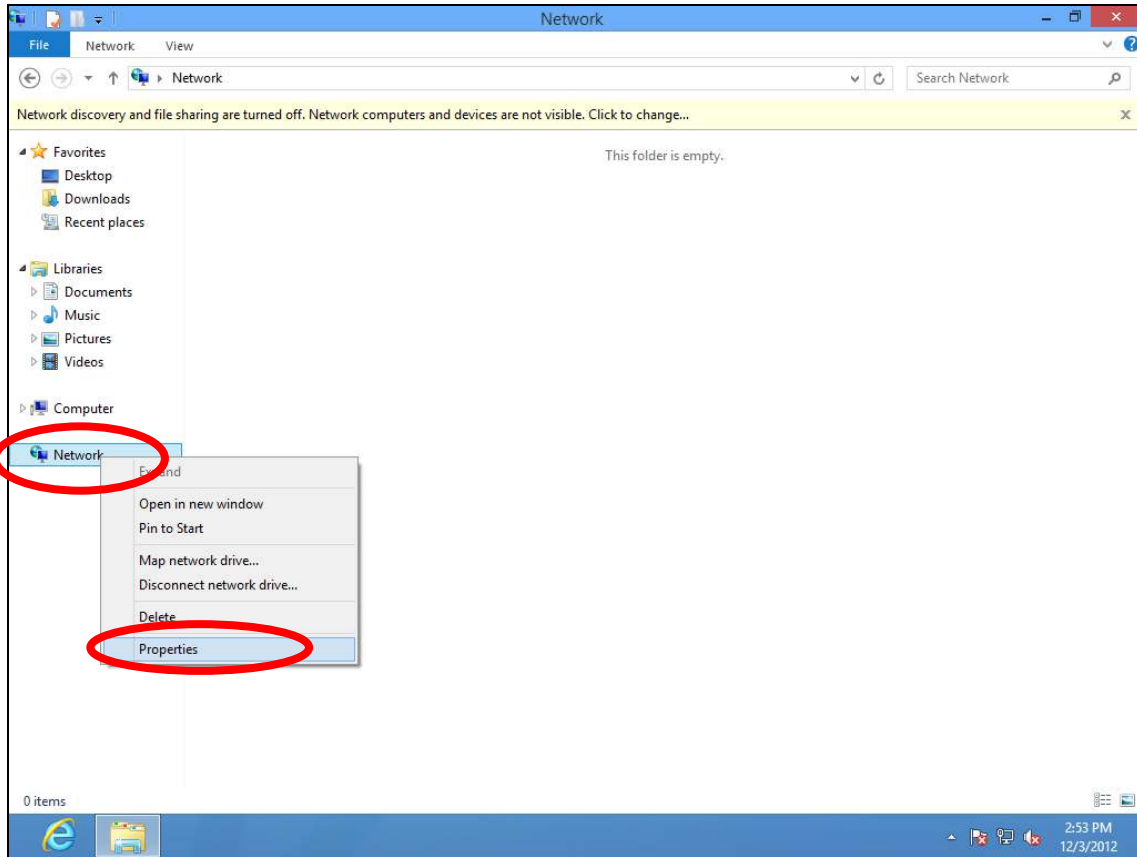


4. In the window that opens, select “Change adapter settings” from the left side.

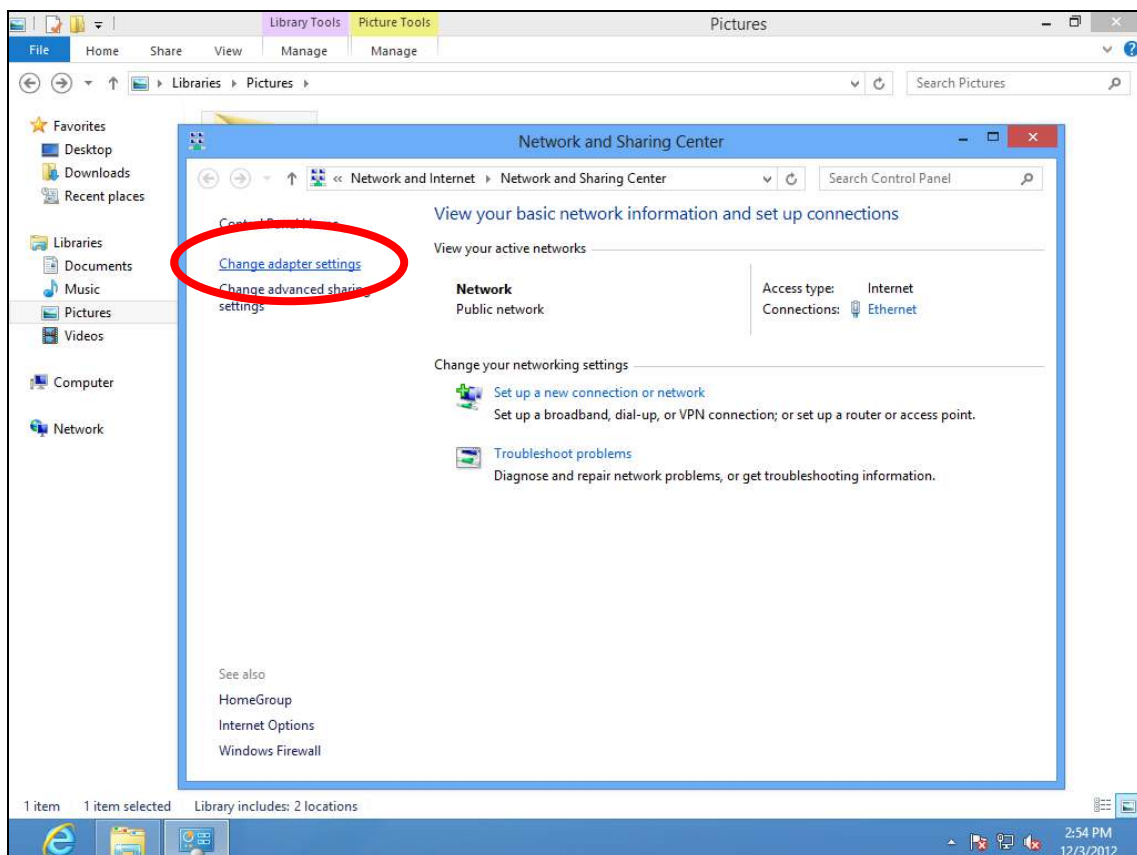

5. Choose your connection and right click, then select “Properties”.

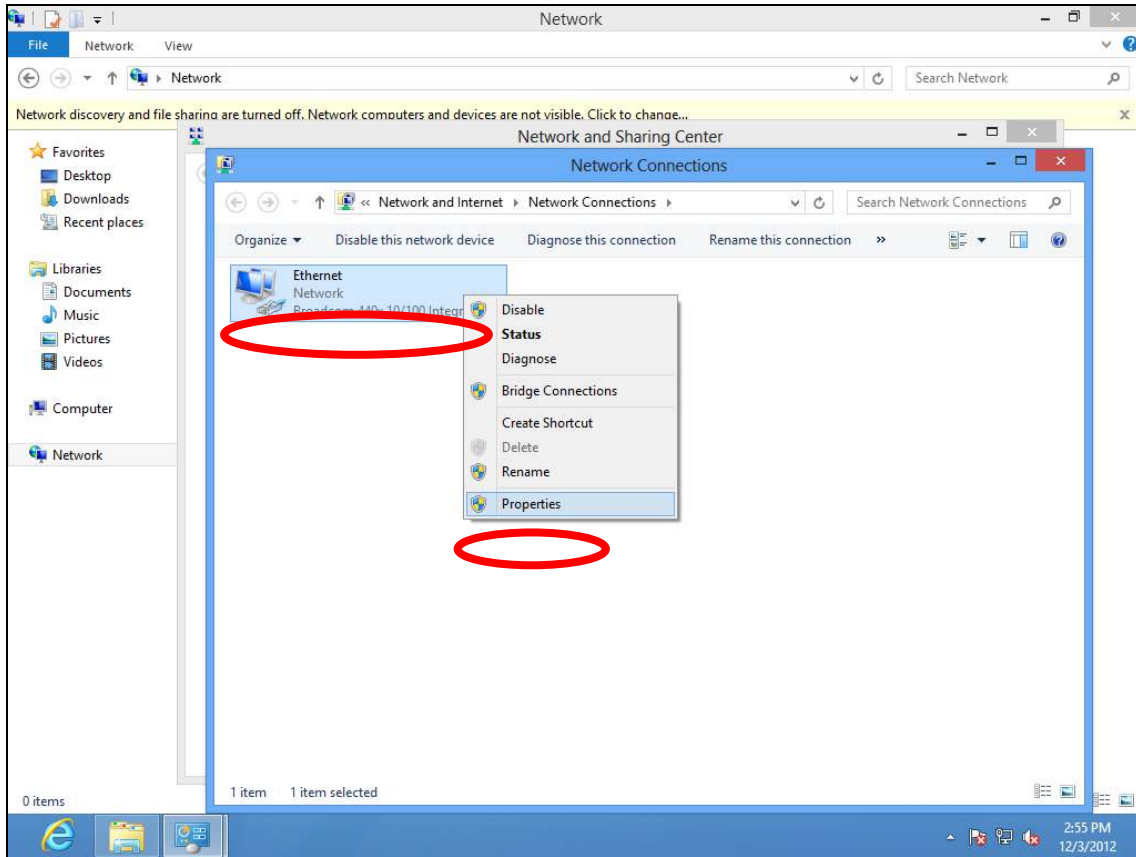

6. Select “Internet Protocol Version 4 (TCP/IPv4)” and then click “Properties”.

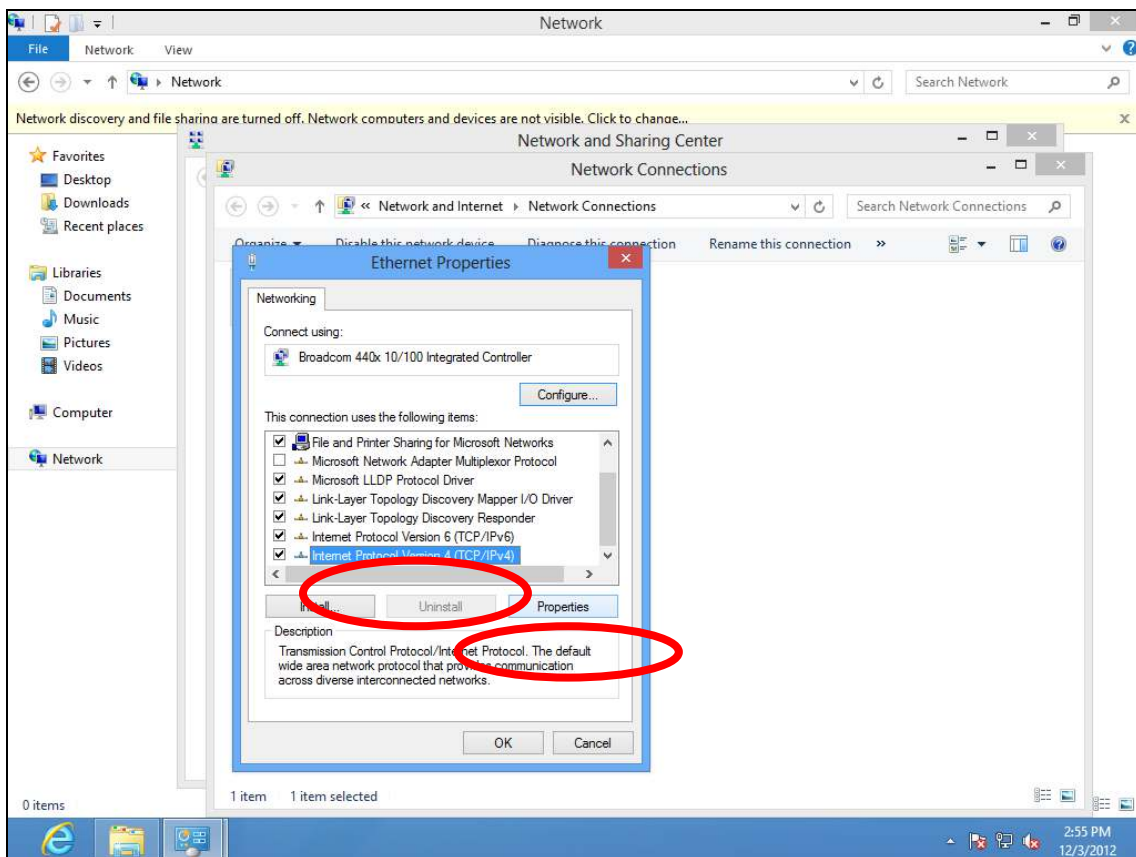

7. Select “Use the following IP address” and “Use the following DNS server addresses”, then input the following values:



Your existing static IP address will be displayed in the “IP address” field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.

IP address: 192.168.2.10


Subnet Mask: 255.255.255.0

Preferred DNS Server: 192.168.2.1

Click ‘OK’ when finished.

IV-1-2-5. Mac


1. Have your Macintosh computer operate as usual, and click on “System Preferences”

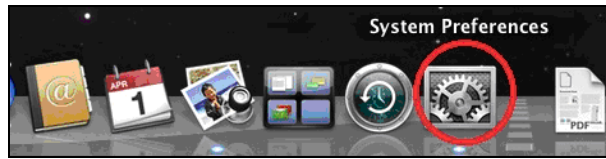


2. In System Preferences, click on “Network”.




3. Click on “Wi-Fi” in the left panel and then click “Advanced” in the lower right corner.

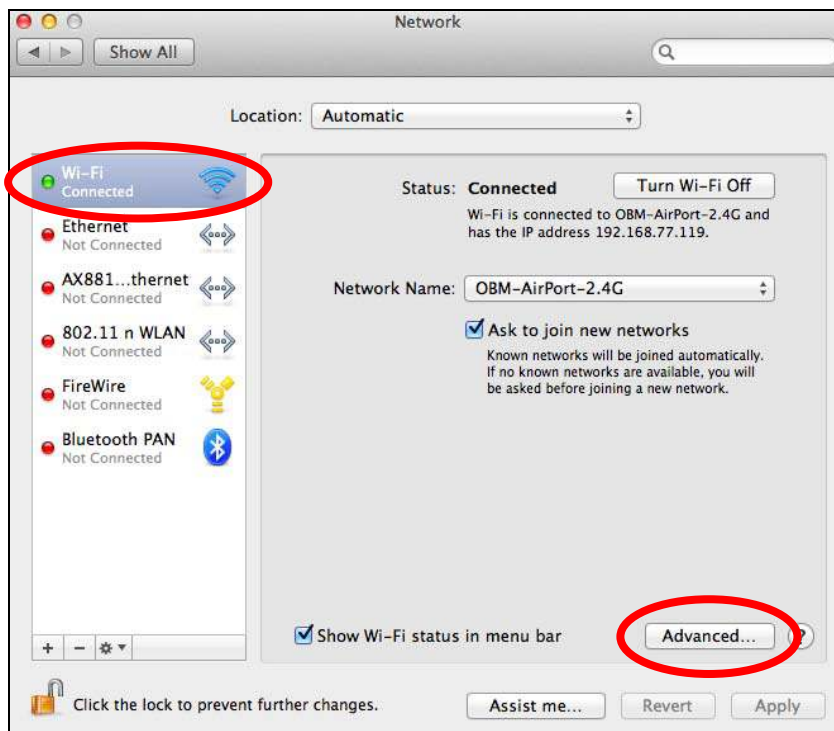


4. Select “TCP/IP” from the top menu and select “Manually” from the drop down menu labeled “Configure IPv4”, then click “OK”.

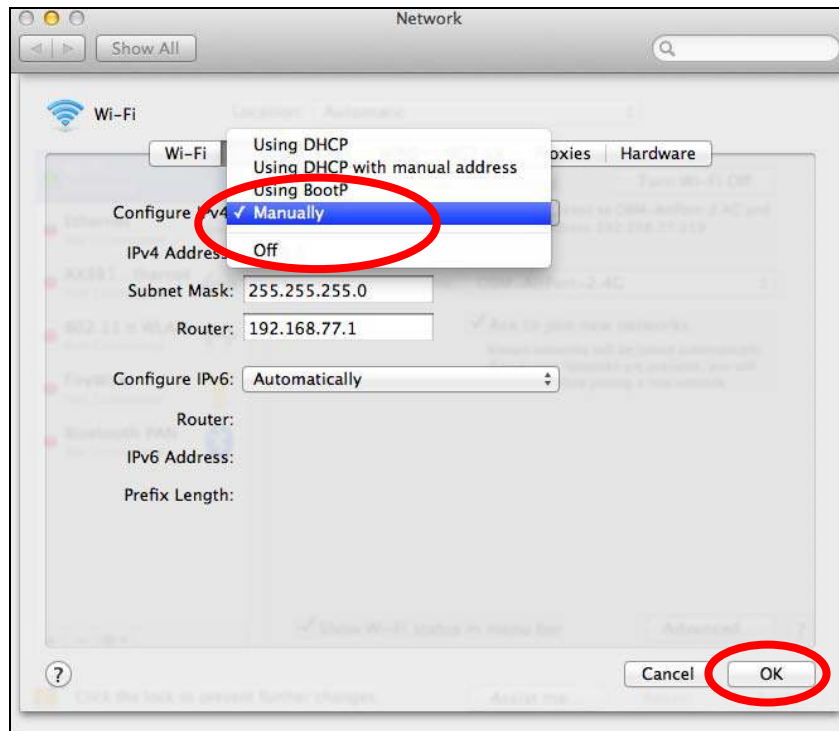


 **Your existing static IP address will be displayed in the “IP address” field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.**

5. In the “IPv4 Address” and “Subnet Mask” field enter IP address 192.168.2.10 and subnet mask 255.255.255.0. Click on “OK”.

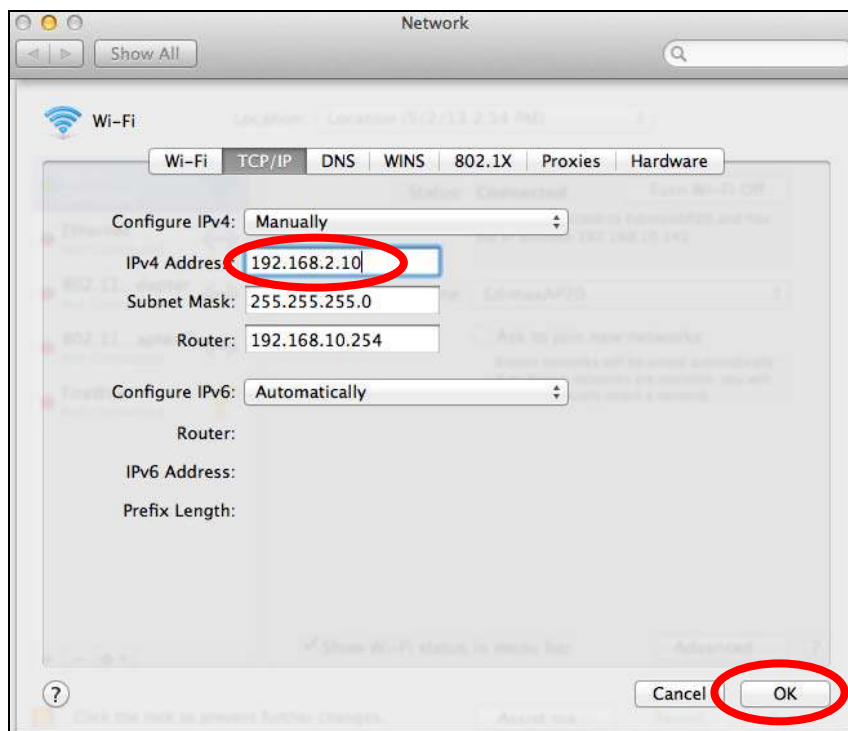


6. Click “Apply” to save the changes.

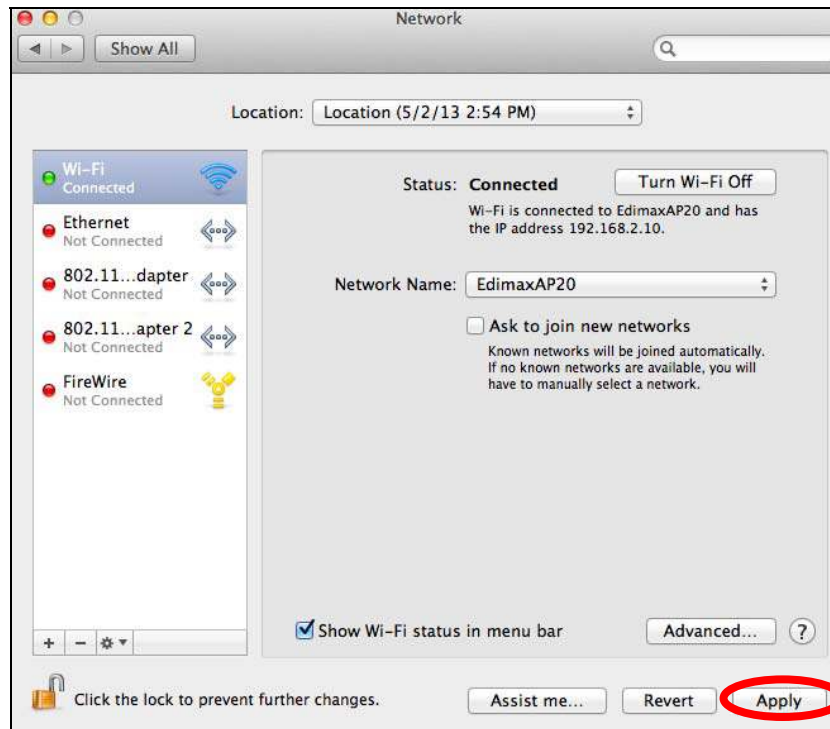


IV-1-3. How to Find Your Network Security Key

To find your network security key, please follow the instructions appropriate for your operating system.

 ***If you are using Windows XP or earlier, please contact your ISP or router manufacturer to find your network security key.***

IV-1-3-1. Windows 7 & Vista


1. Open “Control Panel” and click on “Network and Internet” in the top menu.

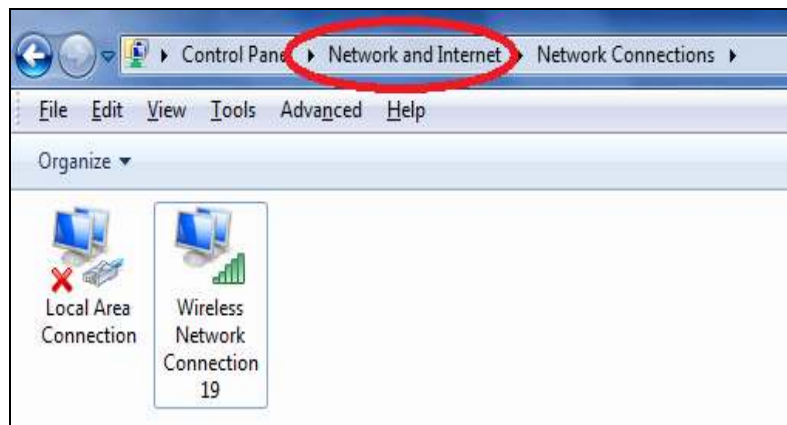


2. Click on “View network status and tasks” which is under the heading “Network and Sharing Center”.




3. Click on “Manage wireless networks” in the left menu.

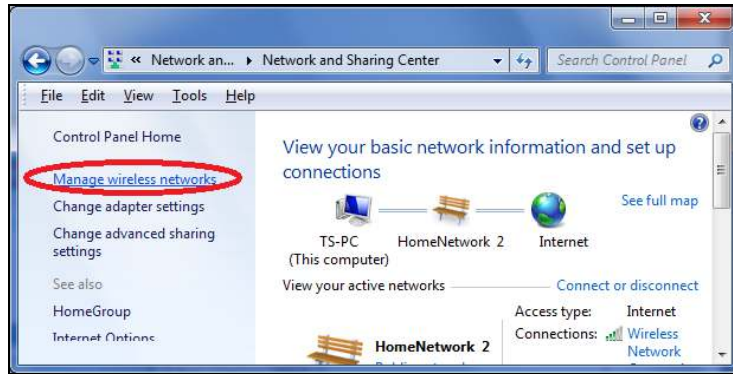

4. You should see the profile of your Wi-Fi network in the list. Right click on your Wi-Fi network and then click on “Properties”.

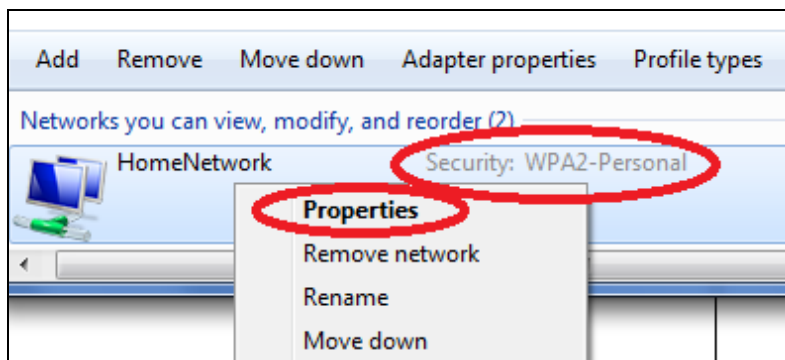


5. Click on the “Security” tab, and then check the box labeled “Show characters”. This will show your network security key. Click the “Cancel” button to close the window.

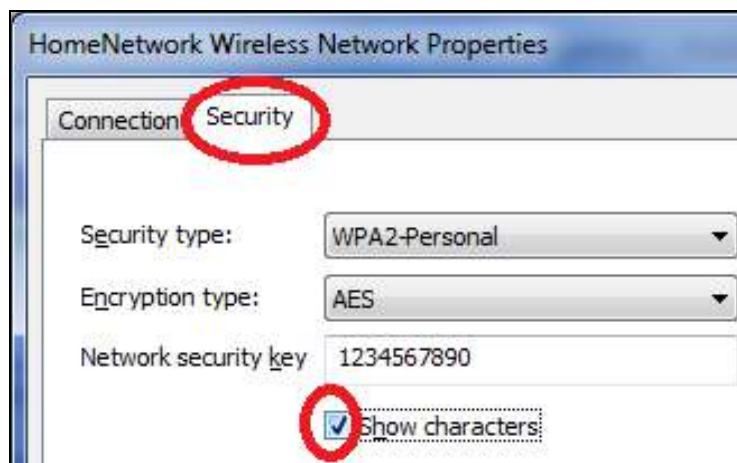


IV-1-3-2. Mac


1. Open a new Finder window, and select “Applications” from the menu on the left side. Open the folder labeled “Utilities” and then open the application “Keychain Access”.

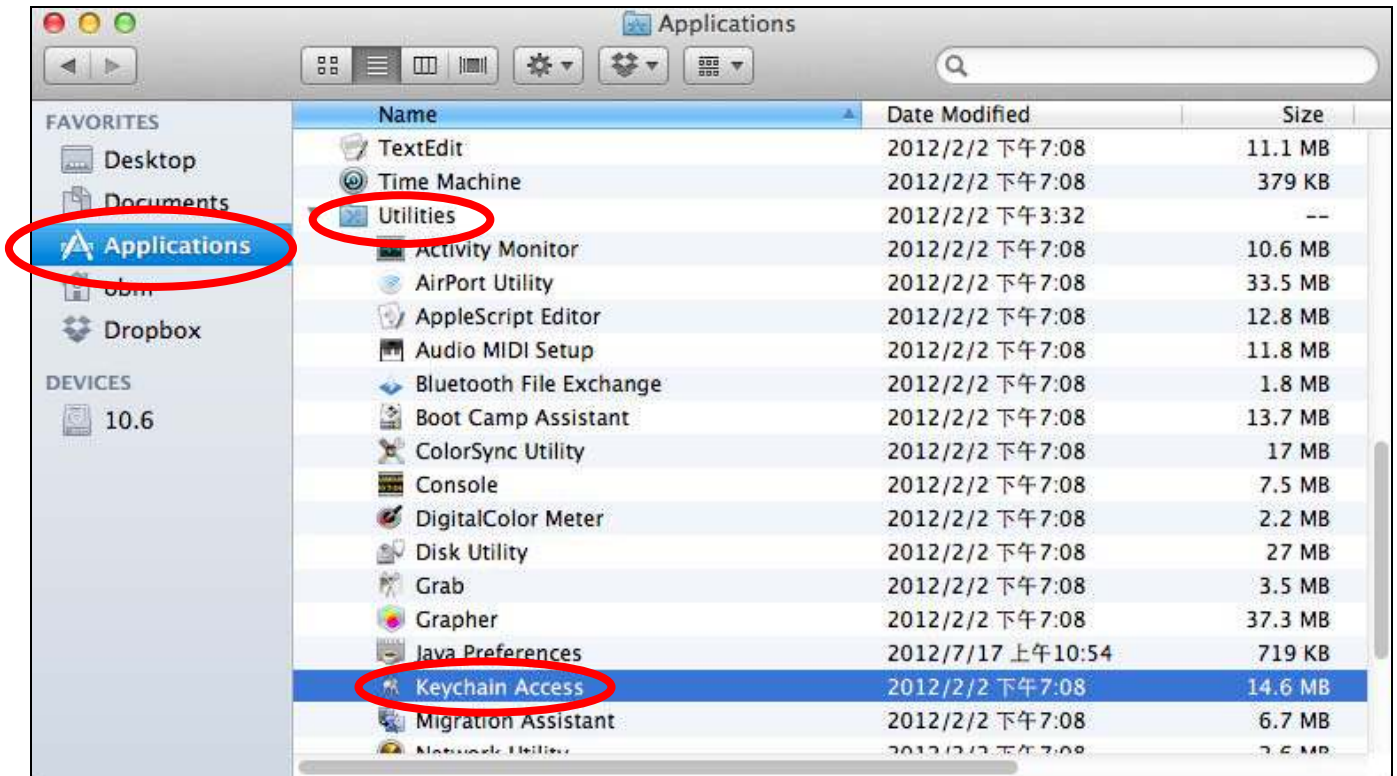


2. Select “Passwords” from the sub-menu labeled “Category” on the left side, as shown below. Then search the list in the main panel for the SSID of your network. In this example, the SSID is “EdimaxWireless” – though your SSID will be unique to your network.

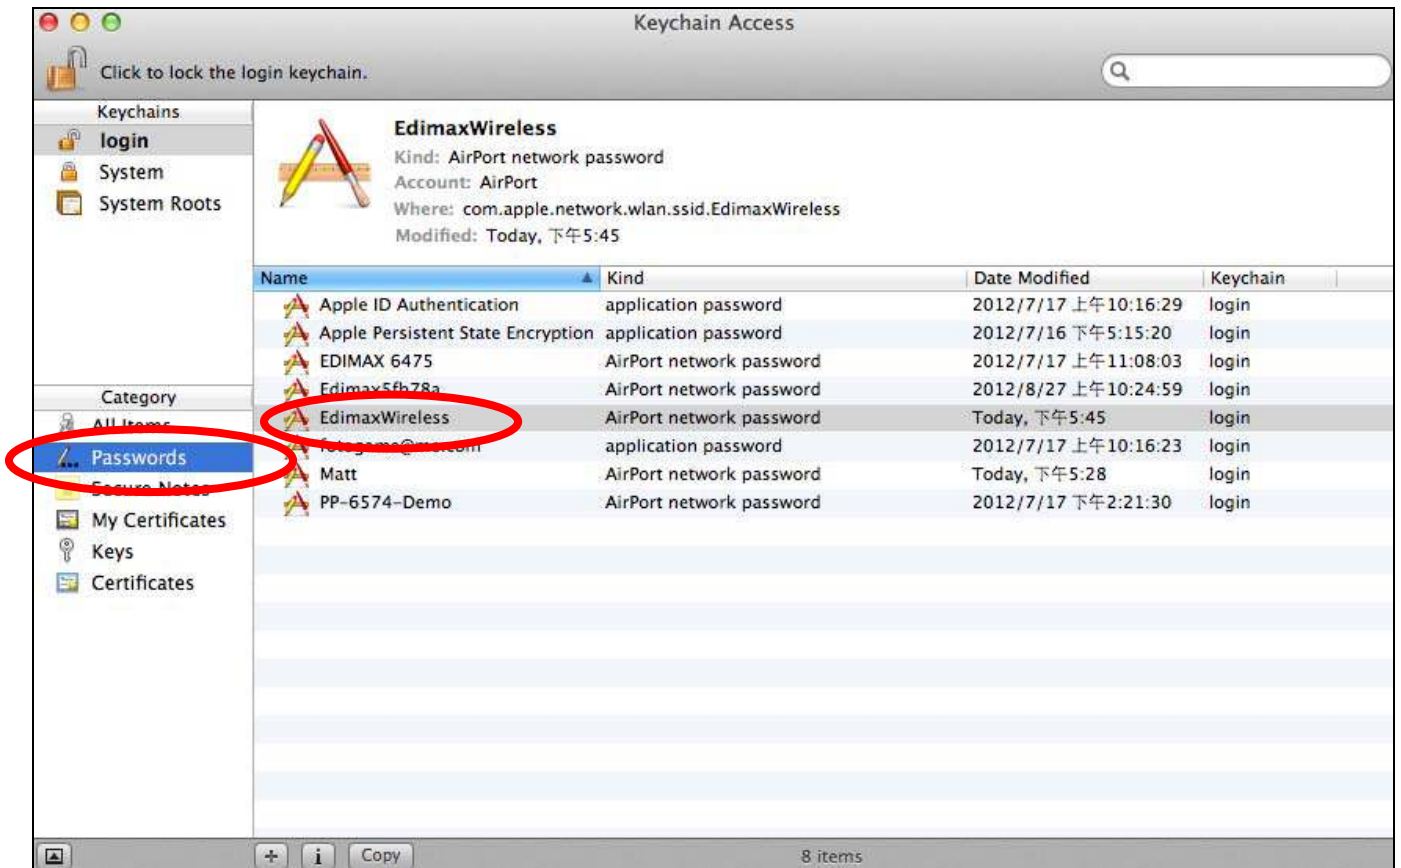

3. Double click the SSID of your network and you will see the following window.

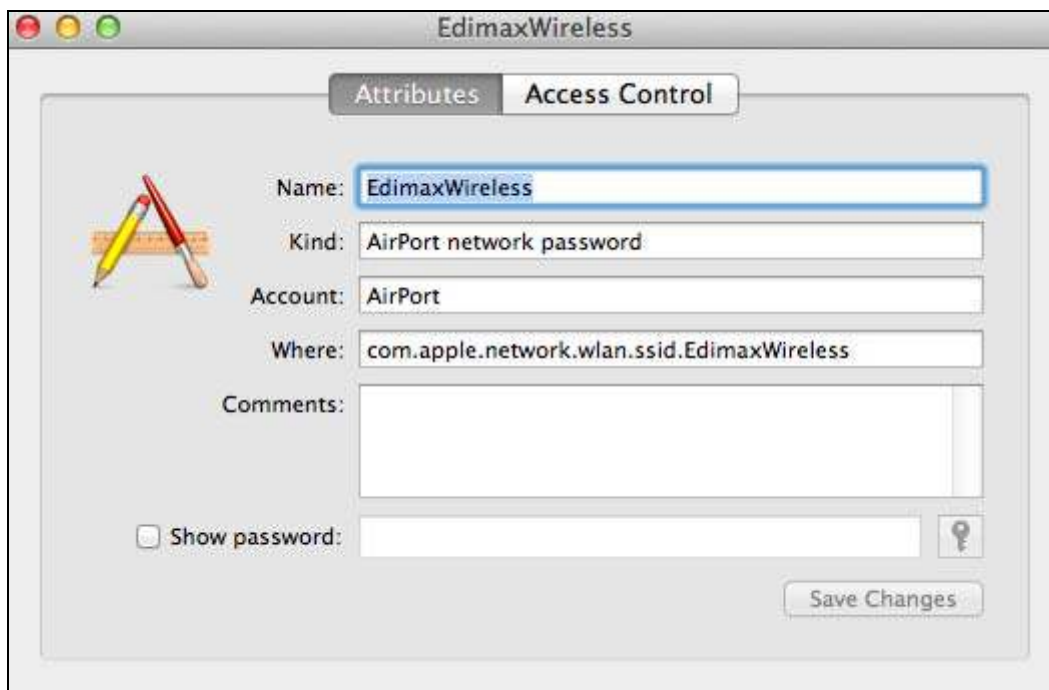

4. Check the box labeled “Show password” and you will be asked to enter your administrative password, which you use to log into your Mac. Enter your password and click “Allow”.

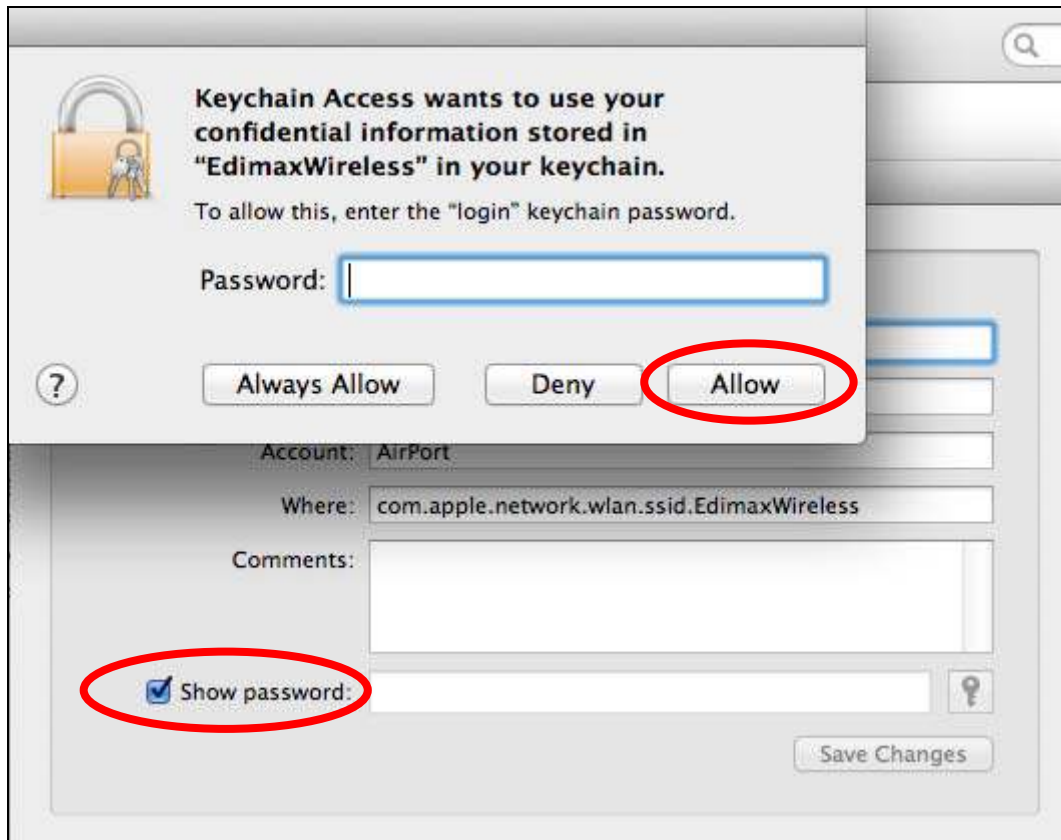

Your network security password will now be displayed in the field next to the box labeled "Show password". In the example below, the network security password is "edimax1234". Please make a note of your network security password.




IV-1-4. How to Find Your Router's IP Address

To find your router's IP address, please follow the instructions appropriate for your operating system.

IV-1-4-1. Windows XP, Vista & 7

1. Go to "Start", select "Run" and type "cmd", then press Enter or click "OK".

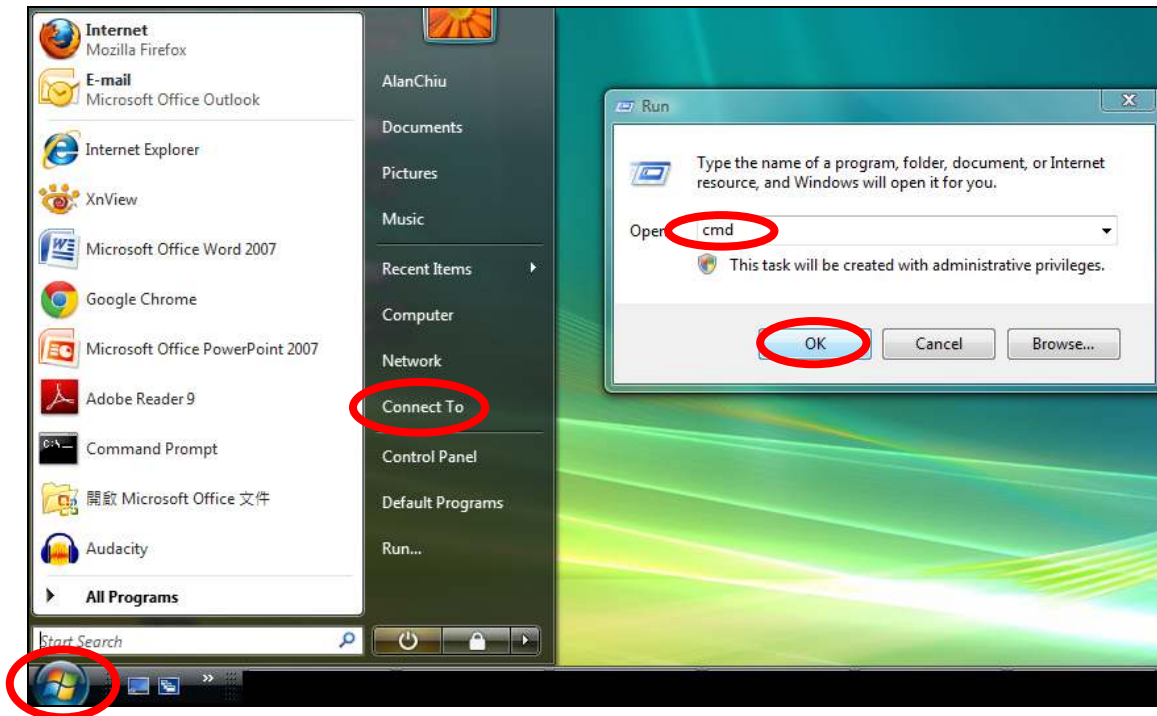

2. A new window will open, type "ipconfig" and press Enter.

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.0.6002]
Copyright (c) 2006 Microsoft Corporation. All rights reserved.

C:\Users\AlanChiu>ipconfig
```

3. Your router's IP address will be displayed next to "Default Gateway".

```
Administrator: C:\Windows\system32\cmd.exe
Ethernet adapter 區域連線:

    Connection-specific DNS Suffix . . . :
    Link-local IPv6 Address . . . . . : fe80::4cdc:3e90:ba56:1722%9
    IPv4 Address. . . . . : 192.168.10.14
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : fe80::1867:2a1b:e9c2:e57b%9
                                192.168.10.254

Wireless LAN adapter 無線網路連線:

    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix . . : edimax.com

Tunnel adapter 區域連線* 6:

    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix . . :

Tunnel adapter 區域連線* 7:

    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix . . :


C:\Users\AlanChiu>
```


IV-1-4-2. Windows 8


1. From the Windows 8 Start screen, move your cursor to the top right corner of the screen to display the Charms bar.




2. Click "Search" and enter "cmd" into the search bar. Click the "Command Prompt" app which be displayed on the left side.

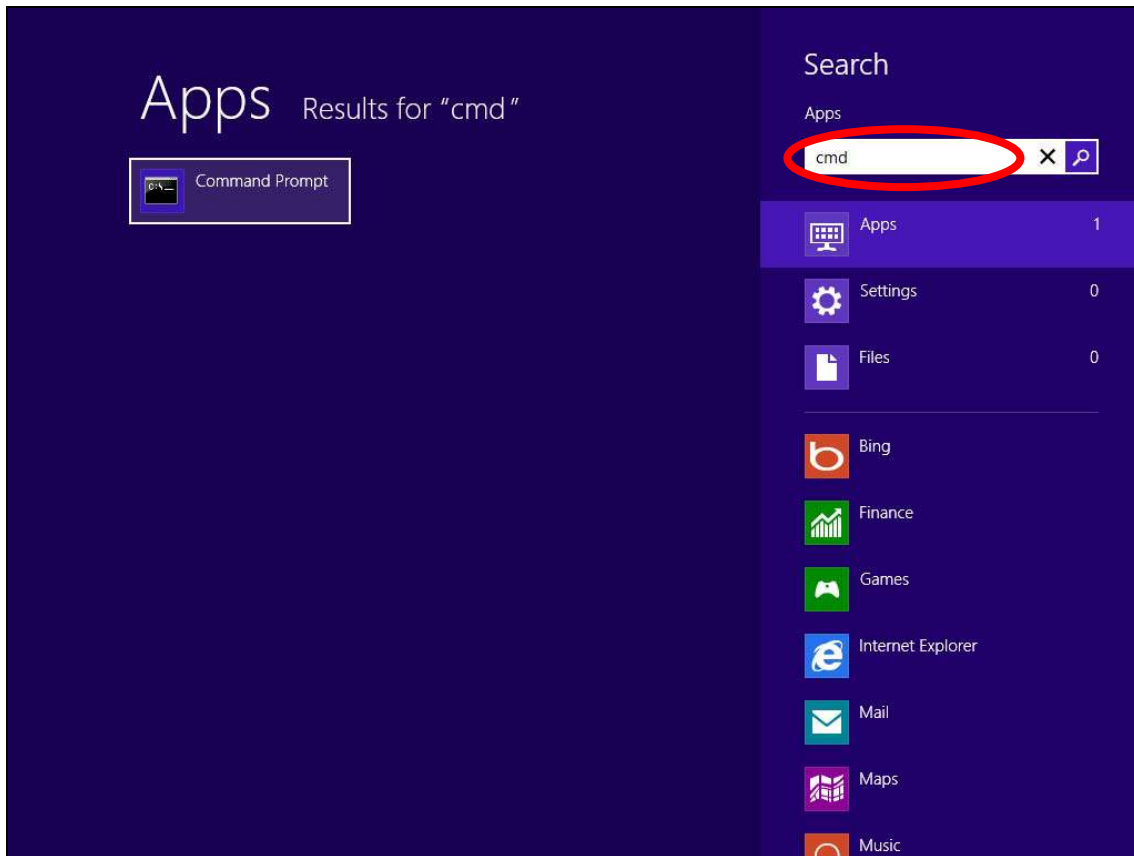

3. A new window will open, type “ipconfig” and press Enter.

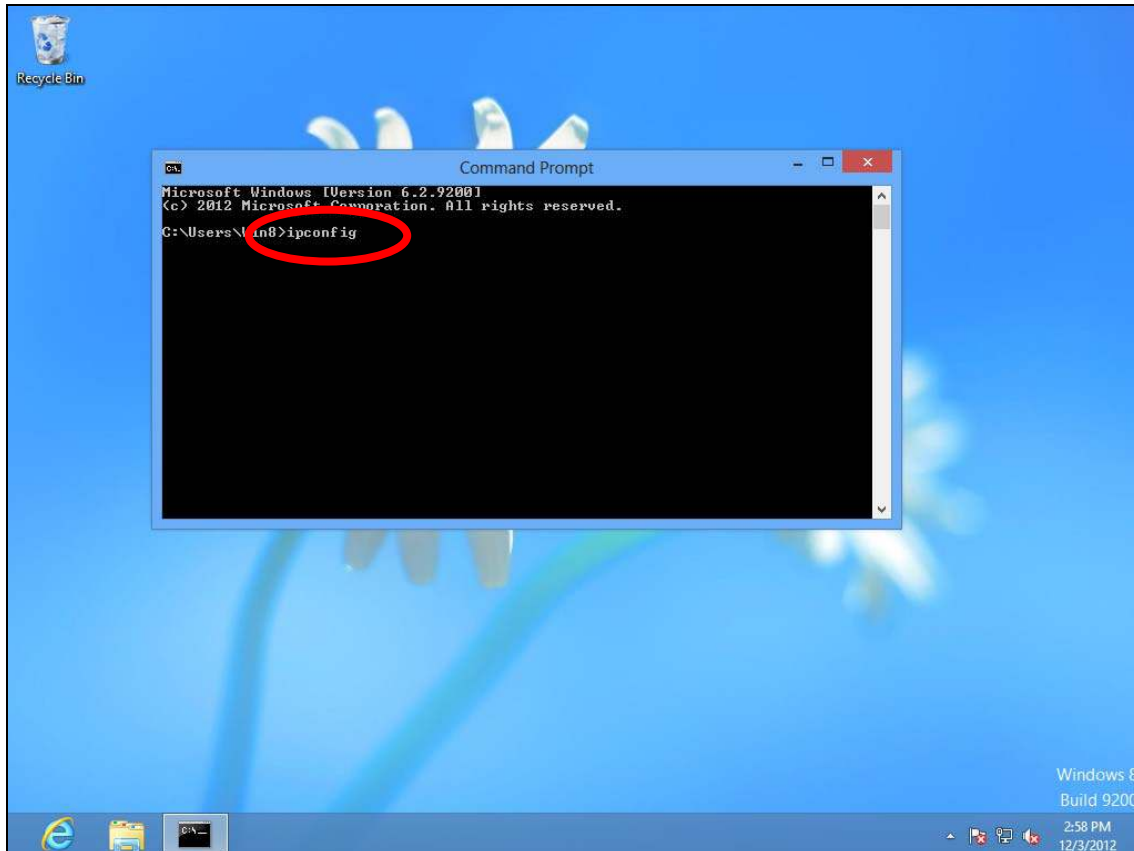


4. Your router's IP address will be displayed next to "Default Gateway".

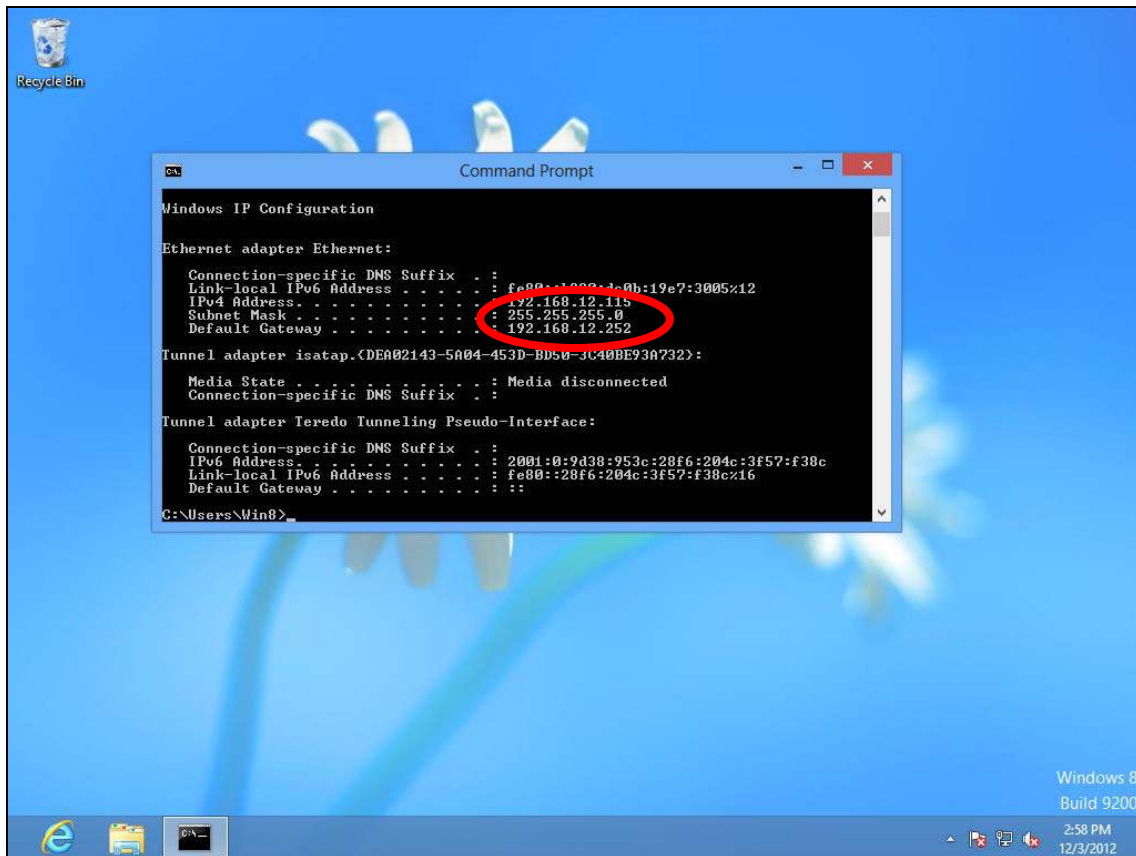


IV-1-4-3. Mac


1. Launch “System Preferences” and click on “Network”.
2. If you are using an Ethernet cable to connect to your network, your router’s IP address will be displayed next to “Router”.

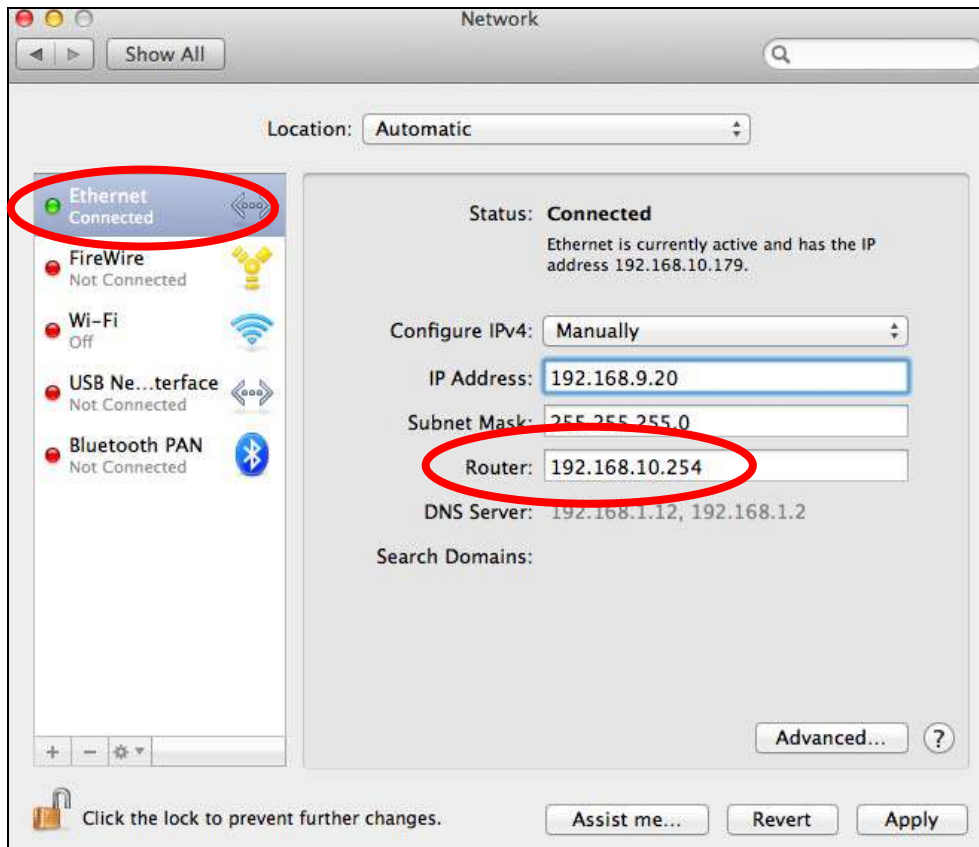

3. If you are using Wi-Fi, click “Wi-Fi” in the left panel, and then “Advanced” in the bottom right corner.

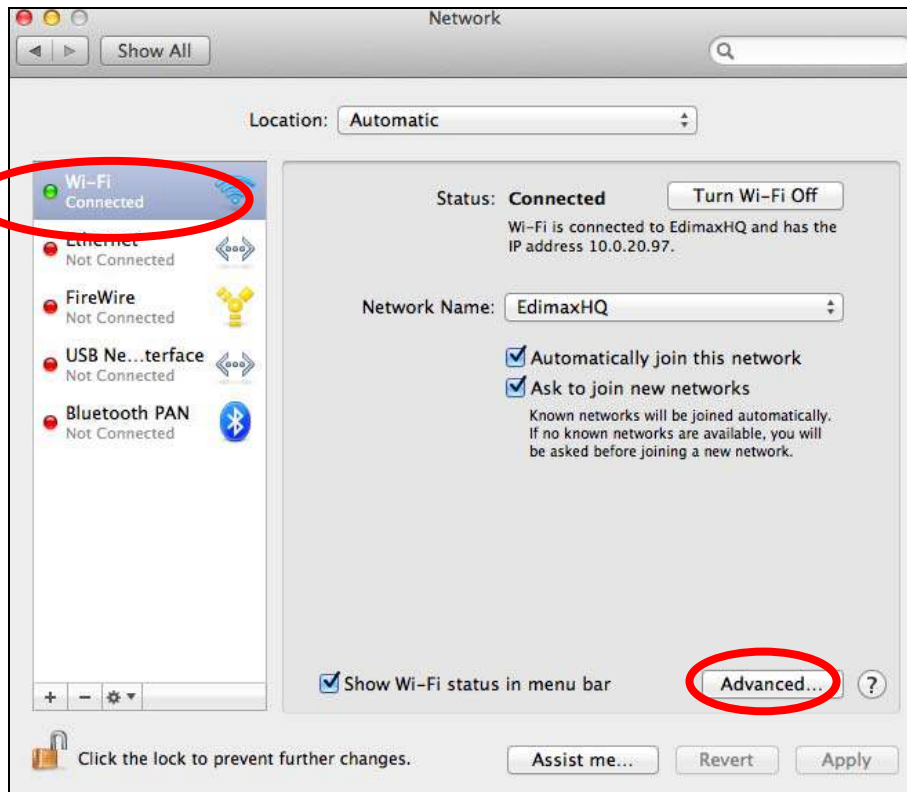

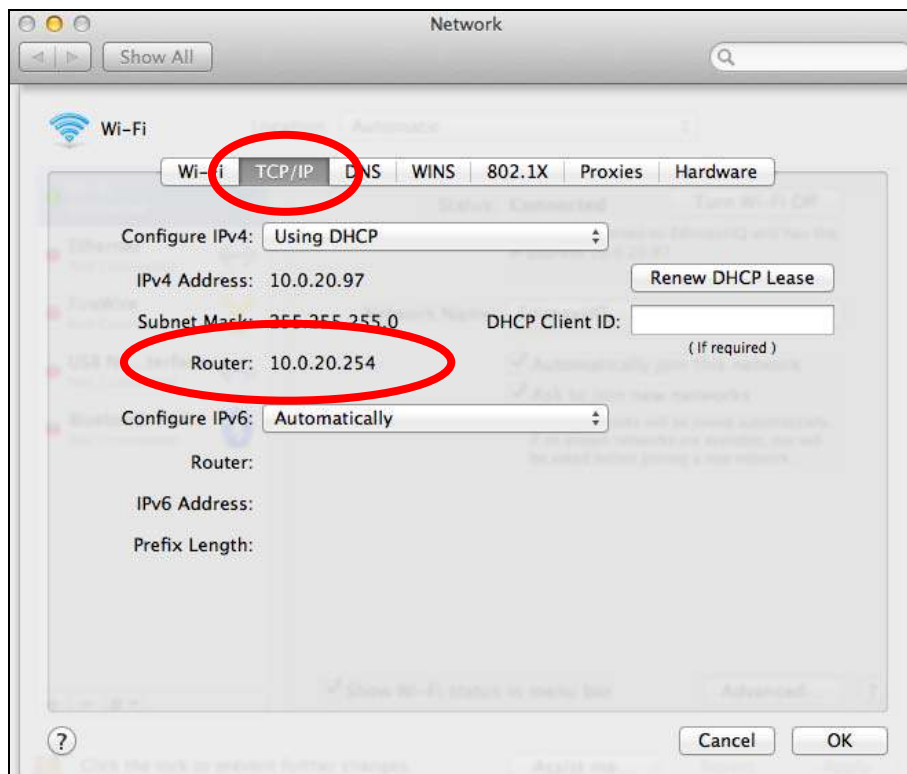

4. Click the “TCP/IP” tab and your router’s IP address will be displayed next to “Router”.




IV-2. Connecting to a Wi-Fi network


For help connecting to your device's **Edimax.Setup** SSID for initial setup, or to connect to your device's new Wi-Fi network (SSID) after setup is complete, follow the guide below:

 ***Below is an example of how to connect using Windows Vista – the process may vary slightly for other versions of Windows.***


1. Click the network icon (,  or ) in the system tray and select “Connect to a network”.

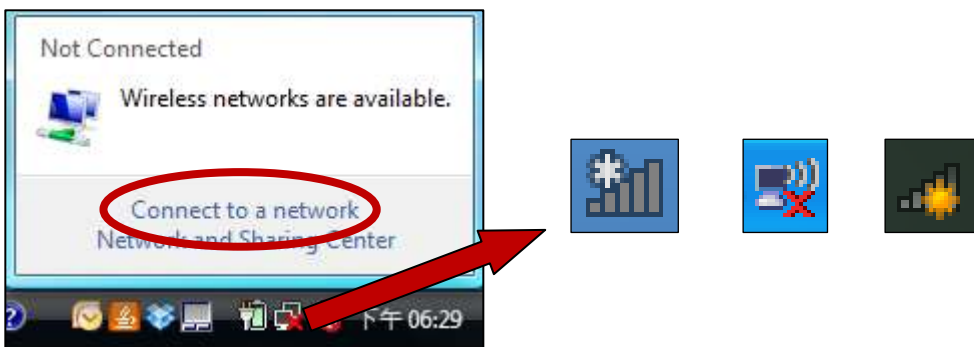

2. Search for the SSID of your BR-6428nS V2/nC and then click “Connect”. If you set a password for your network, you will then be prompted to enter it.

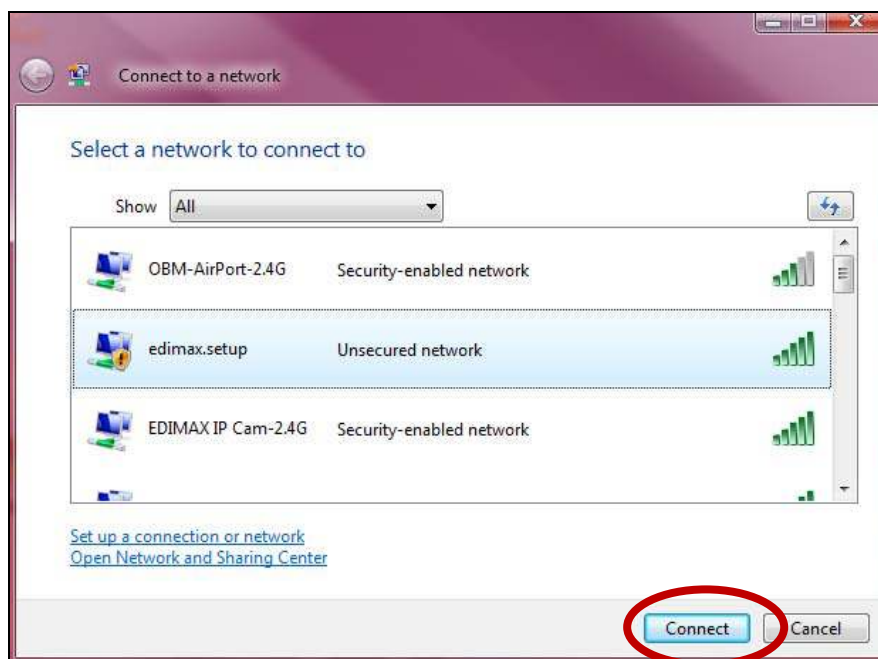


3. After correctly entering your password, you will be successfully connected to the BR-6428nS V2/nC's wireless network.

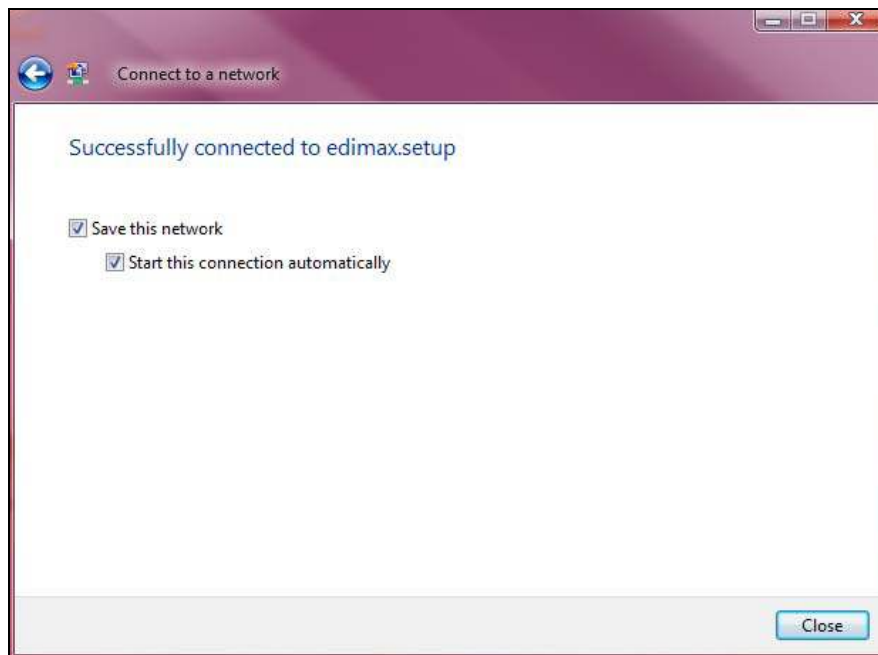


IV-3. Troubleshooting

If you are experiencing problems with your BR-6428nS V2/nC, please check below before contacting your dealer of purchase for help.

 ***If you are experiencing problems immediately after a firmware upgrade, please contact your dealer of purchase for help.***

1. In range extender mode, how do I connect to a network which has a hidden SSID?

- a. During iQ Setup select “Setup extender manually” as shown below. Manually enter the SSID of the hidden network, an SSID for your device and the encryption information for the hidden network.

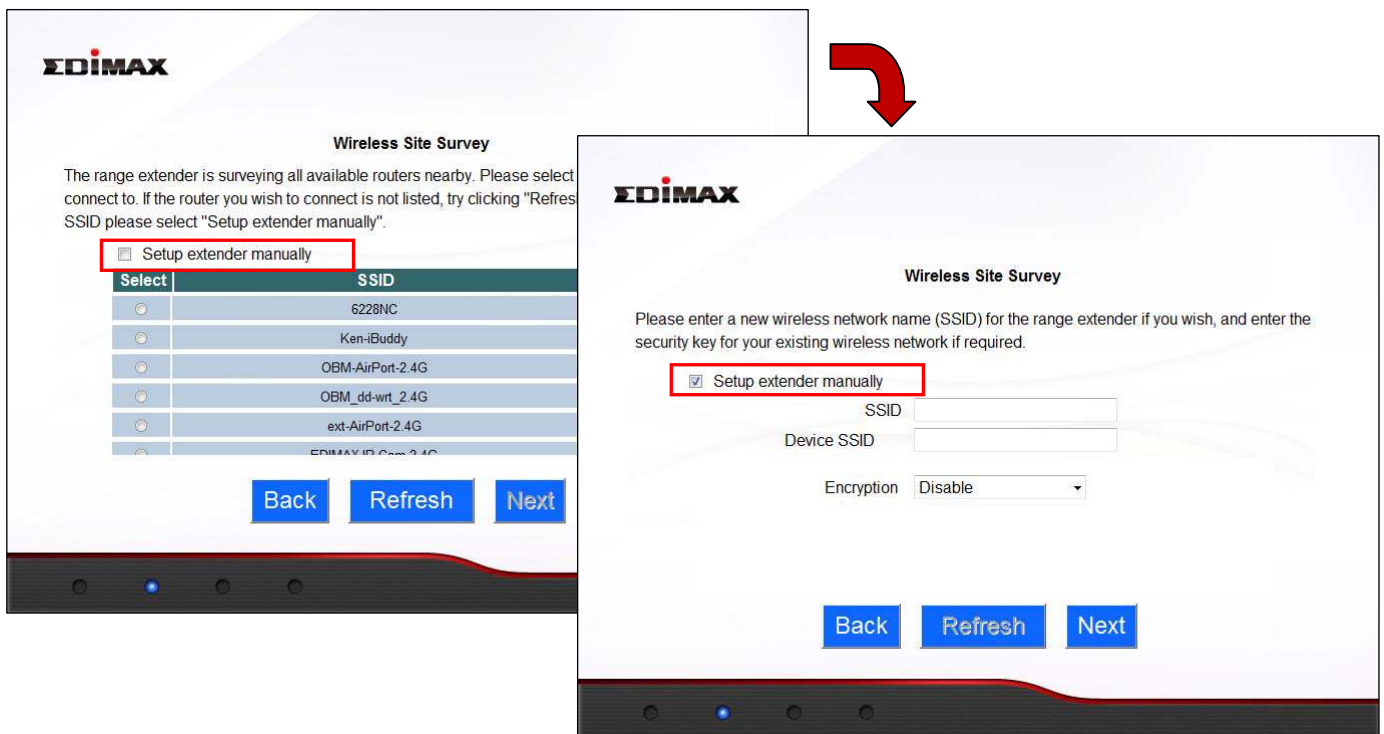

SSID	Enter the SSID (network name) of your existing, hidden network.
Device SSID	Enter an SSID for the BR-6428Ns V2/nC or leave it blank to use a default which consists of your existing router’s SSID (above) + "_2EX".
Encryption	Enter the encryption information for your existing, hidden network.

2. I can't access the Internet.

- a. Ensure that all cables are connected properly. Try a different Ethernet cable.
- b. Switch your BR-6428nS V2/nC and network device off and back on again. Check the LED status of the BR-6428Ns/nC.
- c. Check if you can access the web based configuration interface. If not, please ensure your computer is set to use a dynamic IP address.
- d. Login to the web based configuration interface and go to **Internet > WAN Setup** and check that the connection type is correct. If you are unsure which internet connection type you have, please contact your Internet Service Provider (ISP).
- e. Connect your computer directly to your modem and check if you can access the internet. If you can't, please contact your Internet service provider for assistance.

3. I can't open the browser based configuration interface.

- a. Please ensure your computer is set to use a dynamic IP address. Refer to the user manual for guidance if you are unsure how to do this.
- b. Ensure you enter the correct password. The password is case-sensitive.

4. How do I reset my device to factory default settings?

- a. To reset the device back to its factory default settings, press and hold the WPS/Reset button for over 10 seconds, until the power LED begins to flash. Please wait a few minutes for the product to restart. When the device restarts, all settings will be reset. Default settings are displayed on the product label on the back of the device, as shown below:



Router Login	Enter this URL in a web browser to run iQ Setup or configure advanced settings. You must be connected to the device by Wi-Fi or Ethernet cable.
Username/Password	This is the default username and password to access the browser based configuration interface when you go to the “Router Login” URL (above).
Wi-Fi Network Name	This is the default Wi-Fi network name for the device. Search for this name (SSID) and connect to it in order to access the “Router Login” URL (above).
MAC	A MAC address is unique to every device and is used for identification within a network. Your device’s unique MAC address is displayed here.
PIN CODE	This is your device’s PIN code for Wi-Fi Protected Setup (WPS).

5. I forgot my password.

- a. Reset the router to its factory default settings and use the default username **admin** and default password **1234**. Default settings are displayed on the product label on the back of the device, as shown above.

6. My BR-6428nS V2/nC has a weak wireless signal in range extender mode.

- a. Weak signals are usually caused by interference from other devices or obstacles blocking the BR-6428nS V2/nC’s wireless signal:
- b. Keep the device away from other radio devices such as microwaves or wireless telephones.
- c. Do not put the device in the corner of a room or under/nearby metal.
- d. Ensure there are as few obstacles as possible between the BR-6428nS V2/nC and your wireless network device.

In range extender mode, the BR-6428nS V2/nC’S weak wireless signal may be in turn caused by a weak signal from your existing router. It’s important to choose a good location for the BR-6428nS V2/nC *in relation to your existing wireless router*. The best location is roughly in the middle between your existing wireless router and the area you would like to be covered by the BR-6428nS V2/nC. If you are too far away from your existing router, then it is difficult for the BR-6428nS V2/nC to receive a wireless signal.

7. Do the WAN and LAN ports work the same when the device is in different modes?

No, the WAN and LAN ports have slightly different functions depending on the operating mode of the device.

- a. In **Wi-Fi router** mode, the **WAN port** is for a direct connection to your xDSL modem. The **LAN ports** are for wired network clients.
- b. In **access point** mode, the **WAN port** is not functional. Connect your existing router to the device's **LAN port**, and the other **LAN ports** can connect wired network clients.
- c. In **range extender** mode, the **WAN port** is not functional and the **LAN ports** are for wired network clients. Do not connect your existing router to the device's **WAN** or **LAN ports**, as this can cause the device to malfunction.

8. My network is configured to use static IP addresses. How can I assign a static IP address to my BR-6428nS V2/nC?

- a. You can modify the device's IP address using the browser based configuration interface. Please refer to [III-3-4. LAN](#).

IV-4. Glossary

Default Gateway (Wireless bridge): Every non-access point IP device needs to configure a default gateway's IP address. When the device sends out an IP packet, if the destination is not on the same network, the device has to send the packet to its default gateway, which will then send it out towards the destination.

DHCP: Dynamic Host Configuration Protocol. This protocol automatically gives every computer on your home network an IP address.

DNS Server IP Address: DNS stands for Domain Name System, which allows Internet servers to have a domain name (such as `www.Broadbandaccesspoint.com`) and one or more IP addresses (such as `192.34.45.8`). A DNS server keeps a database of Internet servers and their respective domain names and IP addresses, so that when a domain name is requested (as in typing "`Broadbandaccesspoint.com`" into your Internet browser), the user is sent to the proper IP address. The DNS server IP address used by the computers on your home network is the location of the DNS server your ISP has assigned to you.

DSL Modem: DSL stands for Digital Subscriber Line. A DSL modem uses your existing phone lines to transmit data at high speeds.

Ethernet: A standard for computer networks. Ethernet networks are connected by special cables and hubs, and move data around at up to 10/100 million bits per second (Mbps).

IP Address and Network (Subnet) Mask: IP stands for Internet Protocol. An IP address consists of a series of four numbers separated by periods, that identifies a single, unique Internet computer host in an IP network. Example: `192.168.2.1`. It consists of 2 portions: the IP network address, and the host identifier.

The IP address is a 32-bit binary pattern, which can be represented as four cascaded decimal numbers separated by ".": `aaa.aaa.aaa.aaa`, where each "aaa" can be anything from 000 to 255, or as four cascaded binary numbers separated by ".": `bbbbbbbb.bbbbbbbb.bbbbbbbb.bbbbbbbb`, where each "b" can either be 0 or 1.

A network mask is also a 32-bit binary pattern, and consists of consecutive leading 1's followed by consecutive trailing 0's, such as 11111111.11111111.11111111.00000000. Therefore sometimes a network mask can also be described simply as "x" number of leading 1's. When both are represented side by side in their binary forms, all bits in the IP address that correspond to 1's in the network mask become part of the IP network address, and the remaining bits correspond to the host ID.

For example, if the IP address for a device is, in its binary form, 11011001.10110000.10010000.00000111, and if its network mask is, 11111111.11111111.11110000.00000000 It means the device's network address is 11011001.10110000.10010000.00000000, and its host ID is, 00000000.00000000.00000000.00000111. This is a convenient and efficient method for access points to route IP packets to their destination.

ISP Gateway Address: (see ISP for definition). The ISP Gateway Address is an IP address for the Internet access point located at the ISP's office.

ISP: Internet Service Provider. An ISP is a business that provides connectivity to the Internet for individuals and other businesses or organizations.

LAN: Local Area Network. A LAN is a group of computers and devices connected together in a relatively small area (such as a house or an office). Your home network is considered a LAN.

MAC Address: MAC stands for Media Access Control. A MAC address is the hardware address of a device connected to a network. The MAC address is a unique identifier for a device with an Ethernet interface. It is comprised of two parts: 3 bytes of data that corresponds to the Manufacturer ID (unique for each manufacturer), plus 3 bytes that are often used as the product's serial number.

NAT: Network Address Translation. This process allows all of the computers on your home network to use one IP address. Using the broadband access point's NAT capability, you can access the Internet from any computer on your home network without having to purchase more IP addresses from your ISP.

Port: Network Clients (LAN PC) uses port numbers to distinguish one network application/protocol over another. Below is a list of common applications and protocol/port numbers:

Application	Protocol	Port Number
Telnet	TCP	23
FTP	TCP	21
SMTP	TCP	25
POP3	TCP	110
H.323	TCP	1720
SNMP	UCP	161
SNMP Trap	UDP	162
HTTP	TCP	80
PPTP	TCP	1723
PC Anywhere	TCP	5631
PC Anywhere	UDP	5632

Access point: A access point is an intelligent network device that forwards packets between different networks based on network layer address information such as IP addresses.

Subnet Mask: A subnet mask, which may be a part of the TCP/IP information provided by your ISP, is a set of four numbers (e.g. 255.255.255.0) configured like an IP address. It is used to create IP address numbers used only within a particular network (as opposed to valid IP address numbers recognized by the Internet, which must be assigned by InterNIC).

TCP/IP, UDP: Transmission Control Protocol/Internet Protocol (TCP/IP) and Unreliable Datagram Protocol (UDP). TCP/IP is the standard protocol for data transmission over the Internet. Both TCP and UDP are transport layer protocol. TCP performs proper error detection and error recovery, and thus is reliable. UDP on the other hand is not reliable. They both run on top of the IP (Internet Protocol), a network layer protocol.

WAN: Wide Area Network. A network that connects computers located in geographically separate areas (e.g. different buildings, cities, countries). The Internet is a wide area network.

Web-based management Graphical User Interface (GUI): Many devices support a graphical user interface that is based on the web browser. This means the user can use the familiar Netscape or Microsoft Internet Explorer to Control/configure or monitor the device being managed.

COPYRIGHT

Copyright © Edimax Technology Co., Ltd. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission from Edimax Technology Co., Ltd.

Edimax Technology Co., Ltd. makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability, or fitness for any particular purpose. Any software described in this manual is sold or licensed as is. Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Edimax Technology Co., Ltd. reserves the right to revise this publication and to make changes from time to time in the contents hereof without the obligation to notify any person of such revision or changes.

The product you have purchased and the setup screen may appear slightly different from those shown in this QIG. The software and specifications are subject to change without notice. Please visit our website www.edimax.com for updates. All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communications Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 2.5cm (1 inch) during normal operation.

Federal Communications Commission (FCC) RF Exposure Requirements

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. The equipment version marketed in US is restricted to usage of the channels 1-11 only.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not Intended for Use

None

EU Declaration of Conformity

- English:** This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC, 2009/125/EC.
- Français:** Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 1999/5/CE, 2009/125/CE
- Čeština:** Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 1999/5/ES, 2009/125/ES.
- Polski:** Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 1999/5/EC, 2009/125/EC
- Română:** Acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 1999/5/CE, 2009/125/CE.
- Русский:** Это оборудование соответствует основным требованиям и положениям Директивы 1999/5/EC, 2009/125/EC.
- Magyar:** Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek (1999/5/EK, 2009/125/EC)
- Türkçe:** Bu cihaz 1999/5/EC, 2009/125/EC direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.
- Українська:** Обладнання відповідає вимогам і умовам директиви 1999/5/EC, 2009/125/EC.
- Slovenčina:** Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 1999/5/ES, 2009/125/ES.
- Deutsch:** Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 1999/5/EC, 2009/125/EC.
- Español:** El presente equipo cumple los requisitos esenciales de la Directiva 1999/5/EC, 2009/125/EC.
- Italiano:** Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 1999/5/CE, 2009/125/CE.
- Nederlands:** Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 1999/5/EC, 2009/125/EC.
- Português:** Este equipamento cumpre os requisitos essenciais da Directiva 1999/5/EC, 2009/125/EC
- Norsk:** Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 1999/5/EC, 2009/125/EC.
- Svenska:** Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 1999/5/EG, 2009/125/EG.
- Dansk:** Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 1999/5/EC, 2009/125/EC.
- Suomi:** Tämä laite täyttää direktiivien 1999/5/EY, 2009/125/EY oleelliset vaatimukset ja muut asiaankuuluvat määräykset.

FOR USE IN 



WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directives.

Equipment: N300 Multi-Function Wi-Fi Router

Model No.: BR-6428nS V2 / BR-6428nC

The following European standards for essential requirements have been followed:

Directives 1999/5/EC

Spectrum : ETSI EN 300 328 V1.8.1 (2012-06);
EMC : EN 301 489-1 V1.9.2 (2011-09);
EN 301 489-17 V2.2.1 (2012-09);
Safety (LVD) : IEC 60950-1:2005 (2nd Edition); Am 1:2009
EN 60950-1:2006+A11:2009+A1:2010+A12:2011

Recommendation 99/519/EC

EMF : EN 50385: 2002

Directives 2006/95/EC

Safety (LVD) : IEC 60950-1:2005 (2nd Edition); Am 1:2009
EN 60950-1:2006+A11:2009+A1:2010+A12:2011

Edimax Technology Co., Ltd.
No. 3, Wu Chuan 3rd Road,
Wu-Ku Industrial Park,
New Taipei City, Taiwan



Date of Signature: September, 2013

Signature:

A handwritten signature in black ink, appearing to read 'Albert Chang', written over a horizontal line.

Printed Name:

Albert Chang

Title:

Director

Edimax Technology Co., Ltd.



ΣDIMAX
NETWORKING PEOPLE TOGETHER

Edimax Technology Co., Ltd.
No.3, Wu-Chuan 3rd Road, Wu-Gu,
New Taipei City 24891, Taiwan

Edimax Technology Europe B.V.
Nijverheidsweg 25 5683 CJ Best
The Netherlands

Edimax Computer Company
3350 Scott Blvd., Bldg.15 Santa Clara,
CA 95054, USA

www.edimax.com