210 mm

290 mm

EXCELLENT ELECTRICS

Description

MODEL: EE5-000020 / EE5-000030

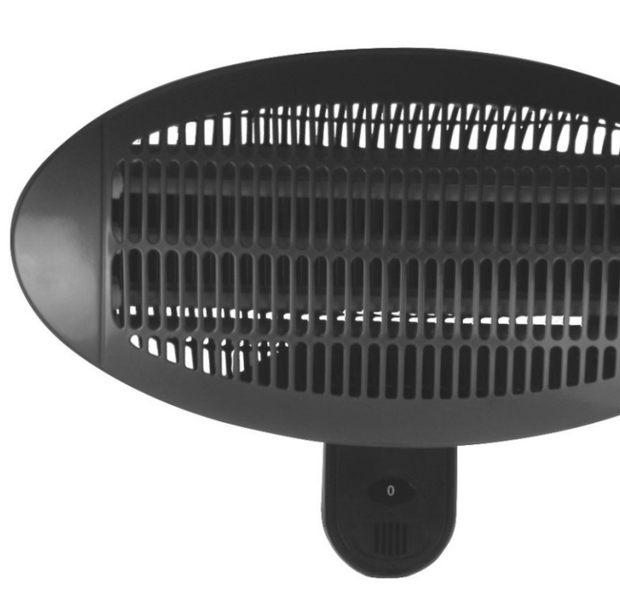

UK | NL | D | F | E | I | CZ | P | PL | RU | TR | DK | NO | S | H | FI | GR | LAT | LTU | SLO | EST | HR | UA | RO | BG | SK

INSTRUCTIONS FOR USE

GEBRUIKSAANWIJZING | GEBRAUCHSANWEISUNG | MODE D'EMPLOI
MODO DE EMPLEO | ISTRUZIONI PER L'USO | NÁVOD K POUŽITÍ | INSTRUÇÕES DE USO
INSTRUKCJA OBSŁUGI | ИНСТРУКЦИЯ | KULLANIM KILAVUZU | BRUGSANVISNING
BRUKSANVISNING | HASZNÁLATI UTASÍTÁS | KÄYTTÖOHJE | ΟΔΗΓΙΕΣ
LIETOŠANAS NORĀDĪJUMI | NAUDOJIMO INSTRUKCIJOS | NAVODILA ZA UPORABO
KASUTAMA | UPUTSTVO ZA UPORABU | ІНСТРУКЦІЯ | MOD DE FOLOSIRE
ИНСТРУКЦИИ ЗА УПОТРЕБА | NÁVOD NA POUŽITIE

220-240V ~50-60Hz, MAX. 2000W

SELF IMPORT AGENCIES • P.O. BOX 37211 • 1030 AE AMSTERDAM • THE NETHERLANDS   www.servicetoconsumer.com

UK PATIO HEATER

INSTRUCTIONS FOR USE
READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE USING THE APPLIANCE AND SAVE THEM FOR FUTURE REFERENCE.

WARNING: IN ORDER TO AVOID THE RISK OF ELECTRICAL SHOCK, NEVER PLUG THE APPLIANCE IN WHEN IT IS TAKEN APART.
WARNING: IN ORDER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, NEVER USE THE APPLIANCE IN COMBINATION WITH AN ELECTRONIC TIMER.

SAFETY INSTRUCTIONS:
- This electrical appliance complies with technical safety and electromagnetic compatibility standards.
- Use the appliance only as described in this manual.
- This appliance is intended for household use only.
- This appliance is not for commercial or industrial use.
- Never touch the appliance when it is in operation to avoid risk of burns.
- Never touch the appliance with wet hands.
- Never use the appliance to dry laundry or dishes.
- Never rotate the heating part of the appliance during operation. Allow a minimum of 15 minutes for the appliance to cool down before changing the angle of the heating part.
- Do not immerse the unit, plug or cord in water or any other liquids.
- Do not spray the appliance with liquids.
- Do not cover the appliance; this may cause overheating.
- Do not use in the presence of explosive and/or flammable fumes.
- Do not place the appliance or any part of it near an open fire or another heat source.
- Do not place the appliance near curtains or any other combustible materials.
- Always place on a flat and stable surface (floor model)
- Always place out of reach of children.
- This appliance is not intended for use by persons (including children under 8 years) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children must not play with the appliance. Cleaning and maintenance should not be done by children without supervision.
- Before connecting the appliance, check that the voltage values shown on the data plate correspond to those of the electricity supply network. It is a class I appliance and must be earthed. The appliance must not be located immediately below a socket-outlet.
- The power socket must be easy to reach so the plug can be removed quickly in case of emergency.
- Although the heating element has stopped glowing, it may still be hot and potentially dangerous. Check that the selection indicator is in the OFF position before taking any action.

After removing the packing materials, check the condition of the appliance. If you have any doubts about the state of the device, do not use it and contact a qualified person for help. The packing materials (plastic bags, polystyrene foam, nails, etc.) must be kept out the reach of children since they can be dangerous.

ALWAYS UNPLUG THE APPLIANCE WHEN
- not in use;
- moving the appliance from one location to another;
- maintaining or servicing parts of the appliance;
- cleaning the appliance.

DO NOT USE WHEN
- plug or cord are damaged;
- the appliance has fallen;
- the appliance is not functioning properly;
- the appliance is damaged in any way. Do not dismantle your appliance. Repairs must always be done by a certified electrician.

SAFETY
While the appliance is splash water resistant (IP34), it should not be used in the direct proximity of a bathtub, shower or a swimming pool. The appliance is designed for use in gardens but can be used both indoors and outdoors. Although the heater may be used outdoors, the main plug must only be connected to the supply indoors. The heater is provided with an anti-tilt switch (*) which will turn off the heater if it is overturned and turn it on again automatically when it is restored to its upright position.
CAUTION: Before fitting or removing the appliance, make sure that the heater's power line supplying the heater is disconnected. The installation and use of your appliance must comply with the applicable standards in your country.
When switched on, an electrical heating appliance reaches very high temperatures, likely to cause burns. Make sure that all users of the appliance are made aware of the risks. If you have any doubts concerning the installation of this appliance, please consult a qualified electrician.
(* floor model only).

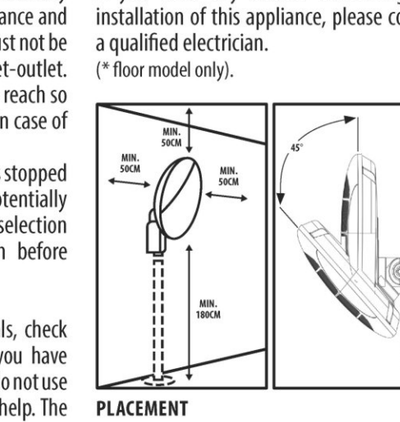

PLACEMENT
The heating element must be positioned at a minimum height of 1,8 meter on a solid heat resistant wall. (**) The heating element can be adjusted to different angles at 0-45°.
(** mounted model only)

PARTS
(YOU CAN FIND THE ASSEMBLY INSTRUCTIONS ON THE BACK OF THE MANUAL)

FLOOR AND MOUNTED MODEL
1 Heating element
2 Knob
3 Body
4 Position indication plate
5 Pull switch

FLOOR MODEL ONLY
6 Tube cover
7 Upper post
8 3x M5X6mm screw
9 Middle post
10 3x M5X6mm screw
11 Lower post
12 2x clamp
13 Power cord
14 Base cover
15 4x M6X30mm screw
16 Base

Before installing your appliance, make sure that the supply plug is not connected to the main supply plug. Remove all the screws before assembly.

OPERATION
The appliance is switched on with the pull switch. The slight vibration noticeable when the appliance is switched on will stop after a few seconds.

SWITCH POSITIONS
- Position 0: OFF
- Position 1: 650W (normal power)
- Position 2: 1350W (intermediate power)
- Position 3: 2000W (full power)

MAINTENANCE
Your appliance does not require any particular maintenance, except for an occasional surface cleaning.
1. Before cleaning, switch off the appliance and disconnect it from the mains supply.
2. Let the appliance cool down for at least 15 minutes, before cleaning it with a damp cloth and a drop of washing-up liquid to remove any dust or dirt from the case.
3. Do not use stronger detergents or solvents as these may damage the paint finish.
4. Using a dry 1" (25mm) paintbrush, remove any dust from the grilles.

In the event of a malfunction, please contact an electrician or a similarly qualified person for assistance.

THE ENVIRONMENT
When this product reaches the end of its useful life, hand it in at a collection point for the recycling of electric and electronic equipment. Please refer to the symbols on the product, the users instructions or the packaging. Contact your municipality for the address of the appropriate collection point in your neighbourhood.

ASSEMBLY INSTRUCTIONS

FLOOR MODEL

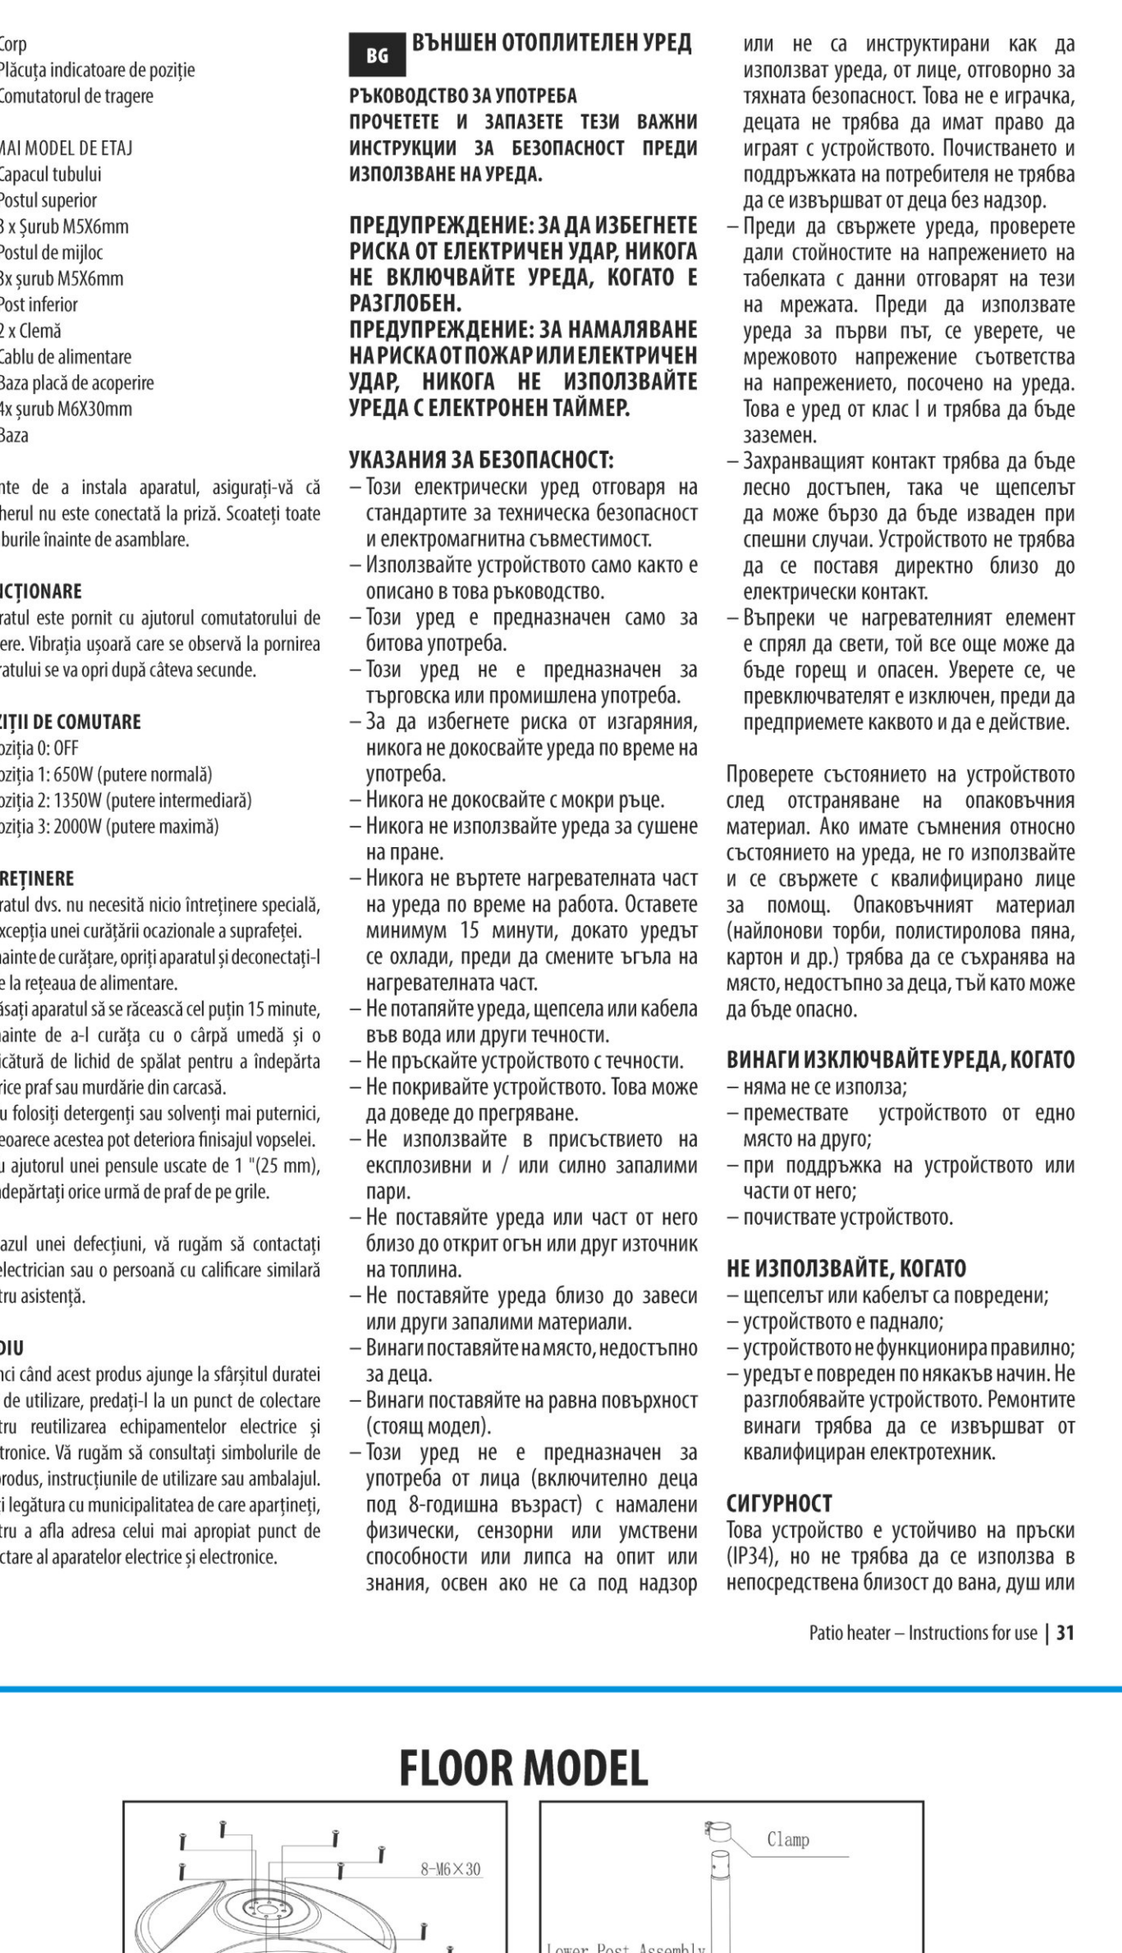

MOUNTED MODEL

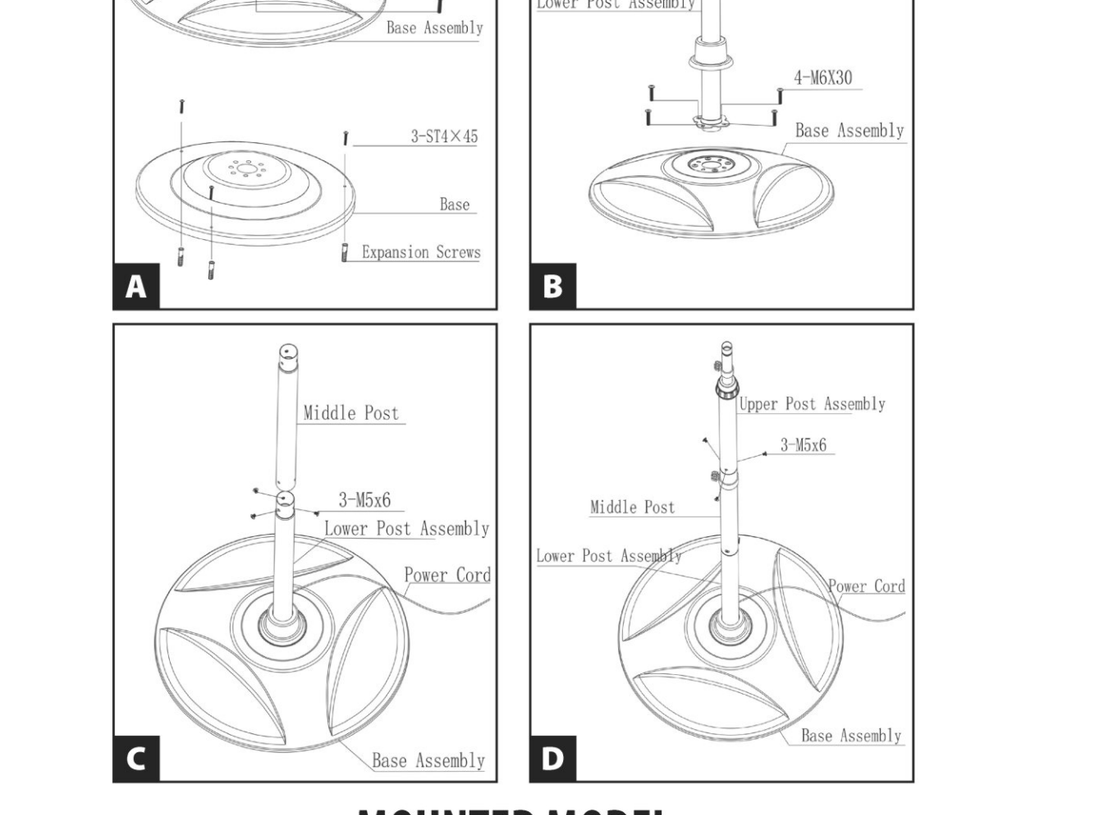

EXCELLENT ELECTRICS

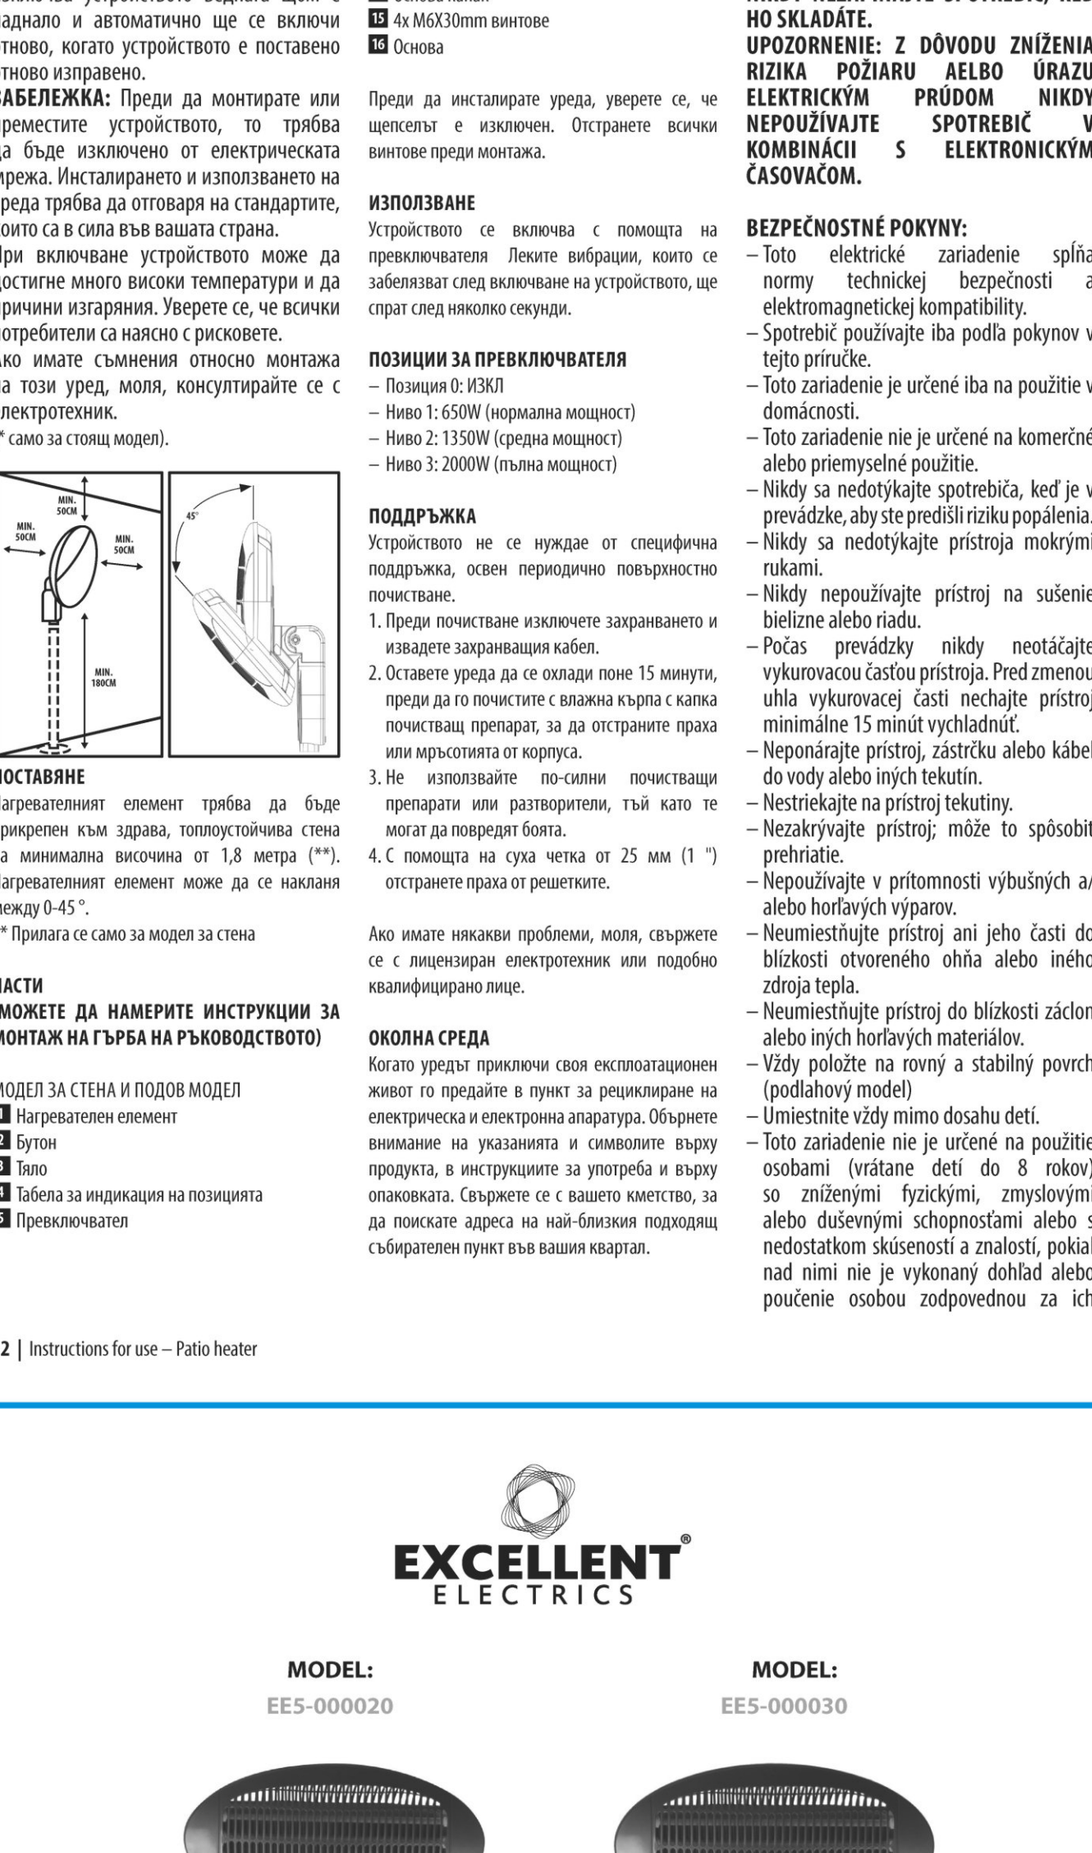

SELF IMPORT AGENCIES • P.O. BOX 37211 • 1030 AE AMSTERDAM • THE NETHERLANDS   www.servicetoconsumer.com

210x290mm(20210403/YS2104030947)